



Bajaj Auto Limited
Akurdi Pune 411 035 India
Tel +91 20 27472851
Fax +91 20 27407385
www.bajajauto.com

Spare Parts Catalogue



Notice

All information contained in this manual is based on the latest product information at the time of publication. Bajaj Auto Limited accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice. The right is reserved to make such changes at any time without prior notice and without incurring an obligation to make such changes to product manufactured previously. Contact your authorized Bajaj Dealer for the latest information on product improvements incorporated after this manual was issued.

DOC. NO.: 71111474

REV. 00, JUNE 12

Copy rights : All rights reserved. No part of this publicatin may be reproduced, stored in a retrival system, Or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Bajaj Auto LTD.

Foreword



We have pleasure in presenting the Spare Parts Catalogue for 'Pulsar 200 NS' Motorcycle. This catalogue has been specially designed to assist you in selecting the correct parts for procurement to maintain 100% availability.

The Bajaj spares are subjected to the stringent quality control standards to ensure longer life of the vehicle. It is therefore necessary that only the Genuine Bajaj Spares are used.

In a continual effort to improve Performance and Efficiency of the vehicles, Specifications, Diagrams, Illustrations and Part Numbers can change without notice. Consequently, the description in this Spare Parts Catalogue cannot therefore be final and binding on us.

The modifications / alterations which are carried out after the issue of this catalogue, will be conveyed to you through our Service Circulars. You are requested to make necessary corrections in the Parts Catalogue as per the circulars so as to keep your catalogue up-to-date. This will ensure the appropriate and speedy delivery of the Spare Parts as the order placed will bear the latest part numbers.

In case, if you need any technical assistance contact the concerned Regional Office or write to us on the following address :

Bajaj Auto Limited

Service Department

Akurdi, Pune 411 035 India

Phone : 020-27406557

Fax : 020-27407385

Instructions



- 1. How to Read the Catalogue :** Open the catalogue and from the pictorial index locate the group in which the part you want to find is present. Turn over to the concerned page number (as given by pictorial index). Now find out the figure of the part you wish to order. Write down the part number against that particular figure number from the text.

In case, if you have the part number and you need the other details, the part index can be used. The part index (at the end of the catalogue) will give you the figure and page number of the part you wish to order.

- 2. How to Order Spare Parts :** The part number and the description of the part required should be invariably mentioned in the order as per the catalogue text.

The latest part number as conveyed through our service circulars should only appear on the order. In case of ordering painted components, colour shade of the components should be mentioned.

The quantity shown against the part number is the quantity per vehicle for that group so that particular quantity should be multiplied by the number of sets required.

- 3. Part Number System :** We have used 8 digit system for part numbers. The model or hardware item is indicated by first two digits or alphanumeric, the next two or four digits indicate main group and the last four or two digits indicate serial number in main group or serial number or subgroup of fastener respectively. Thus the part numbers will be indicated by 2-2-4 or 2-4-2 digit system. Understanding this system will enable you to identify the spare parts easily.

- 4. Abbreviations :** The following abbreviations are used in this catalogue.

Assly	Assembly	V	Volts
N.I.	Not illustrated	W	Watts
C'case	Crankcase	Accl.	Accelerator
Cyl	Cylinder	Comp.	Complete
O/s	Over size	Fr.	Front
Rr.	Rear	Std.	Standard
L	Length	A/t.	Alternate
R.H.	Right hand	L.H.	Left hand
Hex.	Hexagonal	AR	As required

Index



Plate No.	Description	Page No.
1	Cover Cylinder Head	2
2	Cylinder Head	4
3	Valve	6
4	Camshaft / Tensioner	8
5	Cylinder and Piston	10
6	Crankshaft	12
7	Transmission	14
8	Change Drum / Shift Fork	16
9	Gear Change Mechanism	18
10	Engine Assly / Crankcase RH	20
11	Crankcase LH	22
12	Balancer Idler Gear / Water Pump	24
13	Oil Pump	26
14	Radiator	28
15	Cover Clutch	30
16	Cover Magneto	32
17	Clutch Assly	34
18	Carburettor	36
19	Air Cleaner Complete	38
20	Silencer Assly	40
21	Starter Assly	42
22	Magneto, C.D.I. & H.T. Coil	44
23	Seat Assly / Seat Lock	46
24	Engine Mountings	48
25	Frame and Frame Fitting	50
26	Swing Arm / Rear Shock Absorber	52
27	Pillion Foot Rest / Holder	54
28	Mudguard- Front & Rear	56
29	Stand Assembly	58
30	Tyre/ Tube / Rim	60

Index



Plate No.	Description	Page No.
31	Front Hub	62
32	Front Master Cylinder	64
33	Front Disc Brake	66
34	Rear Hub	68
35	Rear Disc Brake System	70
36	Rear Brake Pedal	72
37	Handle Bar Assly	74
38	Front Fork	76, 78
39	Painted Parts & Decals	80, 82
40	Radiator Cover	84
41	Petrol Tank, Cap Tank & Gauge Fuel	86
42	Fittings - Petrol Tank, Side Cover & Cover Seat	88
43	Meter Assly.	90
44	Control Cables	92
45	Chain Case	94
46	Head Lamp & Fairing	96
47	Indicator Light Assly.	98
48	Tail Lamp Assly. / Front No. Plate	100
49	Electrical Equipments	102
50	Tool Kit	104
51	Accessories / Grab Handle	106
	Kits List For Pulsar 135 LS	107, 108
		109
	Amendment Sheet (Parts Added)	111
	Amendment Sheet (Parts Deleted)	112
	Part Index	

Pictorial Index



PLATE NO. : 1 COVER CYLINDER HEAD	PAGE NO. 1	PLATE NO. : 2 CYLINDER HEAD	PAGE NO. 3

PLATE NO. : 3 VALVE	PAGE NO. 5	PLATE NO. : 4 CAMSHAFT / TENSIONER	PAGE NO. 7

Pictorial Index



PLATE NO. : 5 CYLINDER & PISTON	PAGE NO. 9	PLATE NO. : 6 CRANKSHAFT	PAGE NO. 11

PLATE NO. : 7 TRANSMISSION	PAGE NO. 13	PLATE NO. : 8 CHANGE DRUM / SHIFT FORK	PAGE NO. 15

Pictorial Index



PLATE NO. : 9
GEAR CHANGE MECHANISM

PAGE NO.
17



PLATE NO. : 10
ENGINE ASSLY & CRANKCASE RH

PAGE NO.
19

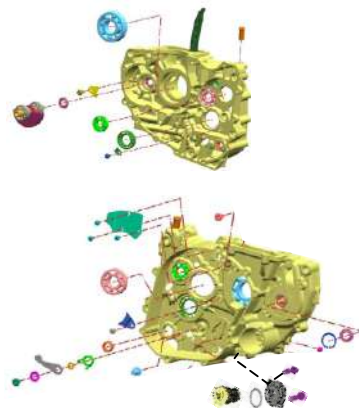


PLATE NO. : 11
CRANKCASE LH

PAGE NO.
21

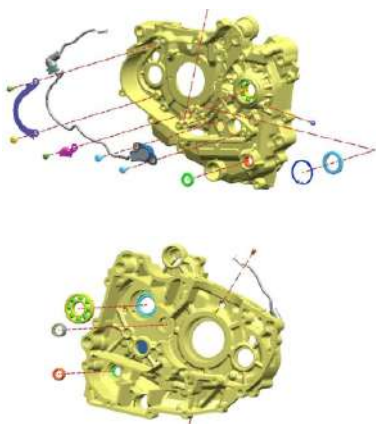


PLATE NO. : 12
BALANCER IDLER GEAR/WATER PUMP

PAGE NO.
23



Pictorial Index



PLATE NO. : 13
OIL PUMP

PAGE NO.
25

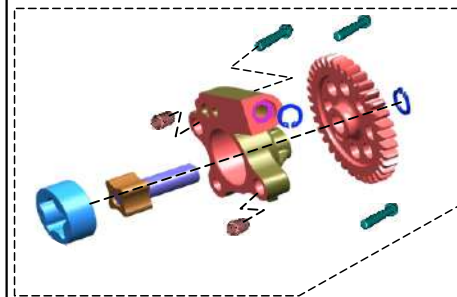


PLATE NO. : 14
RADIATOR

PAGE NO.
27



PLATE NO. : 15
COVER CLUTCH

PAGE NO.
29


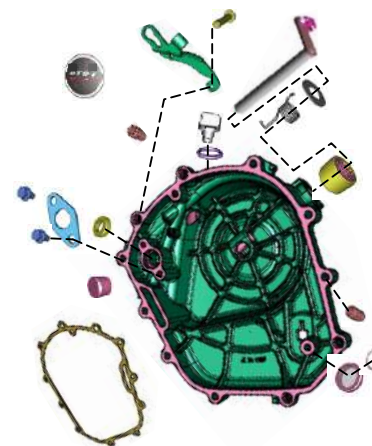


PLATE NO. : 16
COVER MAGNETO

PAGE NO.
31

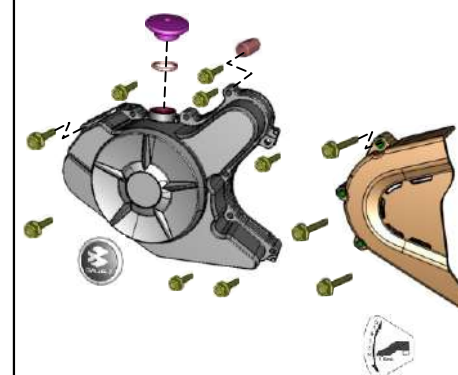

Pictorial Index



PLATE NO. : 17
CLUTCH ASSEMBLY

PAGE NO.
33

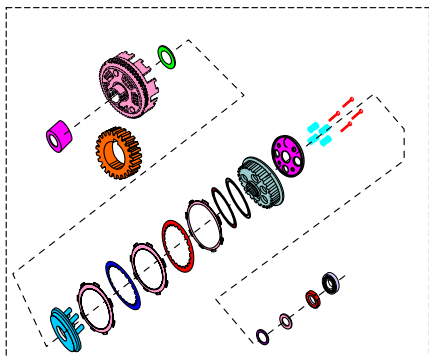


PLATE NO. : 18
CARBURETTOR

PAGE NO.
35

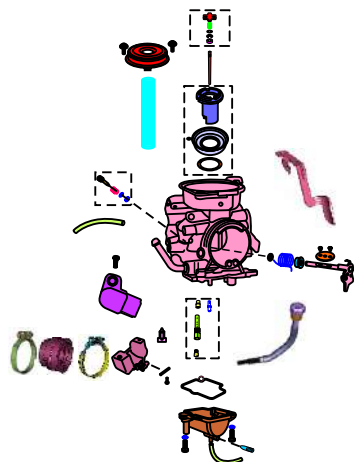


PLATE NO. : 19
AIR CLEANER COMPLETE

PAGE NO.
37

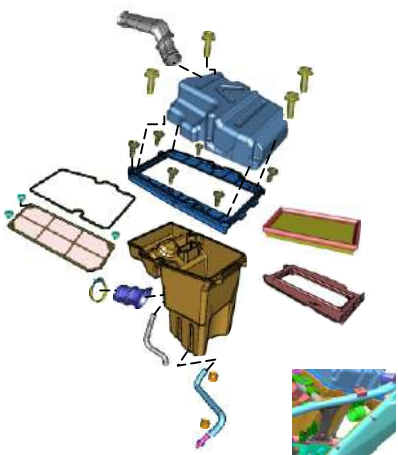


PLATE NO. : 20
SILENCER ASSEMBLY

PAGE NO.
39



Pictorial Index



PLATE NO. : 21
STARTER ASSEMBLY

PAGE NO.
41

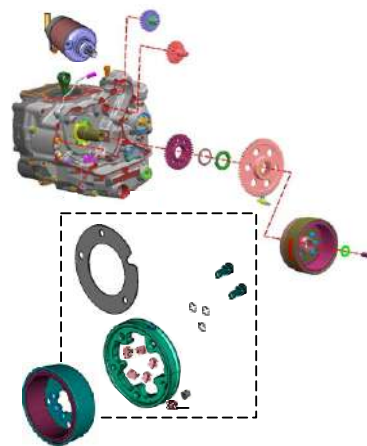


PLATE NO. : 22
MAGNETO, CDI & H.T. COIL

PAGE NO.
43

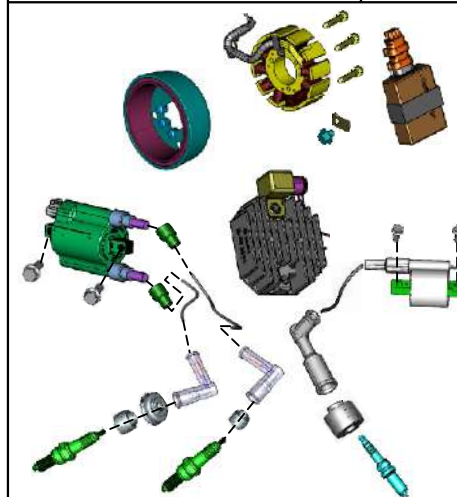


PLATE NO. : 23
SEAT ASSEMBLY / SEAT LOCK

PAGE NO.
45


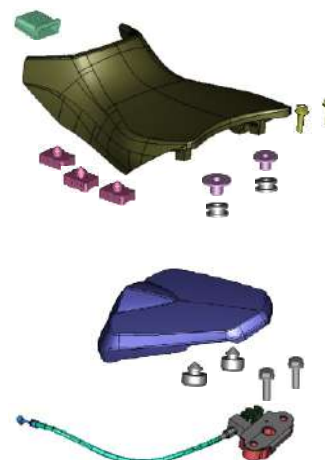


PLATE NO. : 24
ENGINE MOUNTINGS

PAGE NO.
47

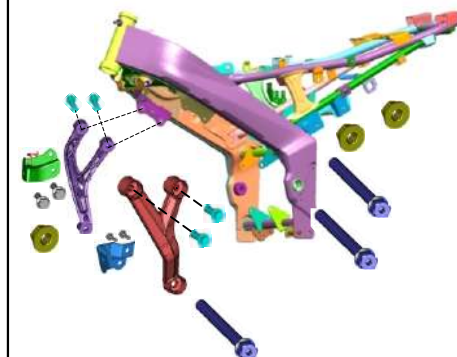

Pictorial Index



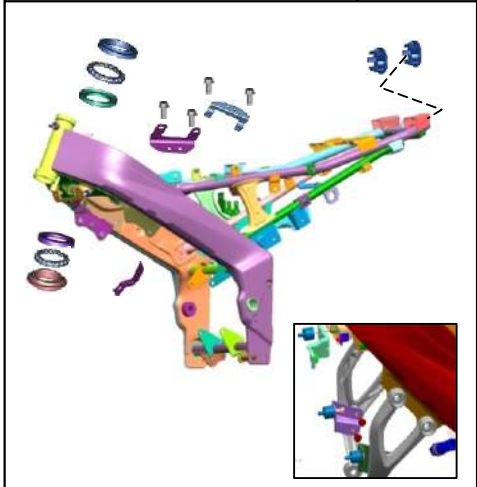
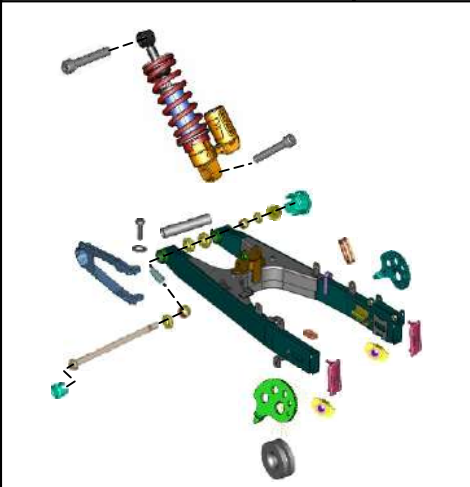
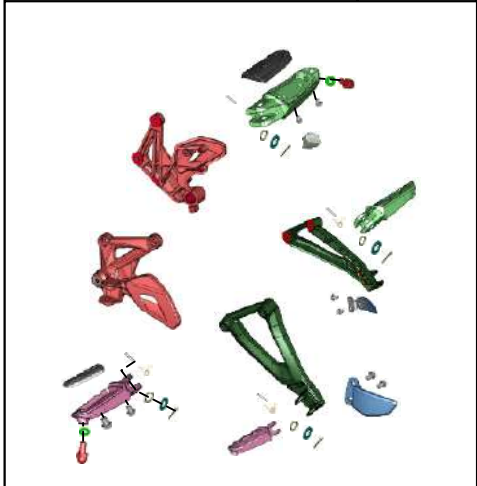
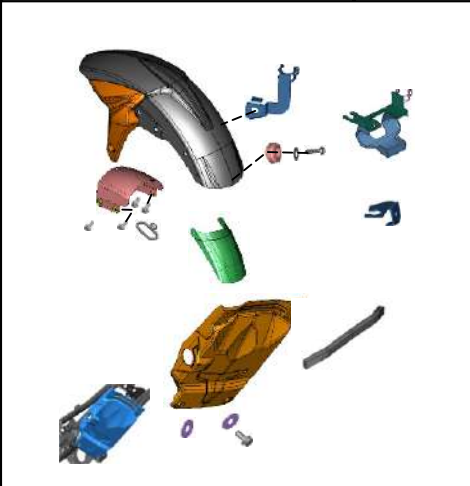
PLATE NO. : 25 FRAME & FITTINGS	PAGE NO. 49	PLATE NO. : 26 SWING ARM/REAR SHOCK ABSORBER	PAGE NO. 51
			

PLATE NO. : 27 PILLION FOOT REST / HOLDER	PAGE NO. 53	PLATE NO. : 28 MUD GUARD - FRONT & REAR	PAGE NO. 55
			

Pictorial Index



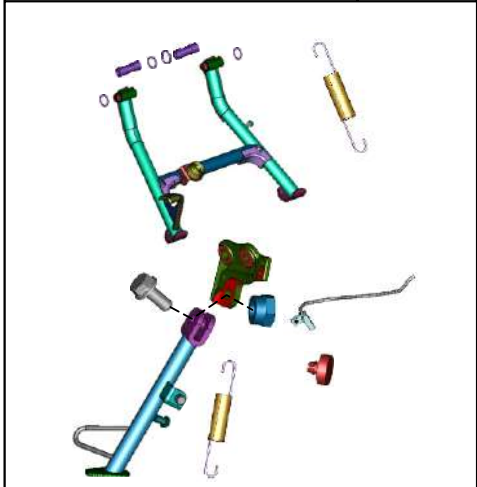
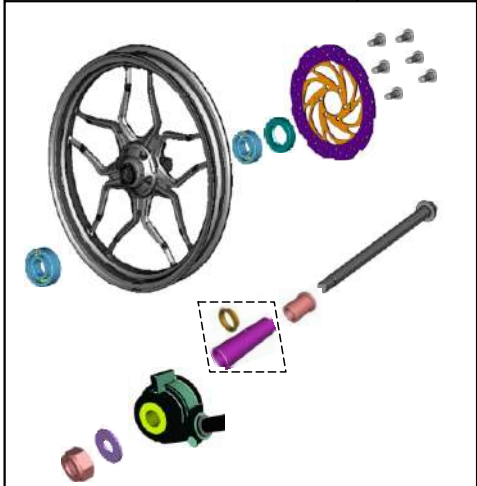
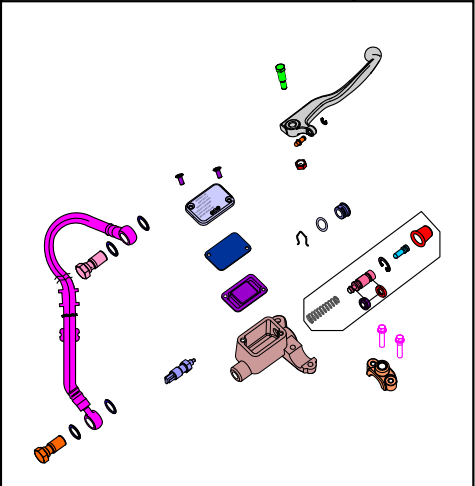
PLATE NO. : 29 STAND ASSEMBLY	PAGE NO. 57	PLATE NO. : 30 TUBE / TYRE / RIM	PAGE NO. 59
			

PLATE NO. : 31 FRONT HUB	PAGE NO. 61	PLATE NO. : 32 FRONT MASTER CYLINDER	PAGE NO. 63
			

Pictorial Index



PLATE NO. : 33 FRONT DISC BRAKE	PAGE NO. 65

PLATE NO. : 34 REAR HUB	PAGE NO. 67

PLATE NO. : 35 REAR DISC BRAKE SYSTEM	PAGE NO. 69

PLATE NO. : 36 REAR BRAKE PEDAL	PAGE NO. 71

Pictorial Index



PLATE NO. : 37 HANDLE BAR ASSEMBLY	PAGE NO. 73

PLATE NO. : 38 FRONT FORK	PAGE NO. 75, 77

PLATE NO. : 39 PAINTED PARTS & DECALS	PAGE NO. 79, 81

PLATE NO. : 40 RADIATOR COVERS	PAGE NO. 83

Pictorial Index



PLATE NO. : 41
PETROL TANK, CAP TANK &
GAUGE FUEL

PAGE NO.
85



PLATE NO. : 42
FITTING PETROL TANK COVER,
SIDE COVERS & SEAT COVER

PAGE NO.
87

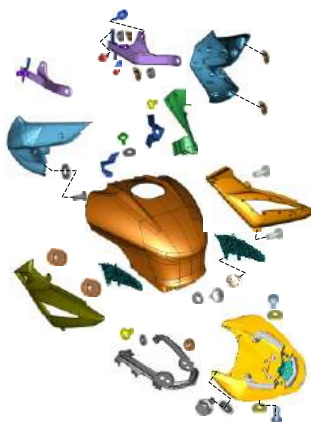



PLATE NO. : 43
METER ASSEMBLY

PAGE NO.
89



PLATE NO. : 44
CONTROL CABLES

PAGE NO.
91

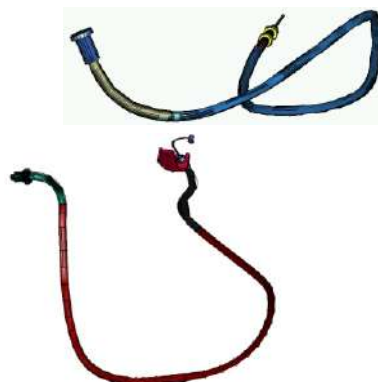

Pictorial Index



PLATE NO. : 45
CHAIN CASE

PAGE NO.
93



PLATE NO. : 46
HEAD LAMP & FAIRING

PAGE NO.
96

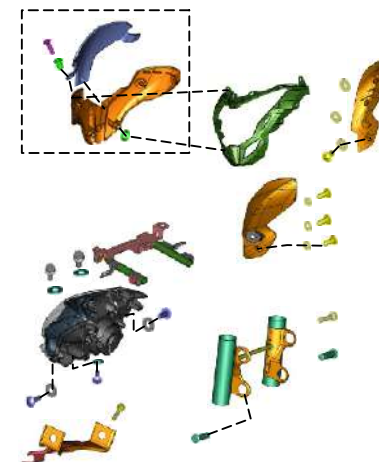


PLATE NO. : 47
INDICATOR LIGHT ASSEMBLY

PAGE NO.
97

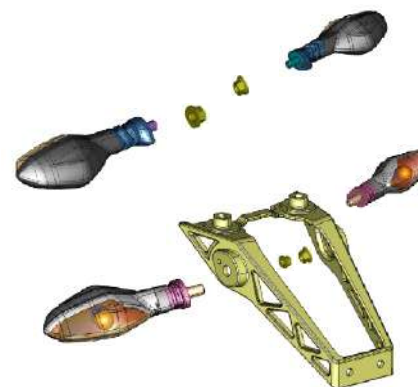





PLATE NO. : 48
TAIL STOP ASSEMBLY / FRONT
NUMBER PLATE

PAGE NO.
99



Pictorial Index




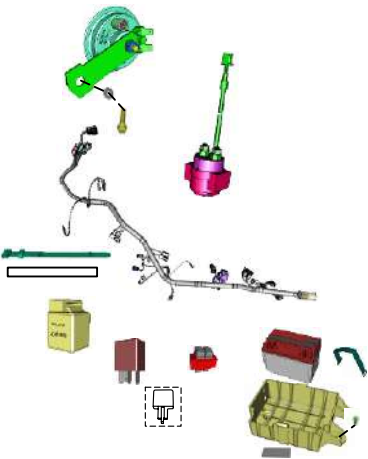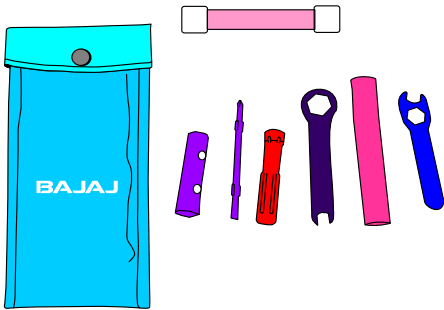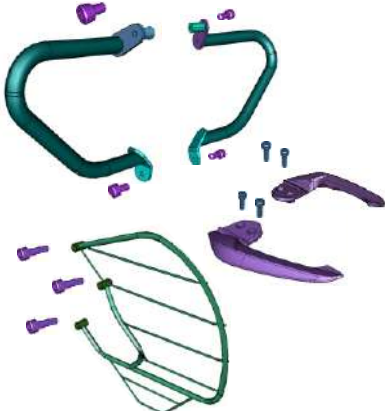PLATE NO. : 49 ELECTRICAL EQUIPMENTS	PAGE NO. 101
	
PLATE NO. : 50 TOOL KIT	PAGE NO. 103
	
PLATE NO. : 51 ACCESSORIES / GRAB HANDLE	PAGE NO. 105
	

Pictorial Index

[illegible]


Cover Cylinder Head

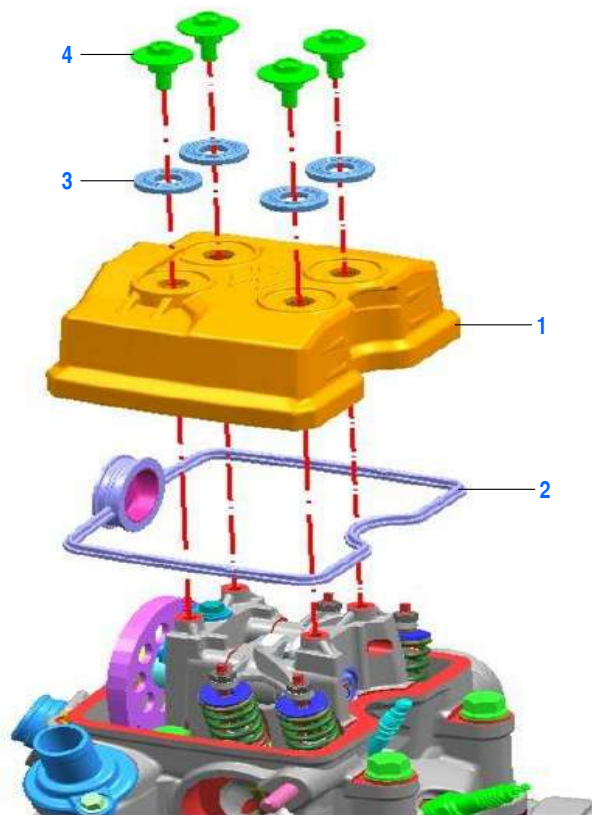

No.	Part No.	Description	Qty.	Remarks
1	JL 5110 02	Cover Cylinder Head	1	
2	JL 5110 01	Gasket Head Cover(Rubber)	1	
3	JG 5110 21	Washer	4	
4	JG 5110 22	Bolt Special	4	




Cylinder Head

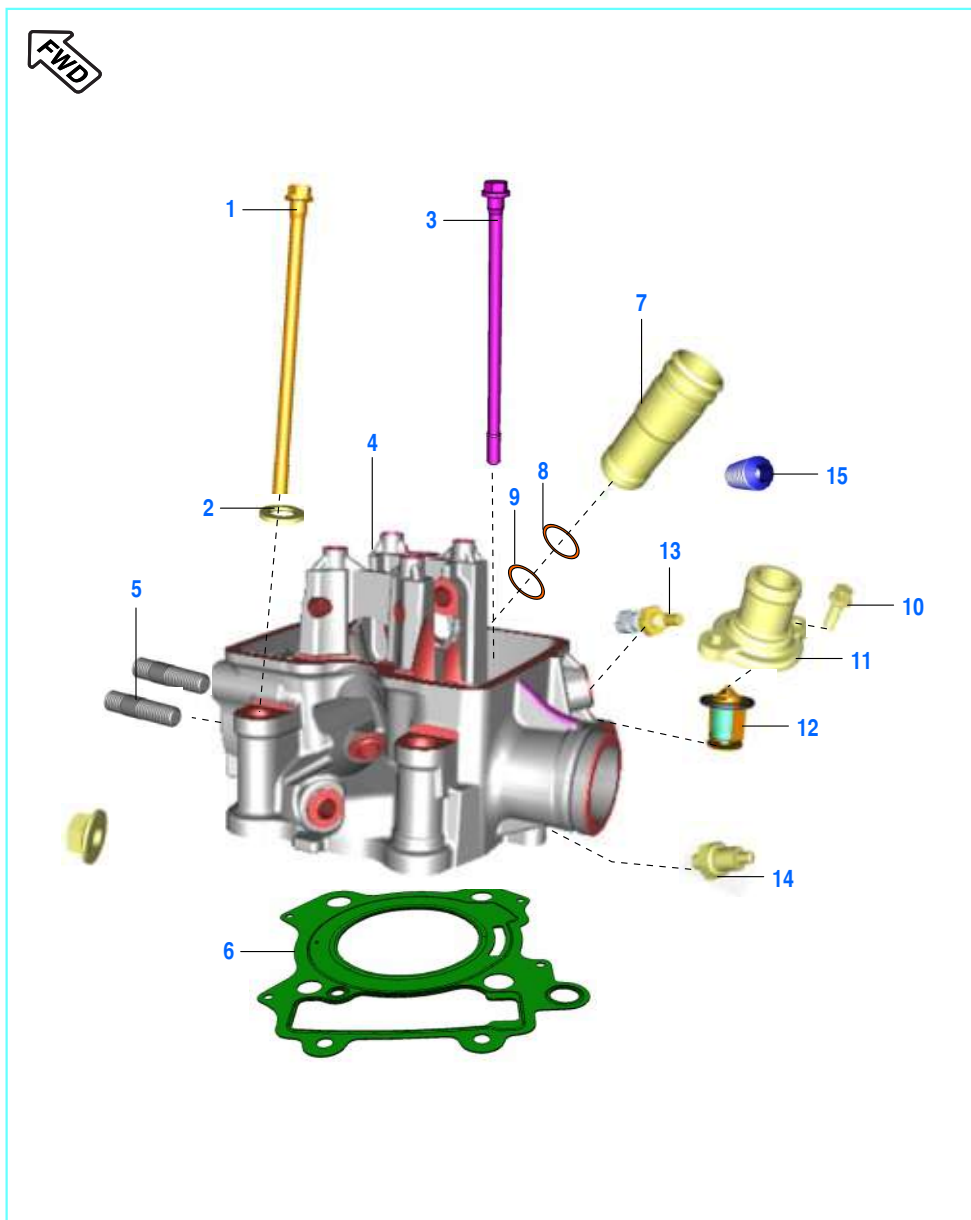


No.	Part No.	Description	Qty.	Remarks
1	JG 5410 68	Hex Flange Head Bolt M10	4	
2	LD A000 08	Washer 11.2*20*2T	4	
3	JL 5110 09	M6 Stud Bolt	2	
4	36 JL00 10	Cylinder Head	1	
5	JG 5110 46	Stud (M8*1.25)	2	
6	JL 5110 22	Gasket Cylinder Head	1	
7	JL 5112 19	Sleeve Spark Plug	1	
8	39 2629 21	'O' Ring Sleeve	1	Top side
9	39 1283 21	'O' Ring Sleeve	1	Bottom side
10	39 1673 04	Bolt - Flange :- M6	2	
11	JL 5110 29	Cover Thermostat	1	
12	BF 6012 07	Thermostat Assembly	1	
13	JG 3514 00	Coolant Water Temp Sensor	1	
14	DK 1012 25	Switch Oil Pressure	1	
15	39 2608 01	Grub Screw	1	

Valve

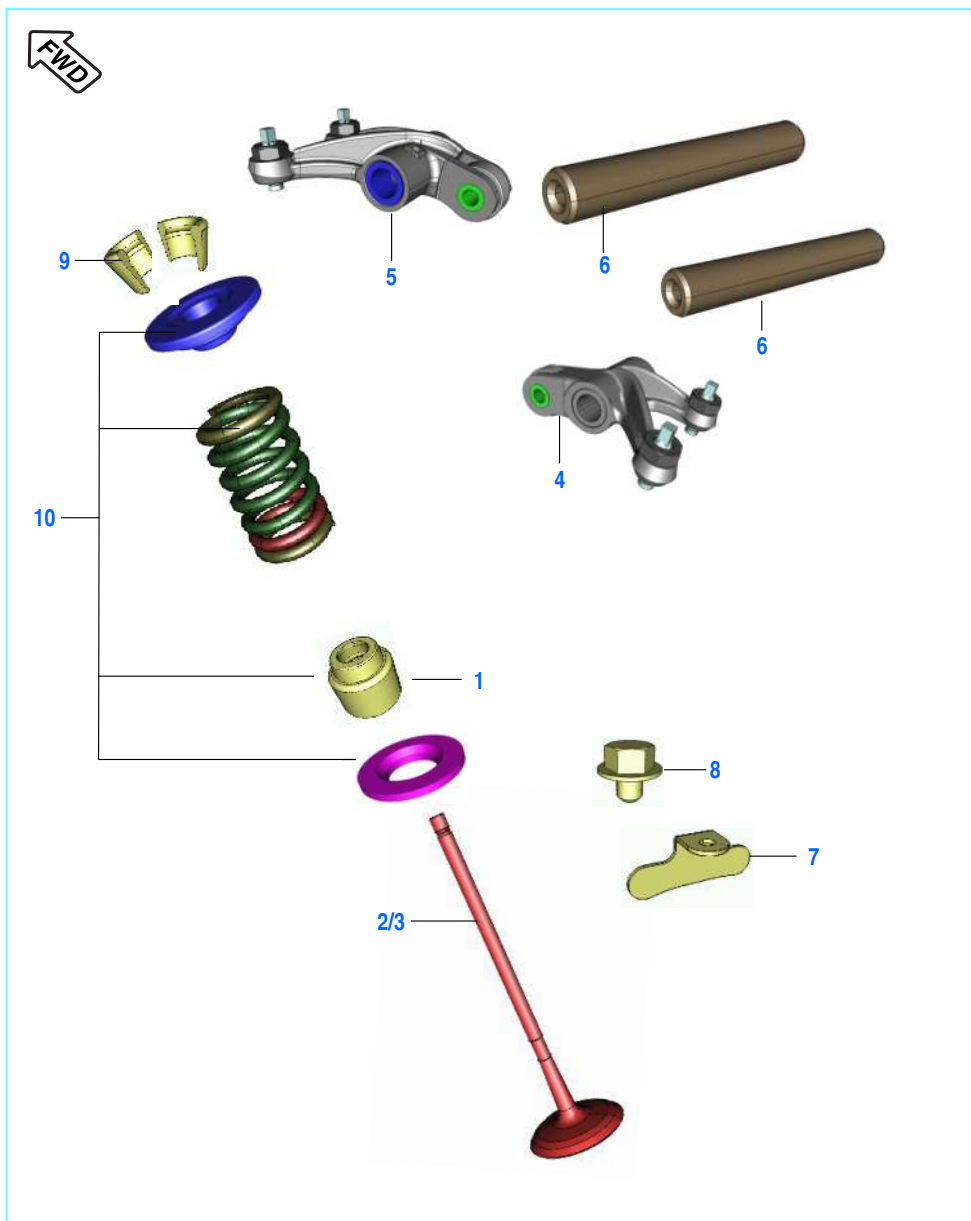


No.	Part No.	Description	Qty.	Remarks
1	39 2017 19	Seal - Oil	4	
2	JL 5110 10	Valve Intake	2	
3	JL 5110 11	Valve Exhaust	2	
4	JL 5110 06	Assembly Rocker Arm Intake	1	
5	JL 5110 07	Assembly Rocker Arm Exhaust	1	
6	JL 5112 05	Rocker Arm Shaft	1	
7	JF 5112 07	Plate Stopper Rocker Arm	1	
8	LA E000 16	Bolt Flanged M5X0.8X6L-Precoated	1	
9	DG 1010 29	Cotter Valve	8	
10	36 JL00 11	Valve Repair Kit	4	

Camshaft / Tensioner

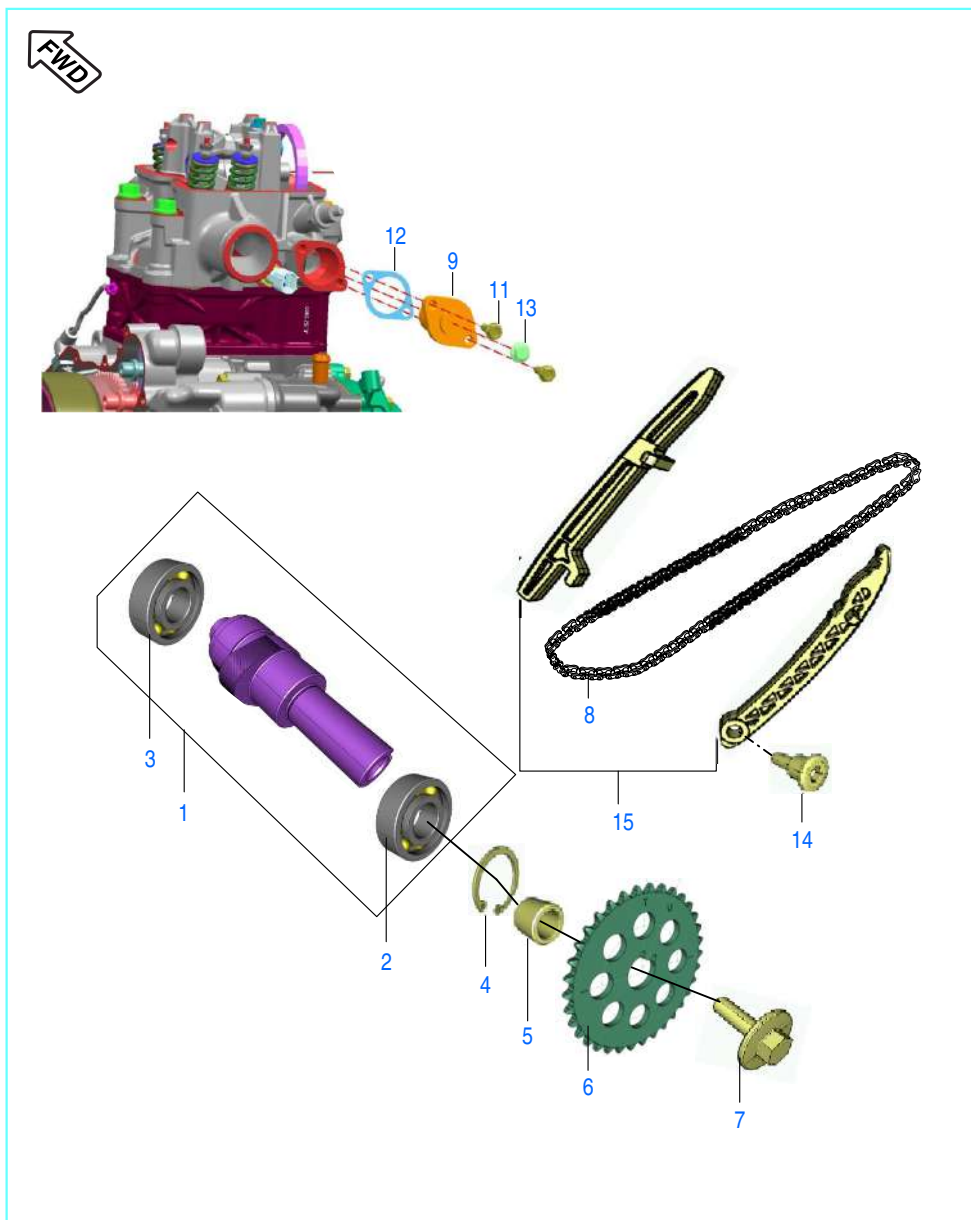


No.	Part No.	Description	Qty.	Remarks
1	JF 5112 28	Assembly Camshaft	1	
2	JG 5312 20	Bearing - Ball 6202/HN3	1	
3	AP 1012 36	Bearing - Ball :- 12 X 28 X 8	1	
4	LE B000 01	Circlip - Internal	1	
5	JL 5112 21	Spacer Camshaft	1	
6	JL 5112 20	Sprocket Camshaft	1	
7	DU 1012 25	Bolt Special Flanged (Camshaft)	1	
8	JL 5112 22	Timing Chain	1	
9	JC 1010 34	Tensioner Assembly	1	
10	39 2669 21	Ring - O (Tensioner Bolt)	1	N.I.
11	KA DQ06 20	Bolt Hexagonal	2	
12	CS 1011 28	Gasket	1	
13	JG 5112 70	Bolt Flanged M6X1X6L-Special	1	
14	DH 1013 92	Chain Guide Pivot Bolt	1	
15	36 JL00 01	Kit Cam Chain Guide	1	

Cylinder and Piston

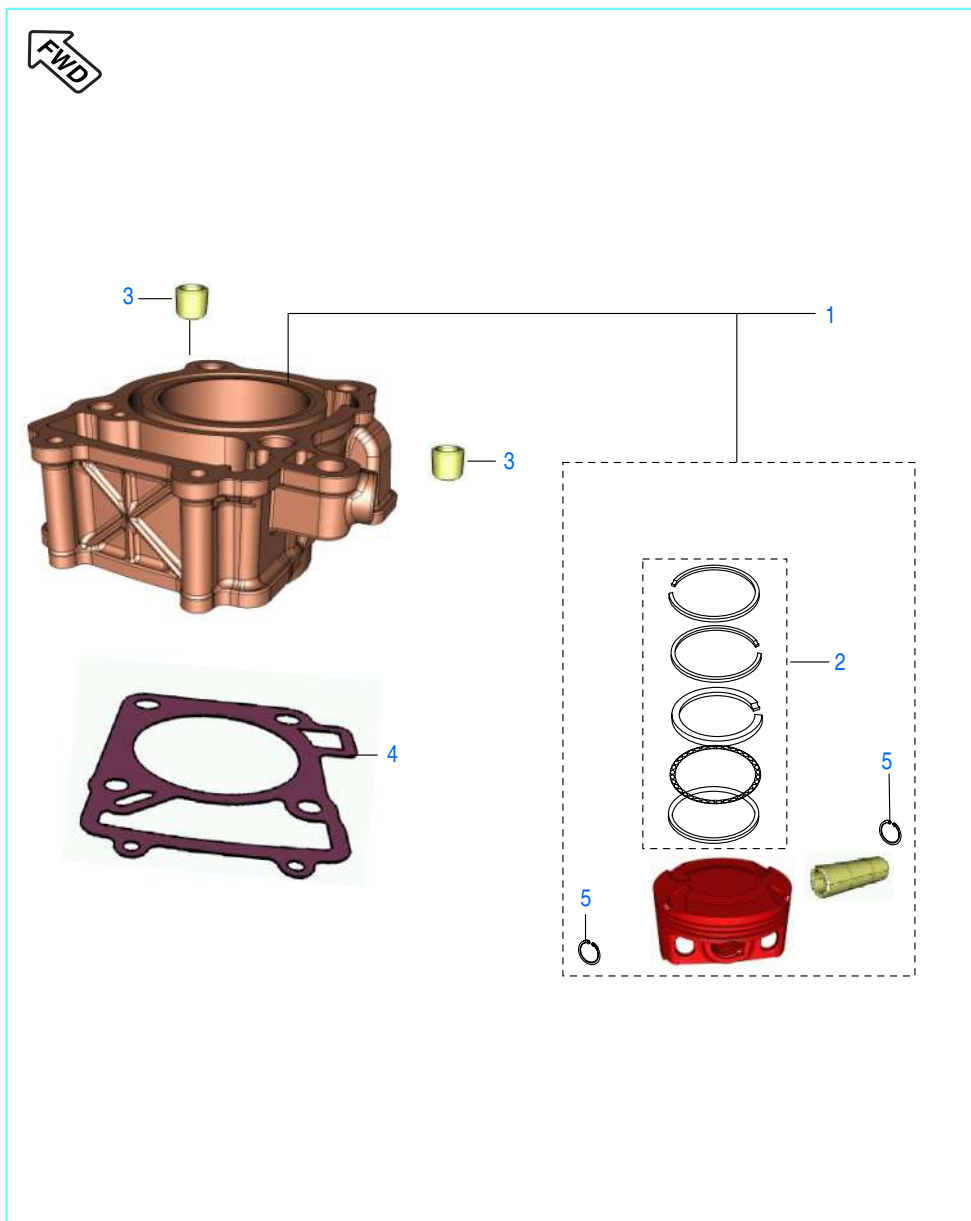


No.	Part No.	Description	Qty.	Remarks
1	36 JL00 07	Kit Asly Block Piston	1	
2	36 JU00 01	Kit Piston Ring	1	
3	39 2181 06	Pin - Hollow Dowel :- 14 X 20	2	
4	JL 5210 02	Gasket Cylinder Block	1	or
	JG 5210 08	Gasket Cylinder Block	1	
5	39 2132 17	Ring - Snap	2	

Crankshaft

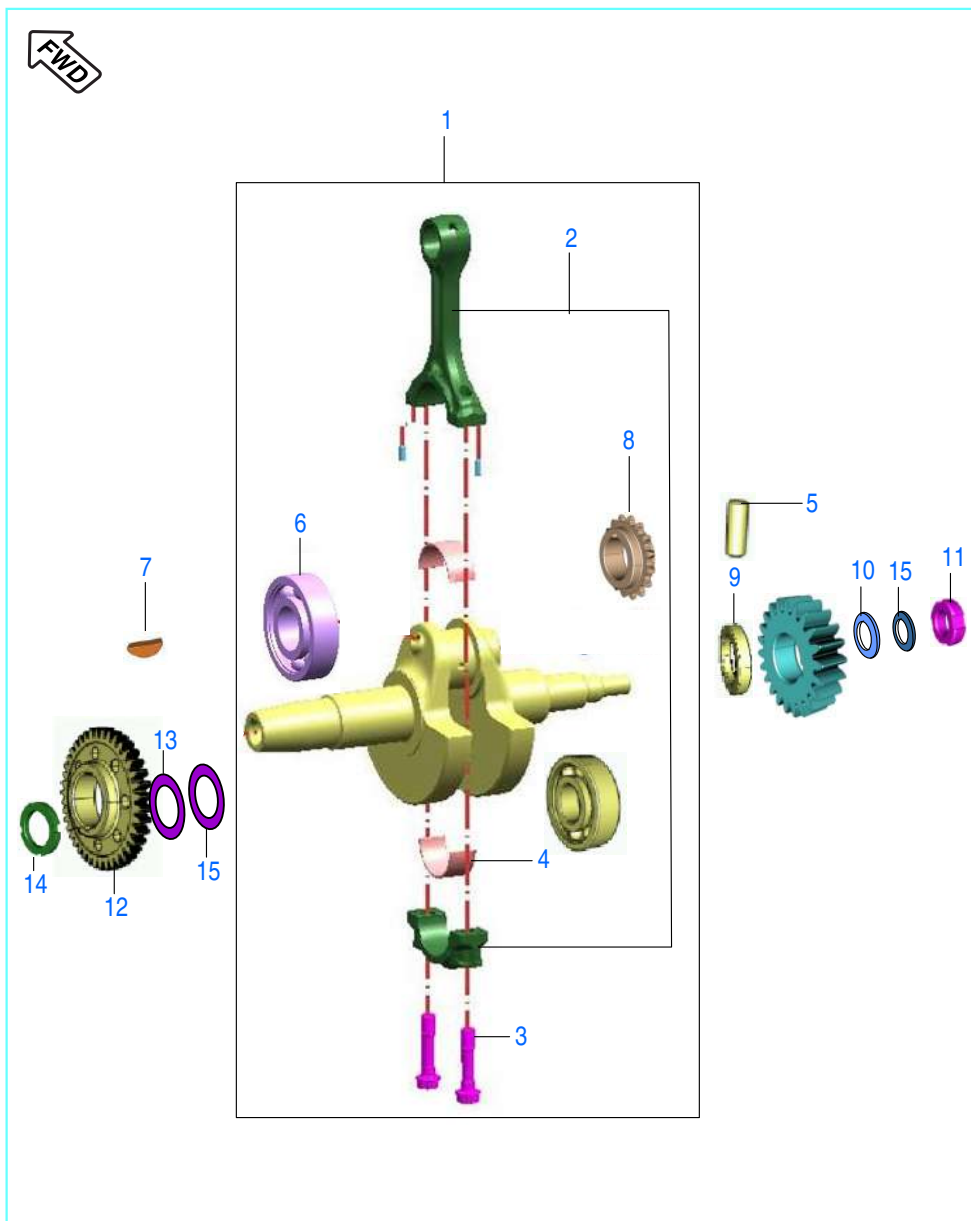


No.	Part No.	Description	Qty.	Remarks
1	JU 5310 27	Crankshaft Assembly Comp	1	
2	JF 5310 07	Conrod Assly Compl	1	
3	JF 5310 14	Bolt (Jf Con Rod)	2	
4	JU 5310 21	Bush Big End	2	
5	39 2203 07	Pin - Parallel	2	
6	39 1931 20	Bearing - Ball : 28 X 68 X 18	1	
7	31 1011 73	Key-Woodruff for Crankshaft Cl. Side	3	
8	JF 5112 25	Sprocket Crankshaft	1	
9	JG 5310 31	Spacer Crankshaft	1	
10	39 2200 11	Washer - Plain (Primary Drive Gear)	1	
11	LC D000 01	Nut Sprocket Drive Lock	1	
12	JG 5310 41	Balancer Drive Gear	1	
13	JG 5310 39	Beleville Washer	1	
14	JG 5310 40	Nut Balancer Drive Lock	1	
15	39 2165 11	Washer - Plain	2	

Transmission

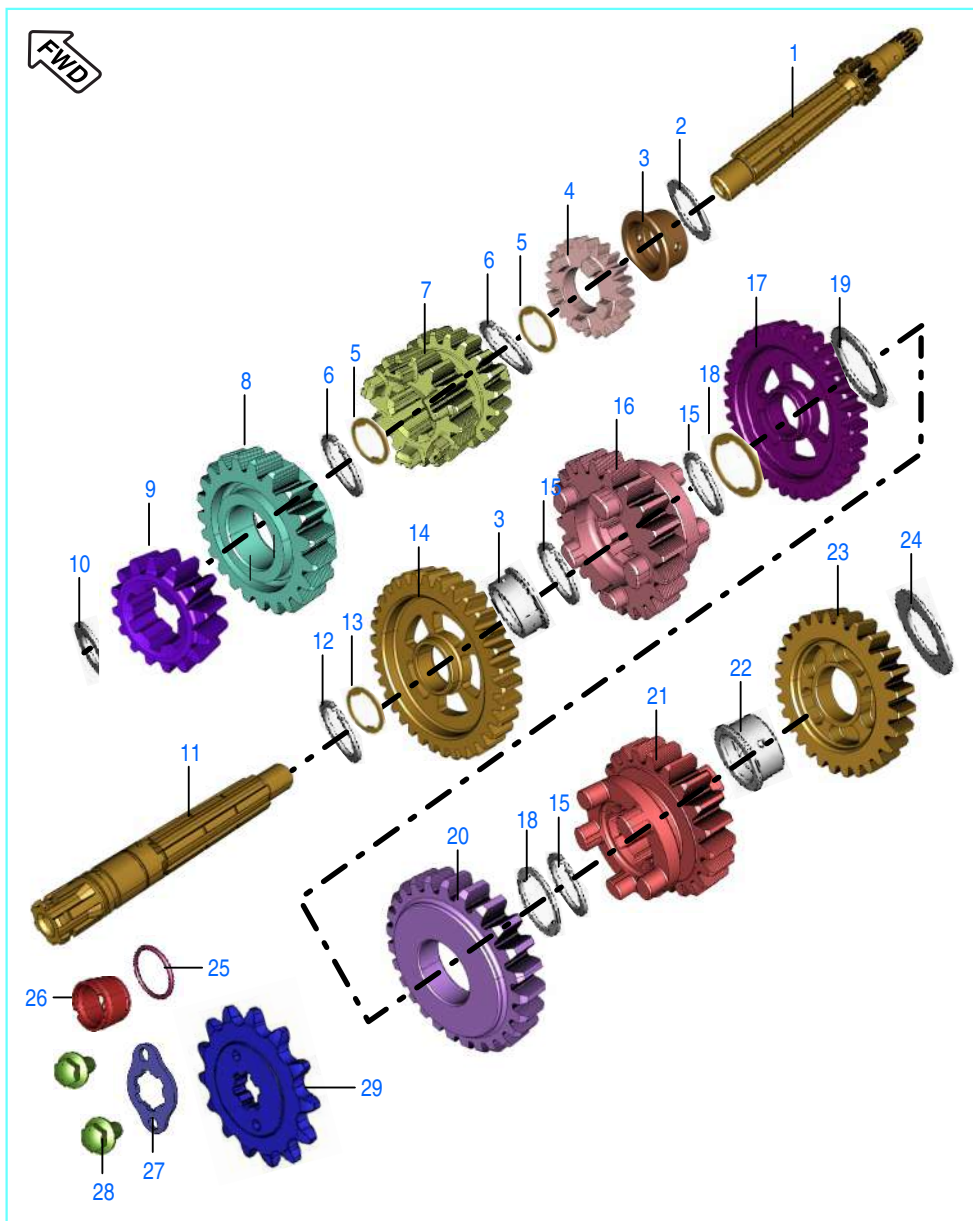


No.	Part No.	Description	Qty.	Remarks
1	JG 5510 27	Shaft Input T/M Comp	1	
2	39 2158 11	Washer - Plain	1	
3	JG 5510 13	Bush 6th Drive / Bush 2nd Driven	1	
4	JG 5512 13	Gear 6th Drive	1	
5	JG 5512 10	Washer Splined	2	
6	BF 5510 37	Ring - Snap	2	
7	JG 5512 14	Gear Drive Multiple 3&4	1	
8	JG 5512 20	Gear 5th Drive	1	
9	JG 5512 27	Gear 2nd Drive	1	
10	JG 5510 22	Washer - Plain	1	
11	JG 5510 25	Output Shaft Assy With Plug	1	
12	DH 1012 35	Circlip	1	
13	39 2166 11	Washer Special	1	
14	JG 5512 28	Gear 2nd Driven	1	
15	BF 5510 37	Ring - Snap	3	
16	JG 5512 22	Gear 5th Driven	1	
17	JG 5512 23	Gear 3rd Driven	1	
18	JG 5510 22	Spline Thrust Washer	2	
19	JG 5510 21	Lock Washer Splined Thrust	1	
20	JG 5512 15	Gear 4th Driven	1	
21	JG 5512 24	Gear 6th Driven	1	
22	JG 5510 00	Bush 1st Driven	1	
23	JG 5512 25	Gear 1st Driven	1	
24	JG 5510 21	Washer - Plain	1	
25	DK 1013 52	O-Ring Sprocket Collar(17.5*1.5)	1	
26	JG 5510 10	Collar Sprocket	1	
27	JG 5510 19	Plate Drive Sprocket	1	
28	LA E000 17	Bolt Flanged M6X1X10L-Precoated	2	
29	DV 1010 48	Sprocket Output (14T)	1	

Change Drum / Shift Fork

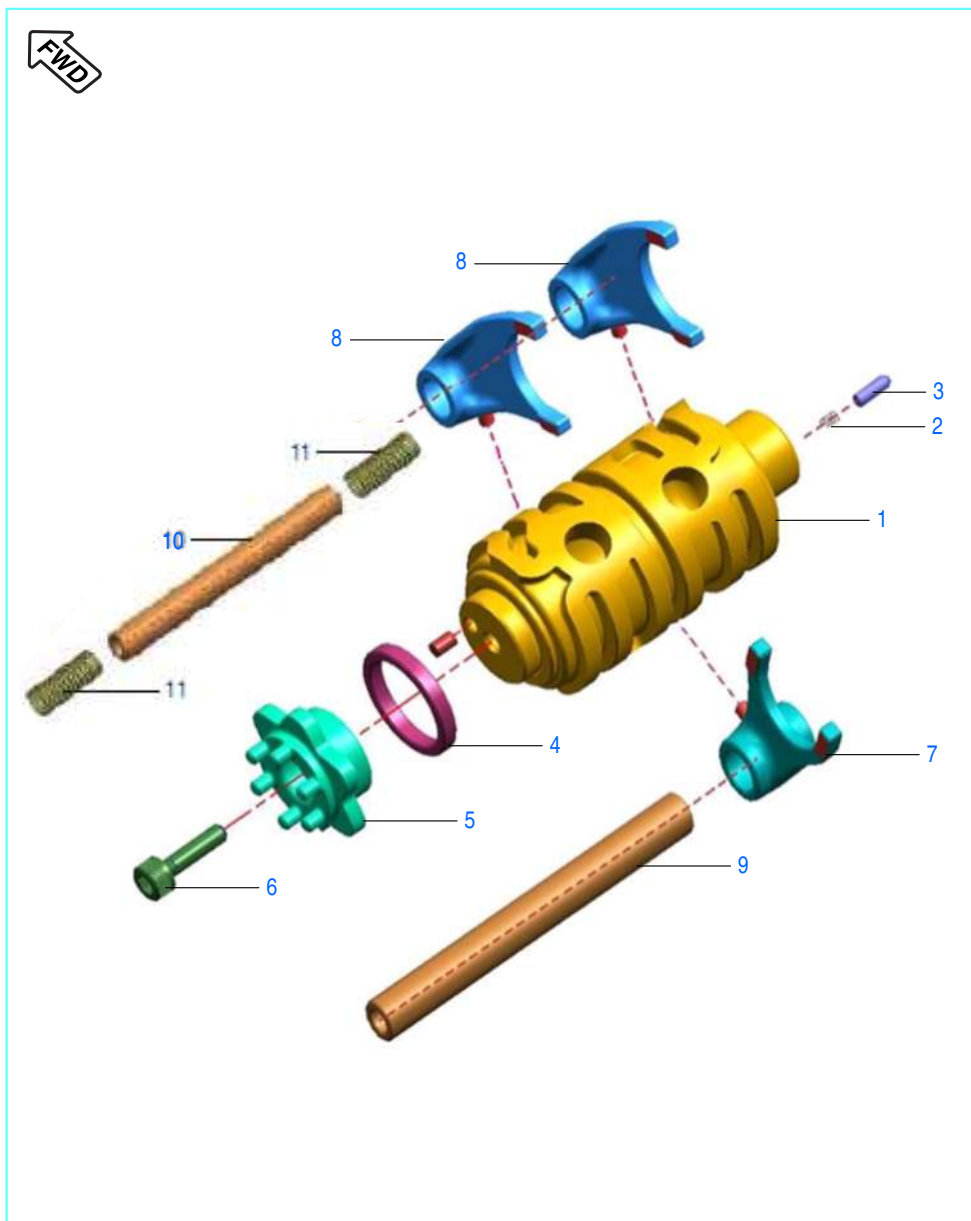


No.	Part No.	Description	Qty.	Remarks
1	JG 5610 11	Drum Complete Gear Shift	1	
2	EC 5610 23	Spring Gear Switch Indicator	1	
3	39 2606 07	Pin - Parallel	1	
4	JG 5610 10	Spacer-Guide Gear Shift	1	
5	JG 5612 22	Guide Gear Shift	1	
6	LA C000 24	Bolt Socket Head M6X1X20L	1	
7	JG 5610 12	Fork Gear Shift Input	1	
8	JG 5610 13	Fork Gear Shift Output	2	
9	JG 5610 16	Shaft Gear Shift Fork	2	
10	JG 5612 25	Shaft Gear Shift Fork Output	1	
11	JG 5612 15	Compression Spring	2	

Gear Change Mechanism

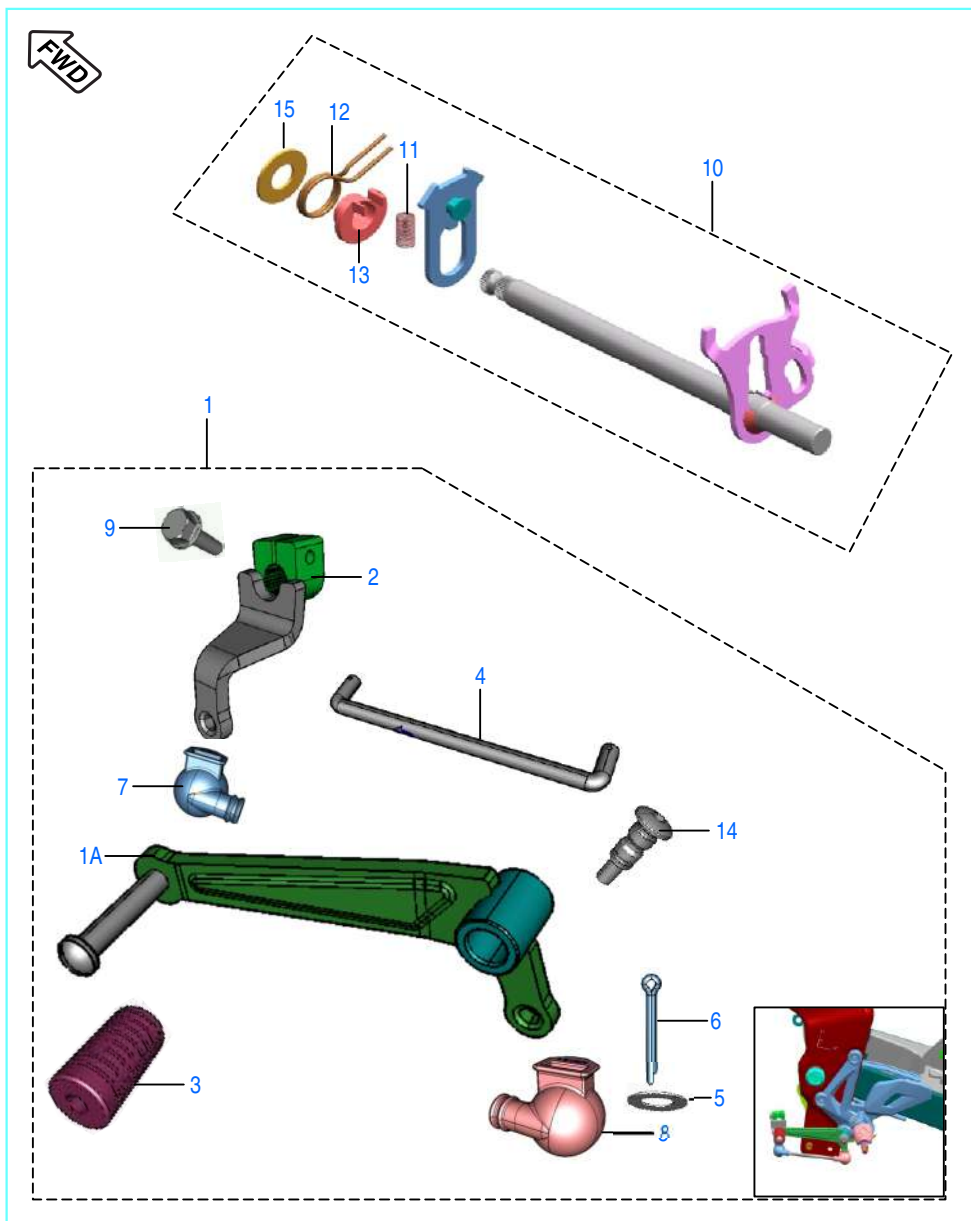


No.	Part No.	Description	Qty.	Remarks
1	JL 5614 00	Assembly Lever Complete Change	1	
1A	JL 5614 01	Lever Complete Change	1	
2	JL 5614 04	Assembly Lever Change Arm	1	
3	DH 1015 09	Damper	1	
4	JL 5614 05	Rod Tie	1	
5	JD 5614 16	Washer - Nylon (Dia6.5Xd15X2.0)	2	
6	39 0808 08	Pin - Split	2	
7	JL 5614 07	Boot -Change Arm	1	
8	JL 5614 08	Boot -Change Lever	1	
9	39 1902 04	Bolt - Flange :- M6	1	
10	JG 5612 00	Lever Gear Shift Assy Comp.	1	
11	JG 5612 15	Compression Spring	1	
12	JG 5612 18	Torsion Spring	1	
13	JG 5612 17	Bush-Torsion Spring	1	
14	JL 5614 09	Bolt Gear Change Lever	1	
15	JL 5614 10	Washer - Steel	1	

Engine Assembly / Crankcase RH

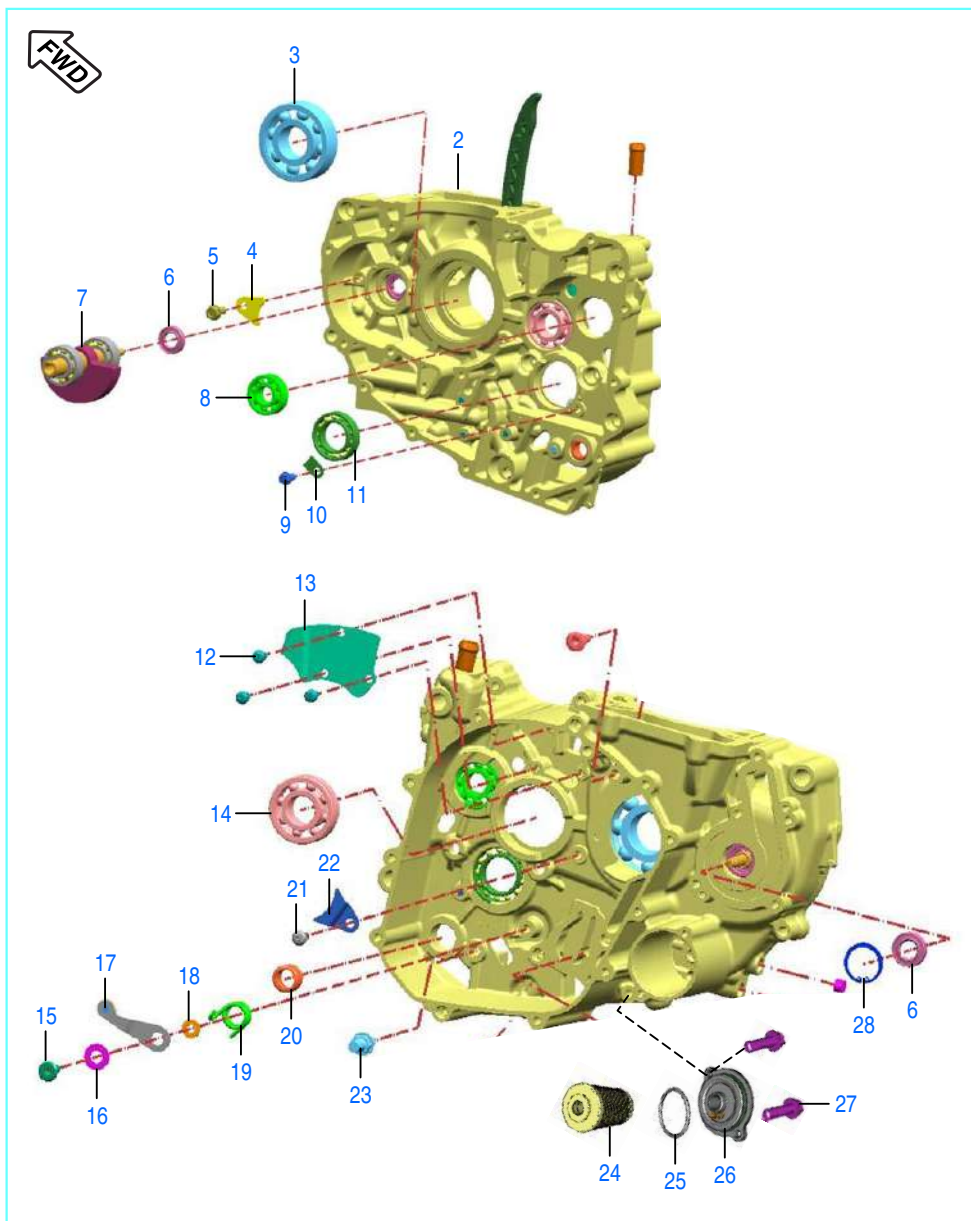


No.	Part No.	Description	Qty.	Remarks
1	JL 5010 03	Assembly Engine 200	1	N.I.
2	36 JL00 04	Kit Asly Crankcase RH	1	
3	39 1931 20	Ball Bearing 28 X 68 X 18	1	
5	LA D000 77	Bolt Flanged M6x16	1	
4	JG 5410 46	Balancer Bearing Stopper	1	
6	JG 6010 07	Special Shaft Seal Ring (oil)	2	
7	JU 5312 13	Balancer Assly.	1	
8	39 2602 20	Bearing - Ball 6202/HN3	1	
9	DH 1013 83	Precoated Flanged Bolt M6	1	
10	JG 5410 59	Plate Stopper Bearing Drum	1	
11	39 2601 20	Bearing - Ball :- 61905 (25 X 42 X 9)	1	
12	LB B000 06	Screw Pan head	3	
13	JU 5410 05	Breather Plate	1	
14	59 2000 28	Bearing Ball RH	1	
15	JG 5612 04	Bolt Drum Stopper	1	
16	JG 5612 05	Washer	1	
17	JG 5610 09	Stopper Drum Complete	1	
18	39 2005 11	Washer	1	
19	JG 5612 26	Spring	1	
20	39 2562 20	Bearing - Needle Roller :- 13X19X12	1	
21	39 0746 01	Screw Pan Cross - M6	1	
22	JG 5410 45	Input Shaft Bearing Stopper	1	
23	DP 1011 91	Bolt Shifter	1	
24	JG 5710 14	Oil Filter	1	
25	JG 5710 16	O-Ring	1	
26	JL 5412 21	Cap Oil Filter	1	
27	KA DP05 16	Hexagonal Flange Bolt	2	
28	LE B000 01	Circlip Internal	1	

Crankcase LH

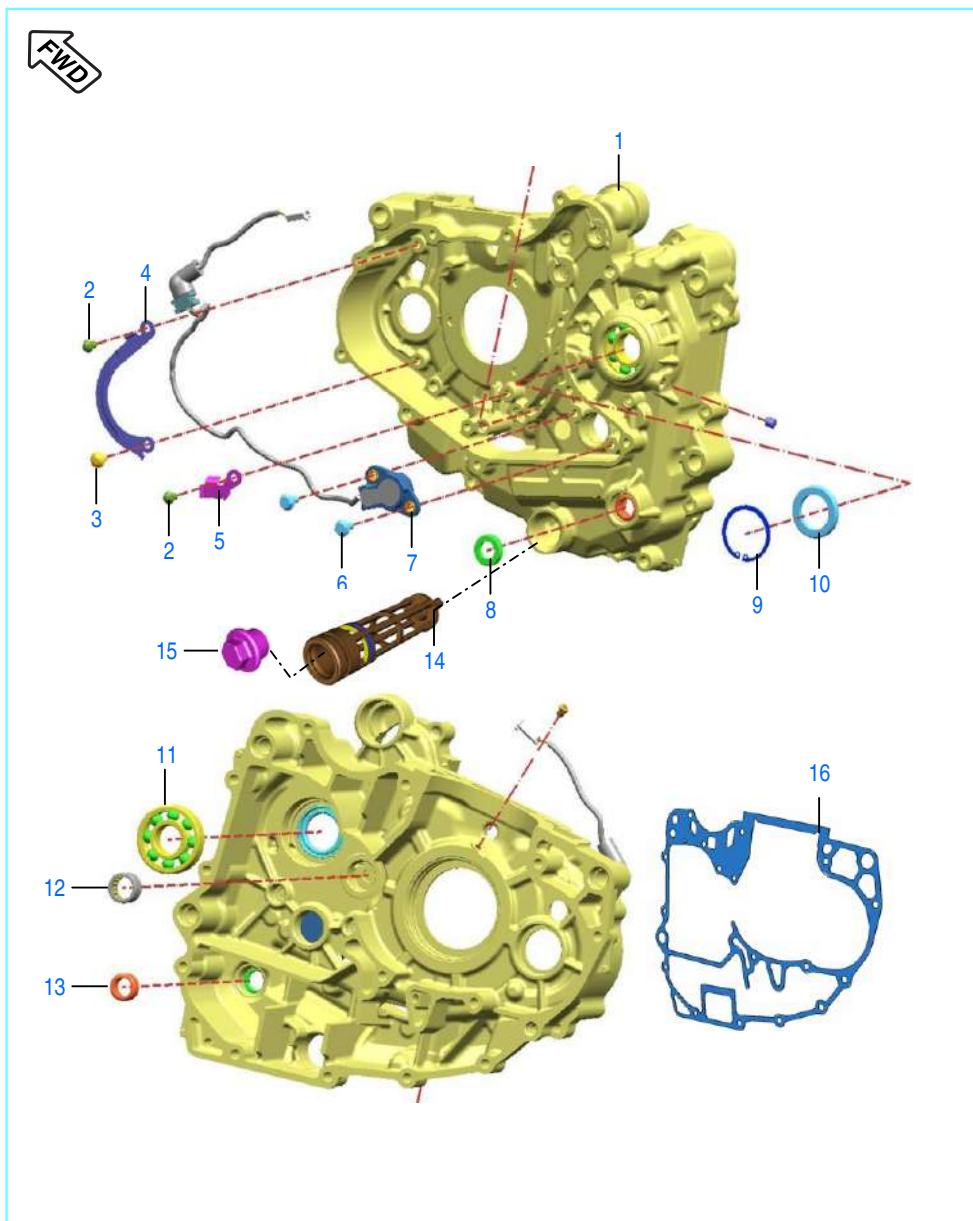


No.	Part No.	Description	Qty.	Remarks
1	36 JL00 03	Kit Assly. Crankcase LH	1	
2	LA E000 14	Bolt Flanged	2	
3	DH 1013 81	Pre Coated pan Screw	1	
4	JG 5410 63	Bracket Harness Upper	1	
5	JG 5410 44	Bracket Harness Lower	1	
6	39 1773 04	Bolt M-5 x 16	2	
7	JL 3518 00	Neutral Indicator Switch	1	
8	39 1043 19	Seal Oil	1	Gear Change lever
9	KE BA37 15	Circlip Internal	1	Output Shaft
10	DG 1014 56	Seal Oil	1	Output Shaft
11	59 2000 06	Bearing Ball	1	Output Shaft
12	JG 5410 15	Needle Bearing	1	Drum
13	39 2562 20	Needle Bearing	1	
14	JG 5710 24	Mesh Oil Filter Assly.	1	
15	JA 5410 48	Strainer Cap with 'O' Ring	1	
16	JG 5410 41	Gasket Crankcase	1	
17	36 JL00 14	Kit Engine Gasket	1	N.I.

Balancer Idler Gear / Water Pump

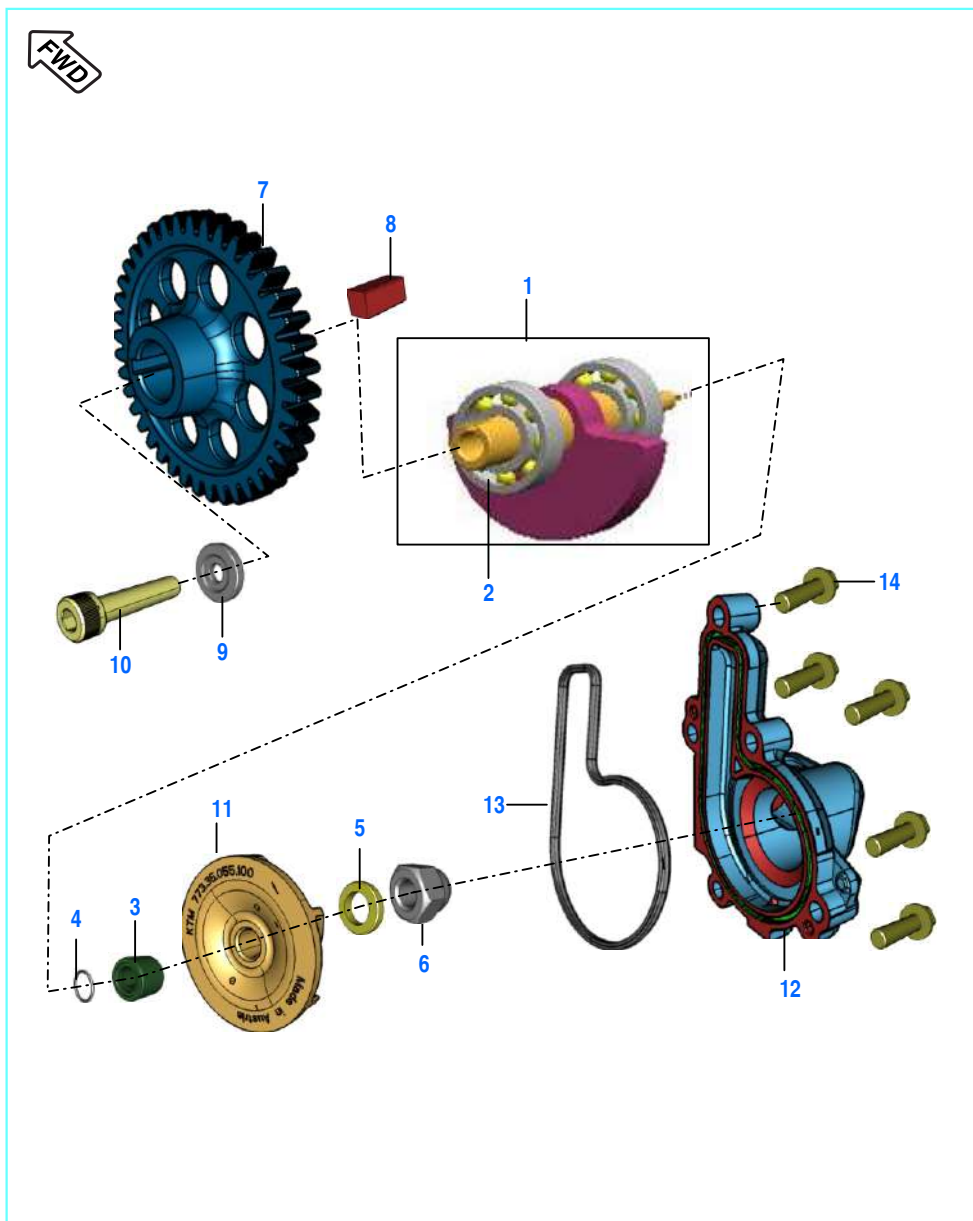

No.	Part No.	Description	Qty.	Remarks
1	JU 5312 13	Balancer Assy	1	
2	59 2000 36	Balancer Bearing (6203/HN3C3D8)	2	
3	JG 5312 11	Sleeve Balancer Driven	1	
4	JG 5312 12	O Ring Balancer Driven	1	
5	JG 5312 15	Washer (2.5MM)	1	
6	JG 6010 05	Dome Nut	1	
7	JG 5312 07	Gear Balancer Driven	1	
8	DS 1011 54	Key	1	
9	DH 1010 48	Washer - Special :- Camshaft	1	
10	DK 1013 86	Pre-coated Soc Hd Cap Bolt M8X40	1	
11	JG 6010 13	Water Pump Rotor	1	
12	JG 6010 11	Cover Water Pump	1	
13	JG6010 12	O-Ring (Water Pump Cover)	1	
14	KADQ06 20	Bolt Hexagonal	5	
15	39 1665 11	Washer - Seal :- 6	1	N.I.
16	39 2606 07	Pin - Parallel	2	N.I.


Oil Pump

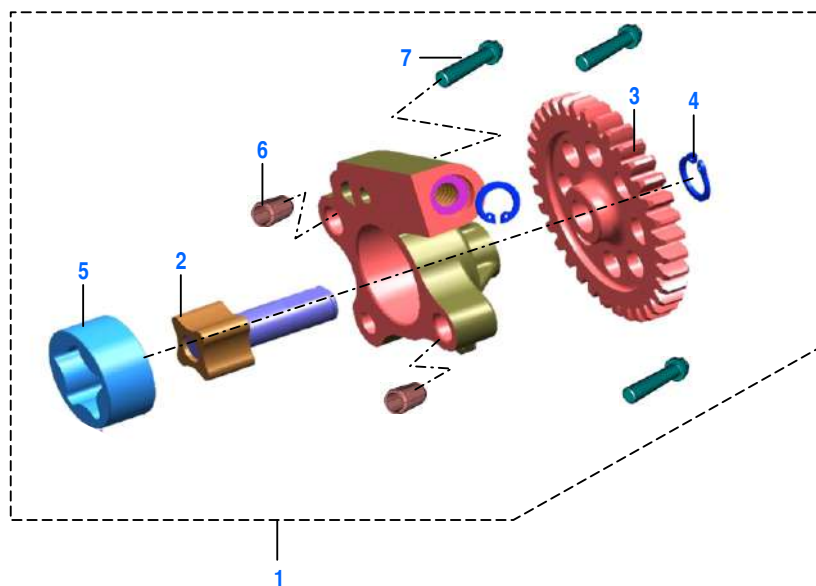

No.	Part No.	Description	Qty.	Remarks
1	JU 5710 00	Oil Pump Assy Comp	1	N.S.
2	JG 5710 22	Rotor Oil pump Inner With Shaft	1	
3	JG 5710 18	Gear Oil Pump Drive	1	
4	KE AA11 10	Circlip	1	
5	28 1210 08	Outer Rotor	1	
6	39 0999 06	Pin - Hollow Dowel	2	
7	LA E000 18	Bolt Flanged M6X1X30L-Precoated	3	




Radiator

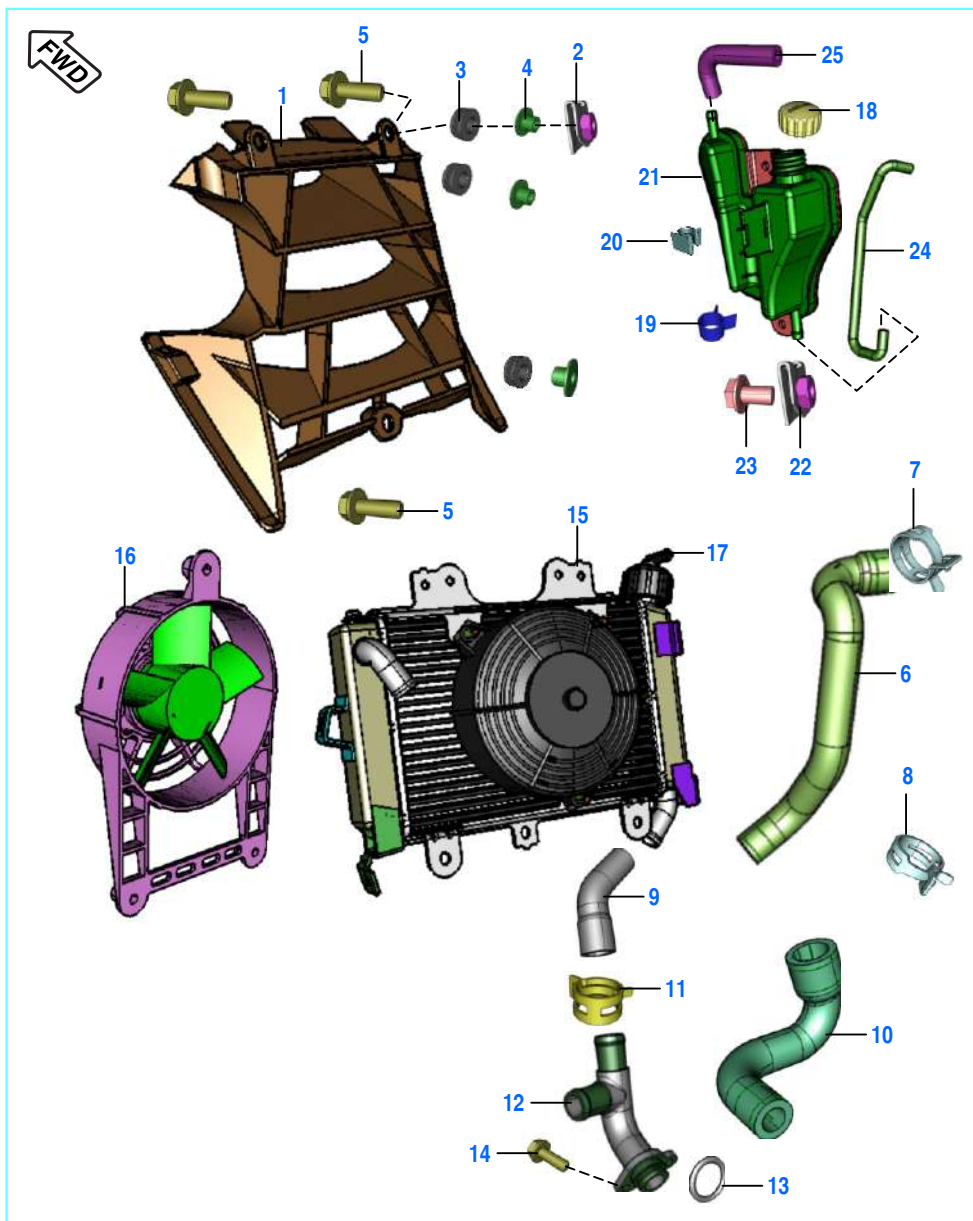


No.	Part No.	Description	Qty.	Remarks
1	JL 6012 10	Cowl Radiator	1	
2	DJ 1810 65	Nut - Clip :- M6	3	
3	JL 1812 56	Grommet For Radiator Cowl	3	
4	JW 1710 15	Collar Spoiler Central	3	
5	KA DA06 16	Bolt-Flange Dia-06 L-12	3	
6	JL 6010 00	Hose Thermostat To Radiator	1	
7	JG 6012 10	Clamp Radiator Pipe	1	
8	JG 6012 09	Clamp Radiator Pipe Dia 19.8	2	
9	JL 6012 04	Coolant Hose Radiator To T	1	
10	JL 6012 19	Hose By Pass To Pump	1	
11	JL 6012 12	Clamp Radiator Dia 19	1	
12	JL 6012 08	Coolant Pipe T Assembly	1	
13	JG 6012 21	O-Ring Coolant Pipe	1	
14	39 2204 04	Bolt - Hexagon Head With Flange:M6	2	
15	JL 6012 00	Radiator	1	
16	JG 6014 00	Radiator Fan	1	
17	JG 6012 29	Pressure Cap Radiator	1	
18	JG 6012 11	Cap Expansion Tank	1	
19	JL 6012 15	Clamp -Expansion Tank	2	
20	JG 1710 29	Spring Band Clip 10 Mm	3	
21	JL 6012 09	Tank Expansion	1	
22	DJ 1810 65	Nut - Clip :- M6	2	
23	39 1944 04	Bolt - Flanged	2	
24	JL 6012 13	Hose -Expansion Tank	1	
25	JL 6012 14	Hose -Expansion Tank Top	1	
26	-	Bleeding Screw-Radiator	1	
27	-	O ring Bleeding Screw	1	

Cover Clutch

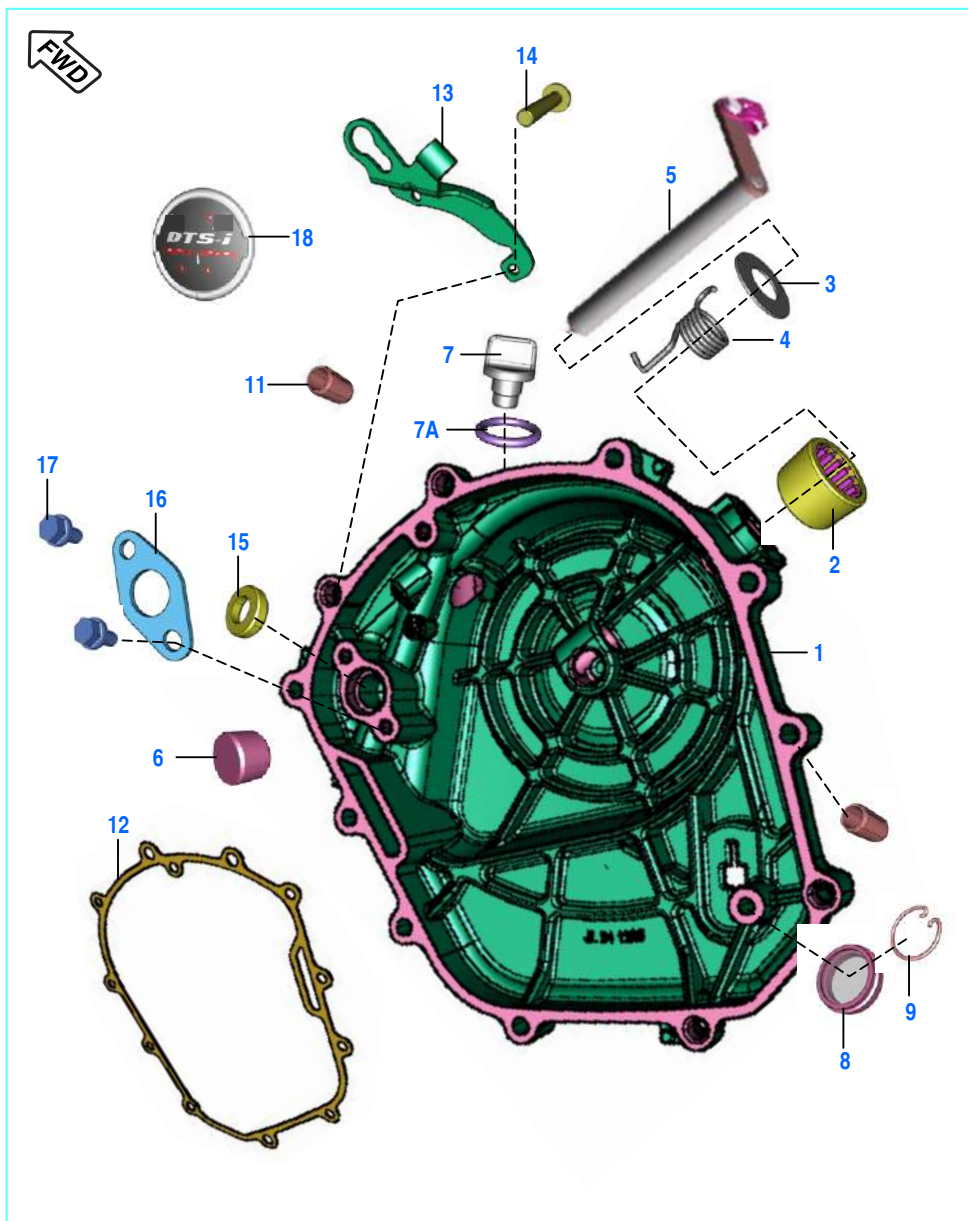


No.	Part No.	Description	Qty.	Remarks
1	36 JL00 02	Kit Asly Clutch Cover	1	With Nozzle, NRB, Jet
2	39 1990 20	Bearing - Needle	1	
3	LD B000 20	Washer 12.5X24X0.8T	1	
4	JG 5510 17	Spring	1	
5	JG 5510 15	Shaft Clutch Release Assy	1	
6	JU 5514 01	Rod Push	1	
7	JG 5412 30	Cap Oil Filling	1	
7A	39 1537 21	Ring 'O'	1	
8	DG 1014 18	Gauge	1	
9	DS 1012 15	Clip - Wire	1	
10	39 1041 19	Seal - Oil	1	N.I.
11	39 0999 06	Pin - Hollow Dowel	2	
12	JL 5412 07	Gasket Clutch Cover	1	
13	JL 5412 10	Bracket Clutch Cable	1	
14	KA DQ06 30	Bolt Flanged	11	
15	39 1046 19	Seal - Oil	1	
16	JG 5412 31	Plate -position	1	
17	DH 1013 83	Bolt M6	2	
18	JL 5412 22	Decal Triple Spark	1	

Cover Magneto

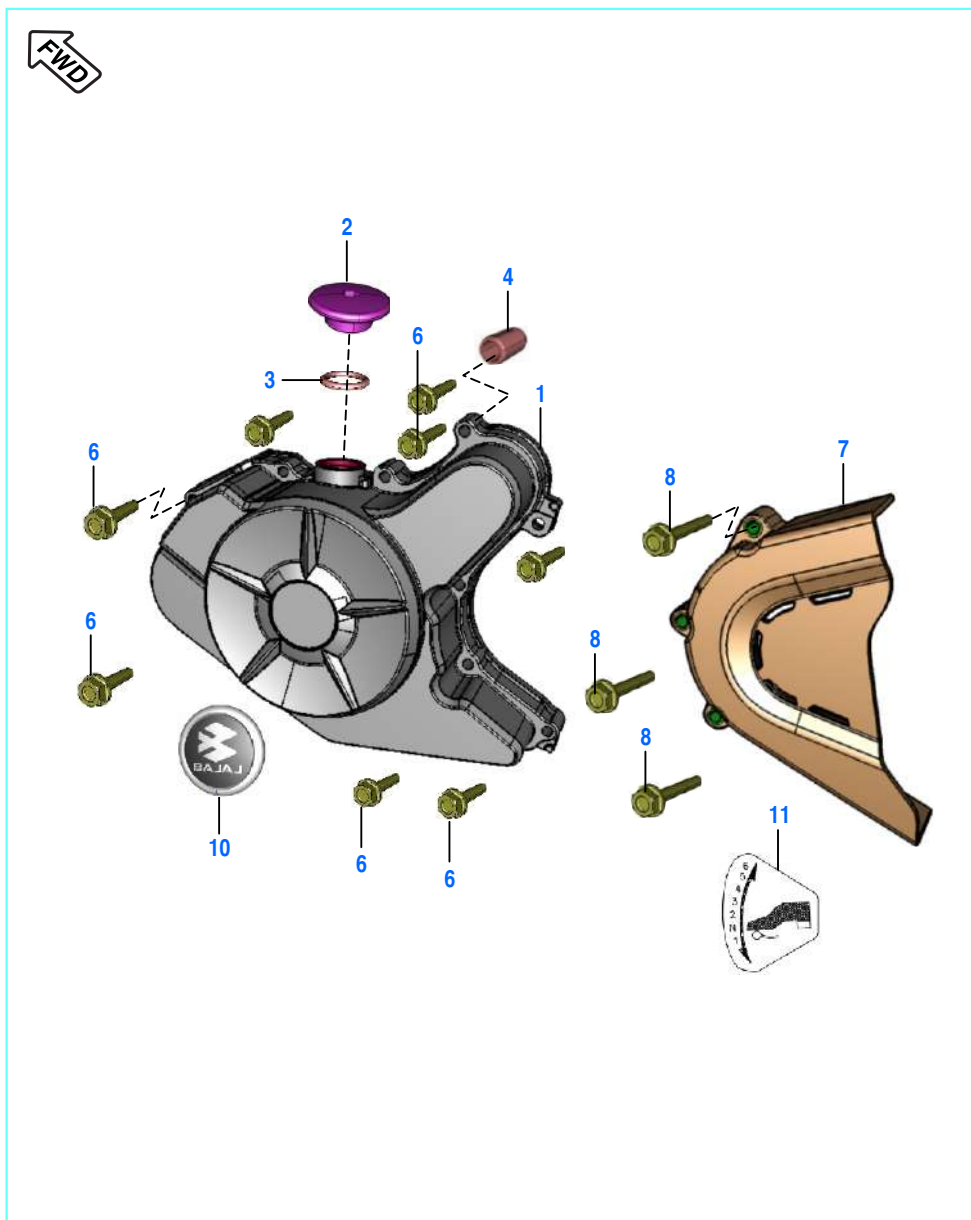


No.	Part No.	Description	Qty.	Remarks
1	JL 5412 02	Cover Magneto	1	
2	JA 5412 33	Cap TDC Finder	1	
3	30 1011 95	Ring - O	1	
4	39 0999 06	Pin - Hollow Dowel	2	
5	JL 5412 08	Gasket Magneto Cover	1	
6	KA DQ06 30	Bolt Flanged	9	
7	JL 5412 03	Cover LH RR	1	
8	KA DQ06 45	Hex Headed Bolt Flange	3	
9	JL 2330 15	Gear Shift Label	1	
10	JL 5412 23	Decal 'Bajaj logo'	1	
11	JL 2330 15	Gear Shift Label-6 Speed	1	

Clutch Assly

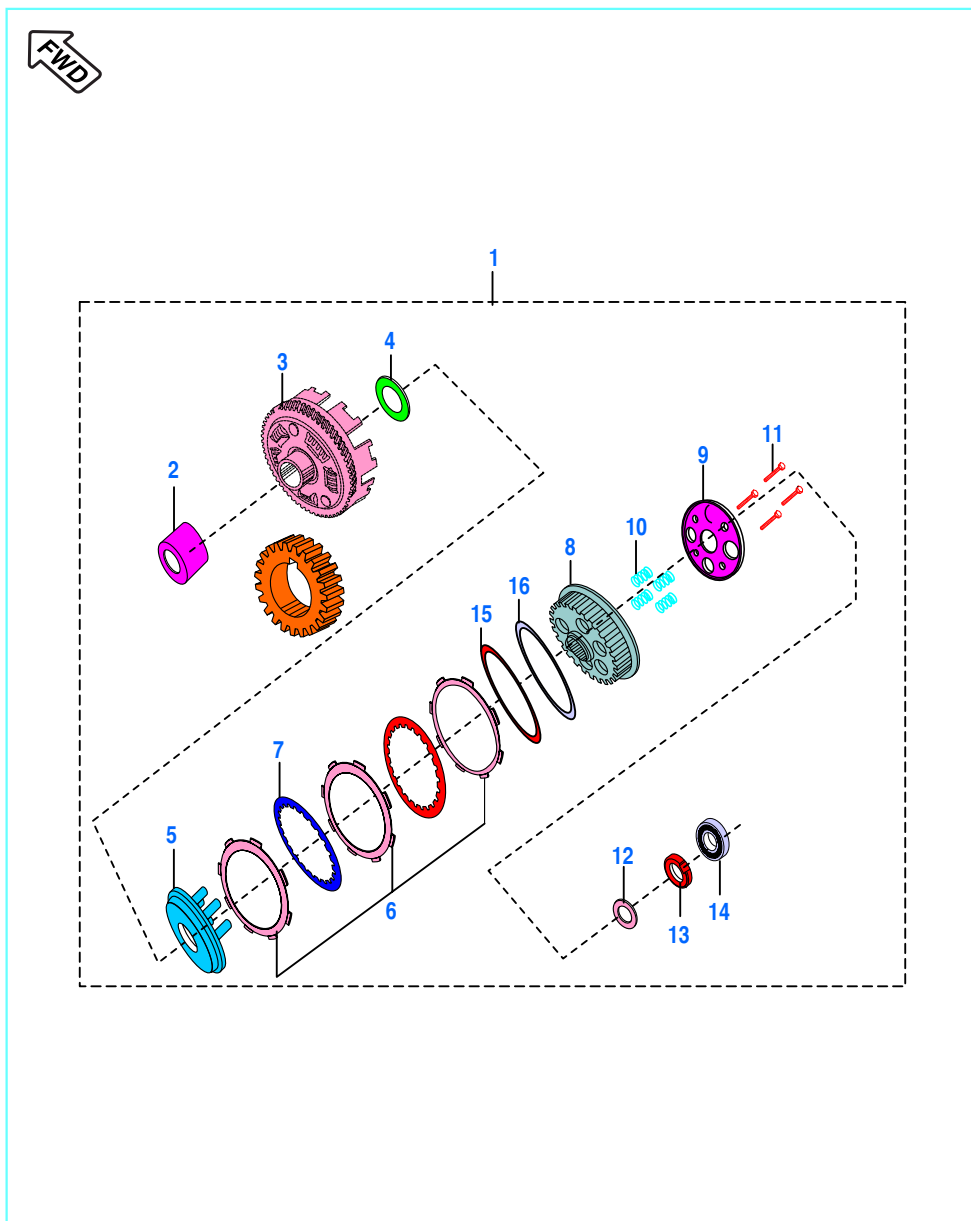


No.	Part No.	Description	Qty.	Remarks
1	JU 5514 04	Clutch Assy Comp	1	
2	JG 5514 27	Collared Bush	1	
3	36 JL00 05	Kit Set Primary Drive & Driven Gear	1	
4	JG 5514 28	Washer Clutch	1	
5	JG 5514 49	Plate (Wheel Clutch)	1	
6	36 JU00 02	Kit Friction Plate	1	
7	JG 5514 47	Pressure Plate	6	
8	JG 5514 43	Clutch Holder (Hub Clutch)	1	
9	JU 5514 06	Clutch Center (Holder Clutch)	1	
10	JU 5514 02	Spring -Clutch	4	
11	JG 5514 51	Bolt Sh 6*22	4	
12	39 2200 11	Washer - Plain (Primary Drive Gear)	1	
13	DH 1016 48	Nut Clutch Center Lock (Pre-coated)	1	
14	JG 5514 23	Clutch Lifter Bearing	1	
15	DP 1012 43	Plate Judder Spring	1	
16	DP 1011 14	Spring Anti Judder	1	

Carburettor

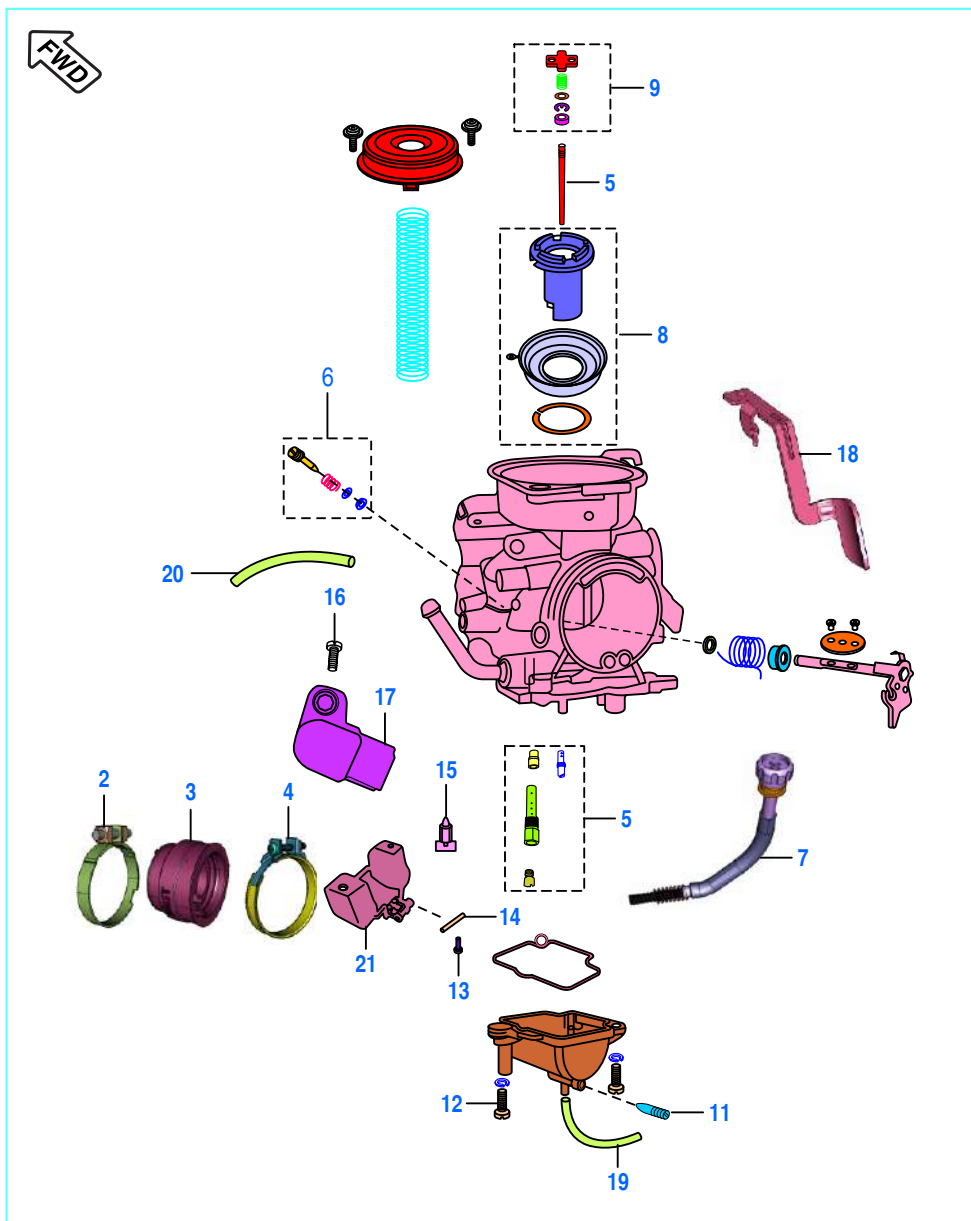


No.	Part No.	Description	Qty.	Remarks
1	JL 5812 01	Carburettor	1	
2	JL 5813 00	Clamp (Duct Carburettor)	1	
3	JL 5110 16	Insulator Rubber	1	
4	JL 5810 27	Clamp	1	
5	36 JL00 19	Kit Jet P200	1	Refer Page No. 109
6	36 JL00 20	Kit VC Screw P200	1	Refer Page No. 109
7	36 JL00 21	Kit Idling Screw	1	Refer Page No. 109
8	36 JL00 22	Kit Piston Valve P200	1	Refer Page No. 109
9	36 JL00 24	Kit Jet Needle Hardware P200	1	Refer Page No. 109
10	36 JL00 23	Kit Gasket / O-ring P200	1	Refer Page No. 109
11	JA 5813 14	Drain Screw	1	
12	CB 1210 42	Float Chamber Screw	2	
13	DH 1210 64	Screw Needle Shaft	1	
14	DH 1210 63	Float Needle	1	
15	DK 1210 47	Needle Assly.	1	
16	39 1780 01	Screw Pan - M5	2	
17	JD 3518 00	TPS Assly.	1	
18	JL 5812 04	Choke Lever	1	
19	JL 5812 05	Tube Drain Carb.	1	
20	JL 5812 06	Tube Breather	1	
21	DK 1210 45	Float Assembly	1	

Air Cleaner Complete

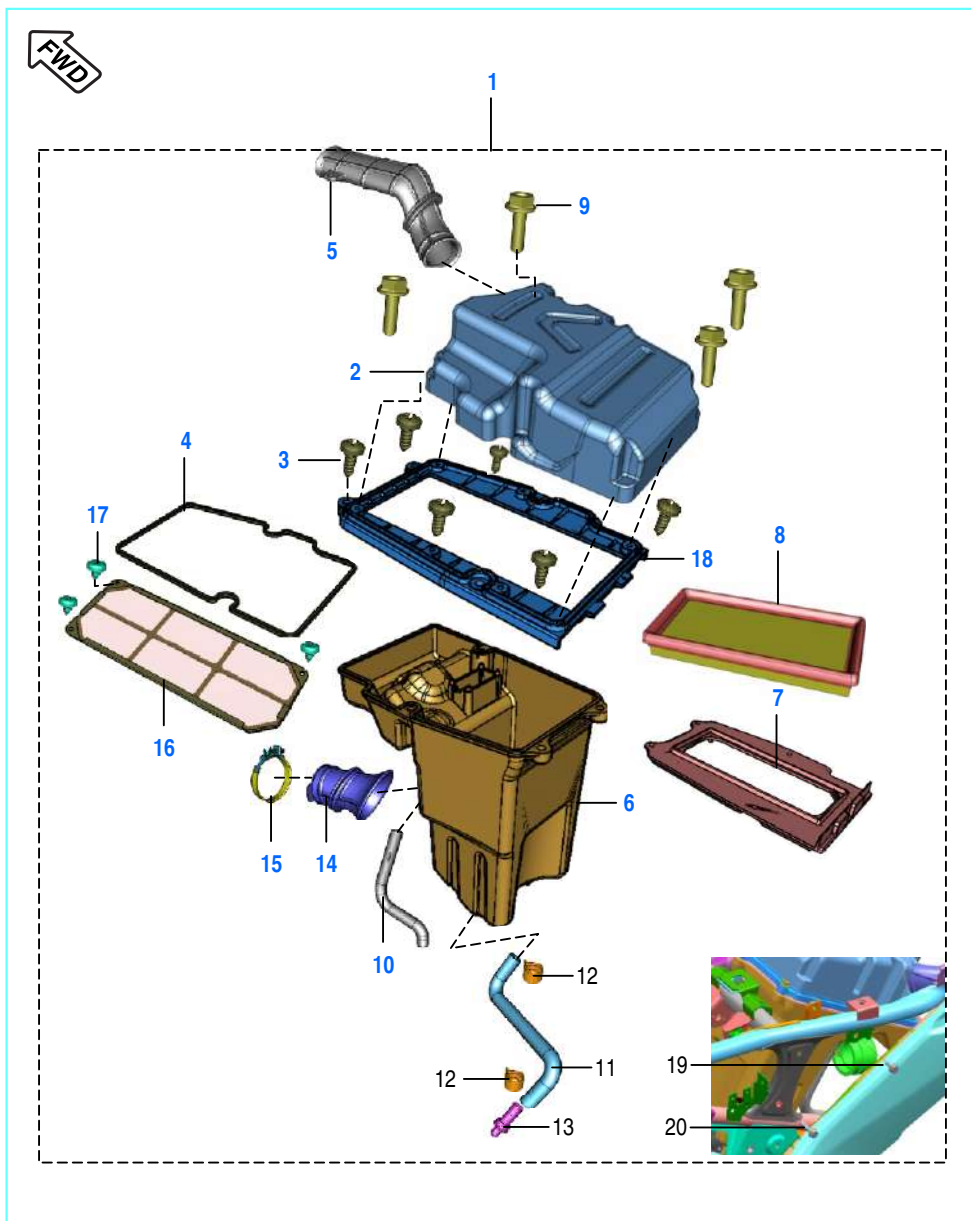


No.	Part No.	Description	Qty.	Remarks
1	JL 5810 00	Air Filter Assembly	1	
2	JL 5810 23	Assembly Top Cover	1	
3	LB B000 04	Screw Cross Pan Hd Bt6*11L	6	
4	JL 5810 25	Seal Top Cover	1	
5	JL 5810 07	Entry Duct	1	
6	JL 5810 24	Assembly Bottom Cover	1	
7	JL 5810 18	Plate Air Filter Mounting	1	
8	JL 5810 09	Filter Element	1	
9	KA EM06 22	Bolt-Flange	4	
10	JL 5810 16	Tube Breather Assly	1	
11	JL 5810 15	Tube Drain Assembly	1	
12	DG 1210 02	Clamp	2	
13	DS 1211 26	Plug	1	
14	JL 5810 10	Tube Connecting	1	
15	AP 1210 64	Clamp	1	
16	JL 5810 04	Flame Arrester	1	
17	KB QA35 06	Screw Tapping Pan Slotted	3	
18	JL 5810 22	Plate Top Cover Mtg	1	
19	KA DM06 10	Bolt Flange M6-L10mm	1	RH Mounting
20	KA DA06 30	Bolt Flange M6-L33mm	1	RH Mounting
21	39 0239 11	Plain Washer	2	N.I. RH Mounting

Silencer Assembly

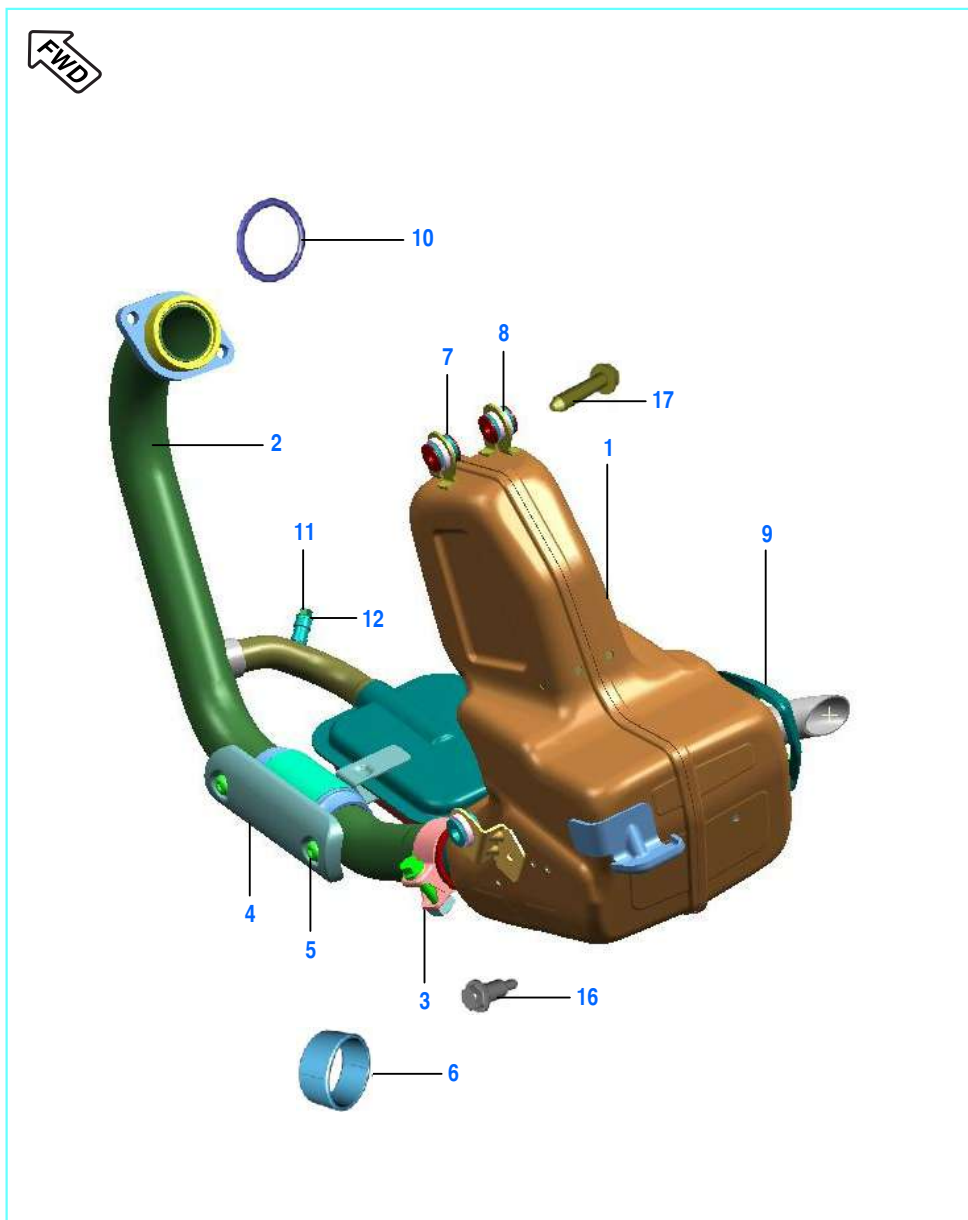


No.	Part No.	Description	Qty.	Remarks
1	JL 5910 52	Assembly Muffler	1	
2	JL 5910 48	Pipe Exhaust A Assly	1	
3	JG 5910 38	Band Clip	1	
4	JL 5911 44	Shield Catalytic Converter	1	
5	DH 1016 07	Truss Screw	4	
6	JG 5910 39	Gasket Muffler Pipe-A	1	
7	JG 5910 96	Bush Silencer Mounting	4	
8	JG 5910 97	Damper Silencer Mounting	4	
9	JL 5910 75	Heat Shield	1	
10	JG 5910 70	Gasket Exhaust	1	
11	39 2754 04	Bolt Hex	1	
12	39 2492 11	Plain Washer	1	
13	JG 5910 53	Damper Silencer Mounting	4	
14	KA DQ06 25	Bolt M6	2	
15	JG 5910 88	Clip Nut M6	2	
16	JL 5910 86	Bolt Stepped	2	
17	JL 5911 48	Bolt Hex Flange	2	

Starter Assembly

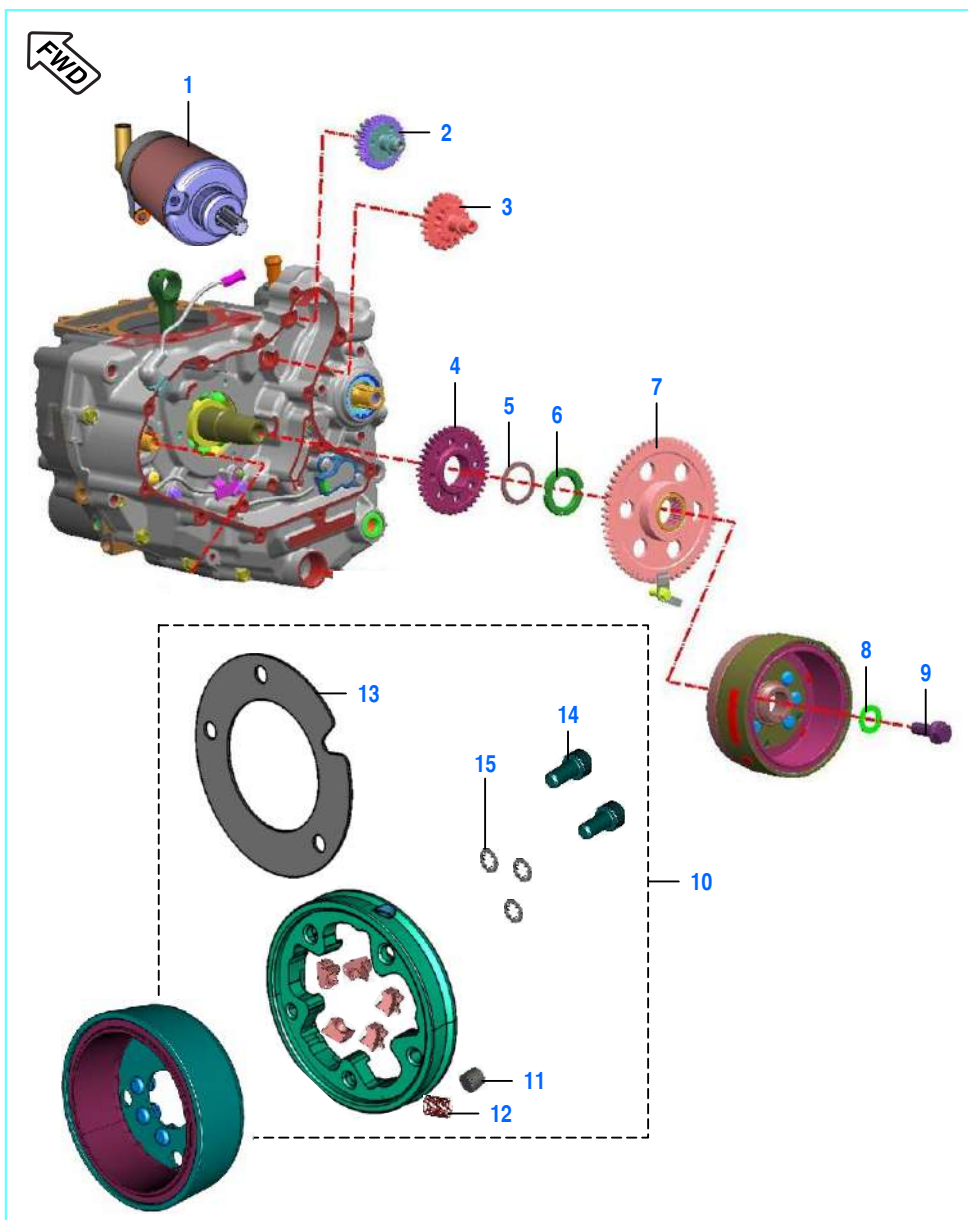


No.	Part No.	Description	Qty.	Remarks
1	JL 3516 00	Starter Motor Assly.	1	
1A	KA DQ06 25	Bolt M6-Motor mtg.	2	N.I.
2	JG 6214 13	Gear Starter Counter 2 Assy	1	
3	JG 6214 12	Gear Starter Counter 1	1	
4	JG 5310 41	Balancer Drive Gear	1	
5	JG 5310 39	Belleville Washer	1	
6	JG 5310 40	Nut Balancer	1	
7	JG 6214 17	Assembly Gear Starter Clutch	1	
8	39 2165 11	Plain Washer	1	
9	DH 1013 96	Hex Bolt Flanged	1	
10	DK 1015 95	Body Complete Starter Clutch	1	
11	DH 1011 63	Roller - Clutch	5	
12	DK 1015 96	Spring Starter Clutch	5	
13	DK 1016 05	Plate Roller Clutch	1	
14	DH 10 13 82	Pre-coated Screw	3	
15	39 0849 14	Washer - Lock :- Toothed	3	
16	59 1000 02	Spring Dowel Sleeve	4	N.I.

Magneto, CDI & H.T. Coil

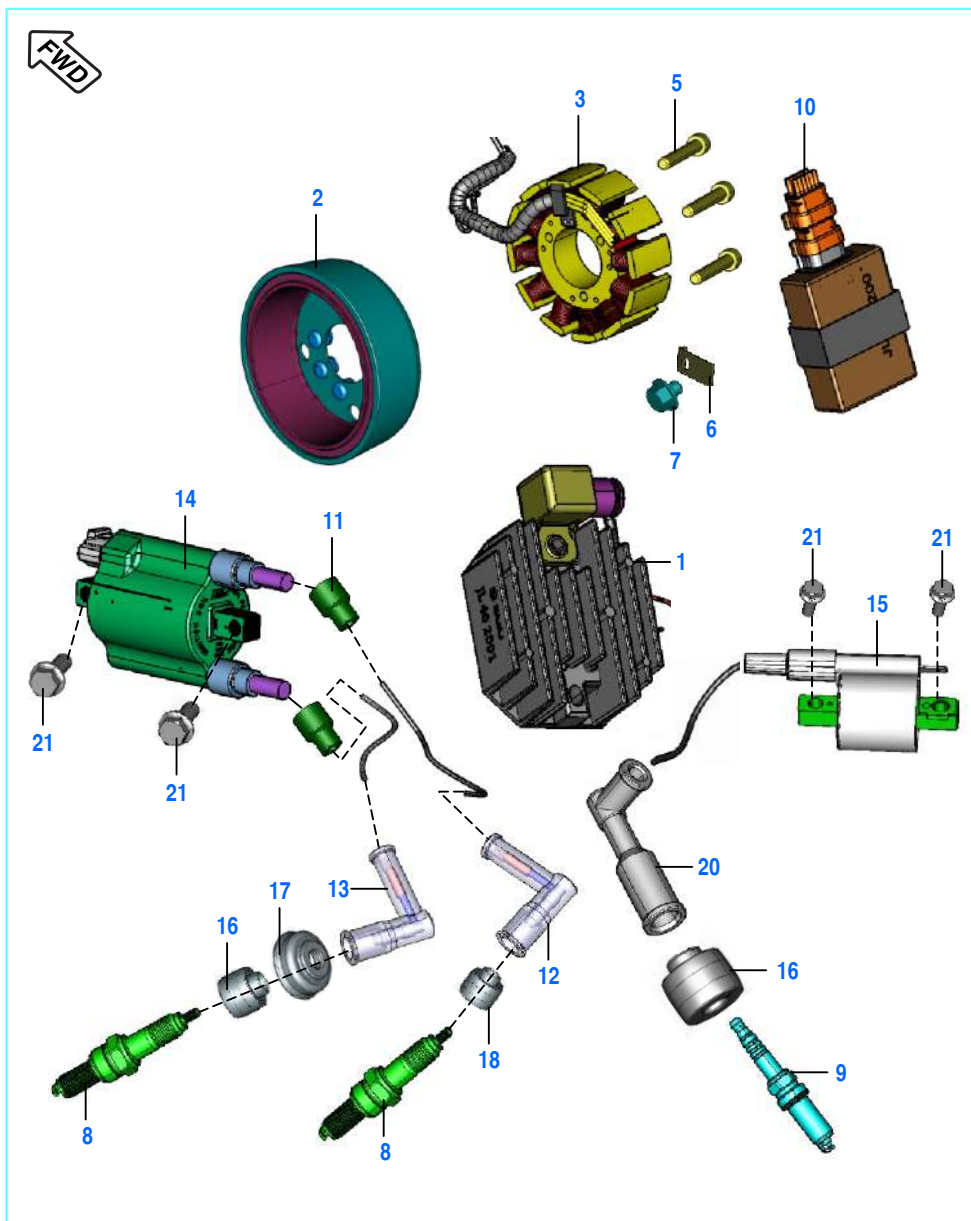


No.	Part No.	Description	Qty.	Remarks
1	JL 4020 01	Regulator Assly	1	N.I. N.S.
2	JL 3510 09	Rotor Assy. (W/O Clutch Assy)	1	
3	JL 3510 03	Stator Assly Compl	1	
4	JL 3510 05	Grommet G (Stator Cable)	1	
5	DK 1012 84	Hex Socket Head Screw(M5X0.8X35)	3	
6	DH 1011 99	Plate - Stopper (Wiring Harness)	1	
7	LA E000 10	Bolt Flange M5 X 13L	2	
8	DK 1110 28	Spark Plug RG6HC	2	
9	JG 3512 09	Ignition Spark Plug	1	
10	JL 3512 00	DC CDI With Sealed Coupler	1	
11	DD 1110 12	Grommet For H. T. Cable	2	
12	JD 3512 07	Spark Plug Cap	1	
13	AN 1110 15	Spark Plug Cap	1	
14	JL 3512 01	Ignition Coil with Cable LH	1	
15	JL 3512 02	Ignition Coil with Cable RH	1	
16	DH 1110 13	Grommet - Spark Plug	2	
17	DH 1110 16	Grommet - Sleeve Spark Plug	1	
18	DD 1110 11	Grommet - Spark Plug Cap	1	
20	DK 1110 11	Cap Spark Plug	1	
21	39 1944 04	Bolt - Flanged	4	

Seat Assembly / Seat Lock

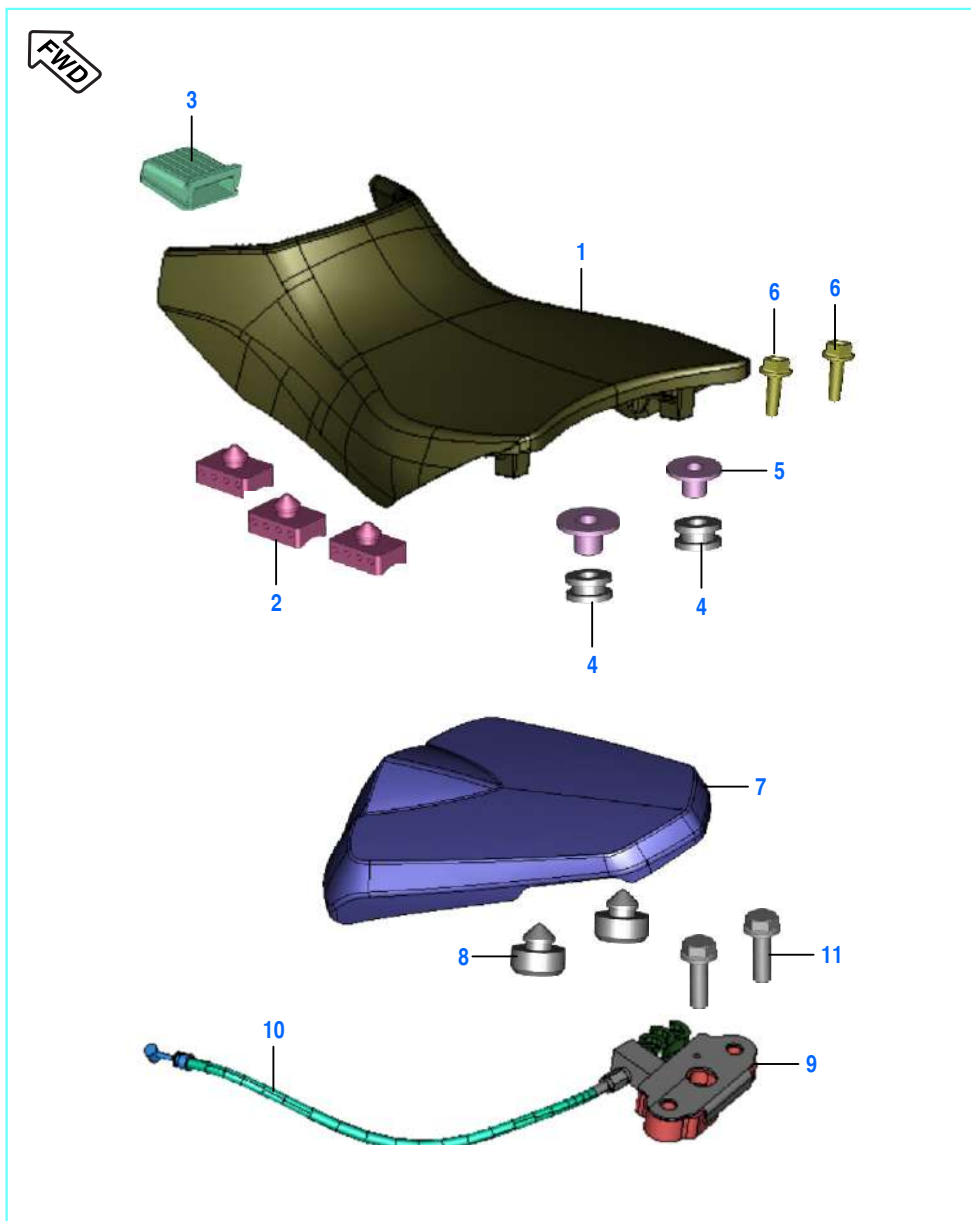


No.	Part No.	Description	Qty.	Remarks
1	JL 1910 01	Seat Assy Comp Front	1	Refer Page No.107
2	36 JL00 13	Kit Damper For Seat	1	
3	DK 2110 07	Damper Seat Front	1	
4	JG 1910 08	Collar -Seat	2	
5	FD 2110 06	Grommet - Seat	2	
6	DS 1612 87	Flange Bolt - M6	2	
7	JL 1910 04	Seat Assy Comp Rear	1	
8	JD 1910 06	Damper Round	2	
9	JG 2326 01	Lock Assy Seat Rear	1	
10	JG 2326 06	Seat Lock Cable	1	
11	39 1913 04	Bolt - Flanged	2	

Engine Mountings

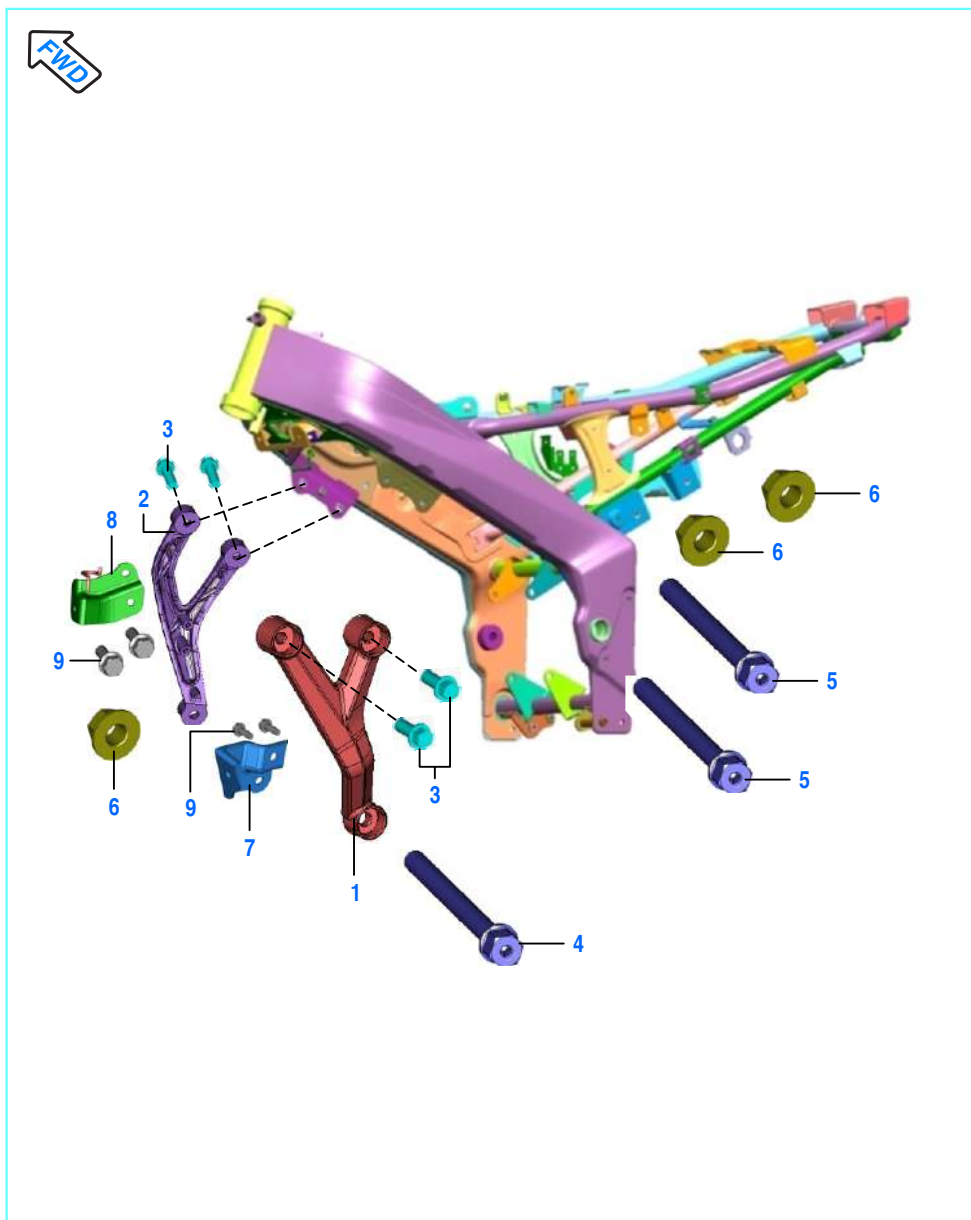


No.	Part No.	Description	Qty.	Remarks
1	JL 1134 00	Engine Stay Lh	1	
2	JL 1134 01	Engine Stay Rh	1	
3	39 1951 04	Bolt - Flanged Small	4	
4	JL 1110 54	Engine Mtg Bolt Front	1	
5	JA 1134 03	Flanged Bolt M10X110	2	
6	39 2723 15	Nut Flanged M10	2	
7	JL 1110 92	Bkt. Radiator Lower LH	1	
8	JL 1110 93	Bkt. Radiator Lower RH	1	
9	39 1062 04	Bolt Flanged	4	

Frame and Frame Fittings

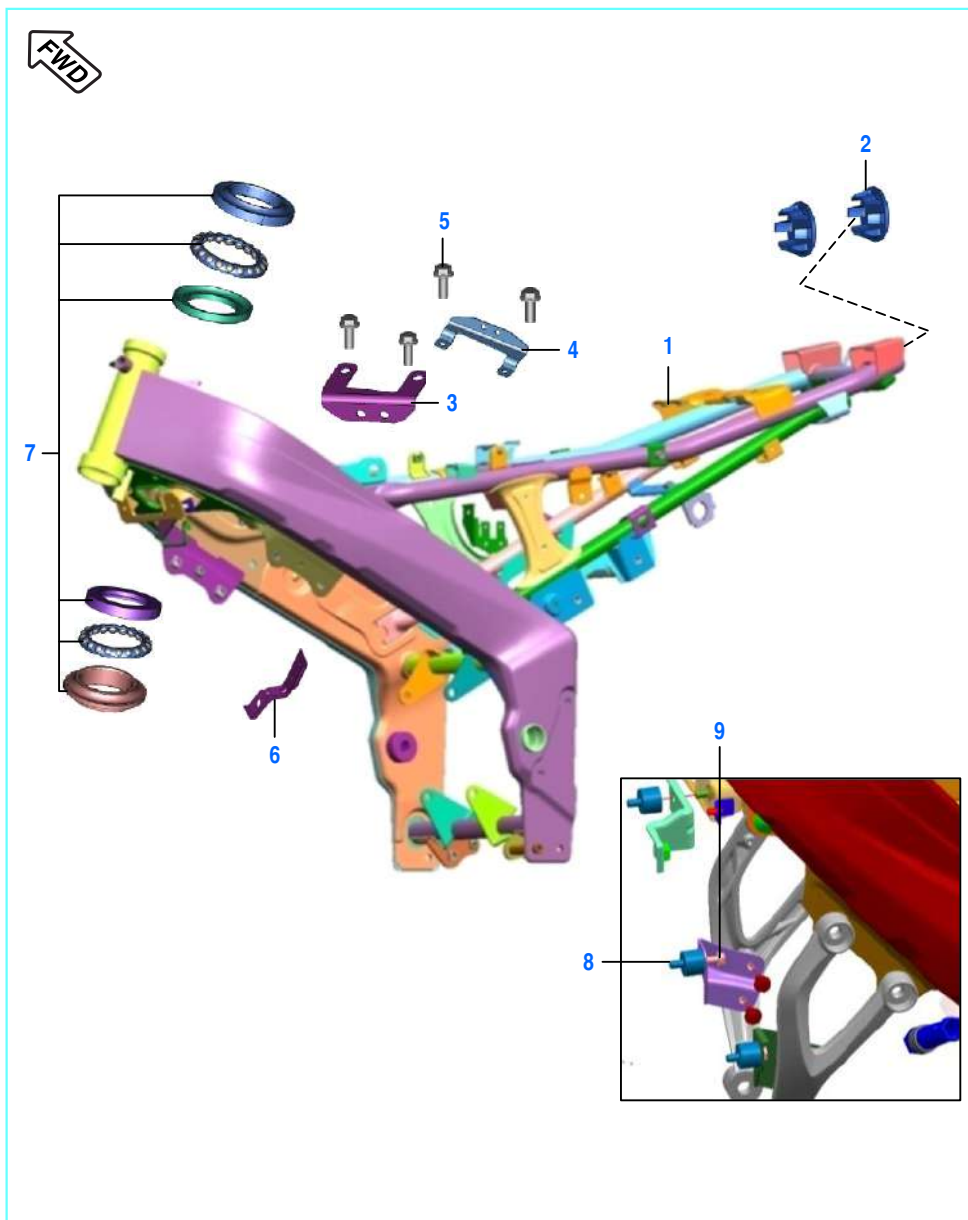


No.	Part No.	Description	Qty.	Remarks
1	JL 1111 06	Frame Assly Complete	1	
2	JL 1111 03	Cap Tube End	2	
3	JL 1110 81	Bracket Loose H.T. Coil 1	1	
4	JL 1110 82	Bracket Loose H.T. Coil 2	1	
5	39 1944 04	Bolt - Flanged	4	
6	JL 1110 78	Bracket Horn Mtg Lh	1	
7	36 JG00 11	Kit Steering head bearing	1	
8	JG 5810 14	Silent Block	4	
9	LA D000 40	Bolt Flange	2	

Swing Arm / Rear Shock Absorber

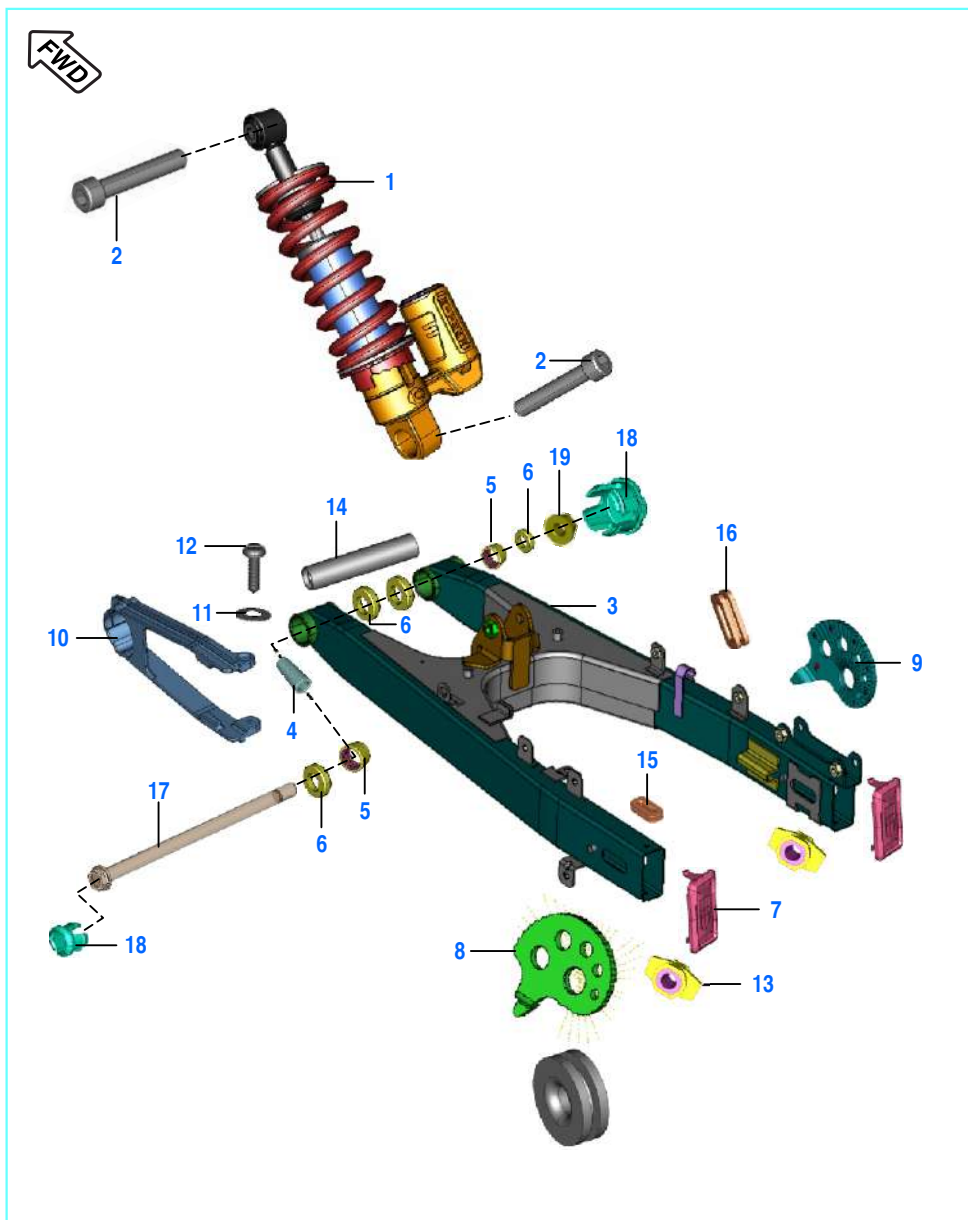


No.	Part No.	Description	Qty.	Remarks
1	JL 1220 06	Shockabsorber Mono	1	
2	LA C000 19	Bolt Socket M10 X 1.25 X 55	2	
3	JL 1220 14	Assembly Swing Arm Comp	1	
4	DG 1710 16	Sleeve	2	
5	DG 1710 18	Bearing - Needle	2	
6	DG 1710 19	Seal - Oil	4	
7	JL 1220 02	Cap Swing Arm Tube	2	
8	JL 1220 01	Adjuster Chain Lh	1	
9	JL 1220 09	Adjuster Chain Rh	1	
10	JL 1220 03	Slider Chain	1	
11	39 0454 11	Washer - Plain	2	
12	39 0553 02	Screw - Self Tapping	2	
13	JL 1220 04	Spacer Chain Adjuster	2	
14	JL 1220 08	Spacer Central Swing Arm	2	
15	JL 1812 24	Grommet I	1	
16	JL 1812 25	Grommet li	1	
17	DG 1710 15	Shaft - Swing Arm	1	
18	JL 1111 09	Cap -Swing Armpivot	2	
19	DG 1710 17	Nut	1	

Pillion Foot Rest / Holder

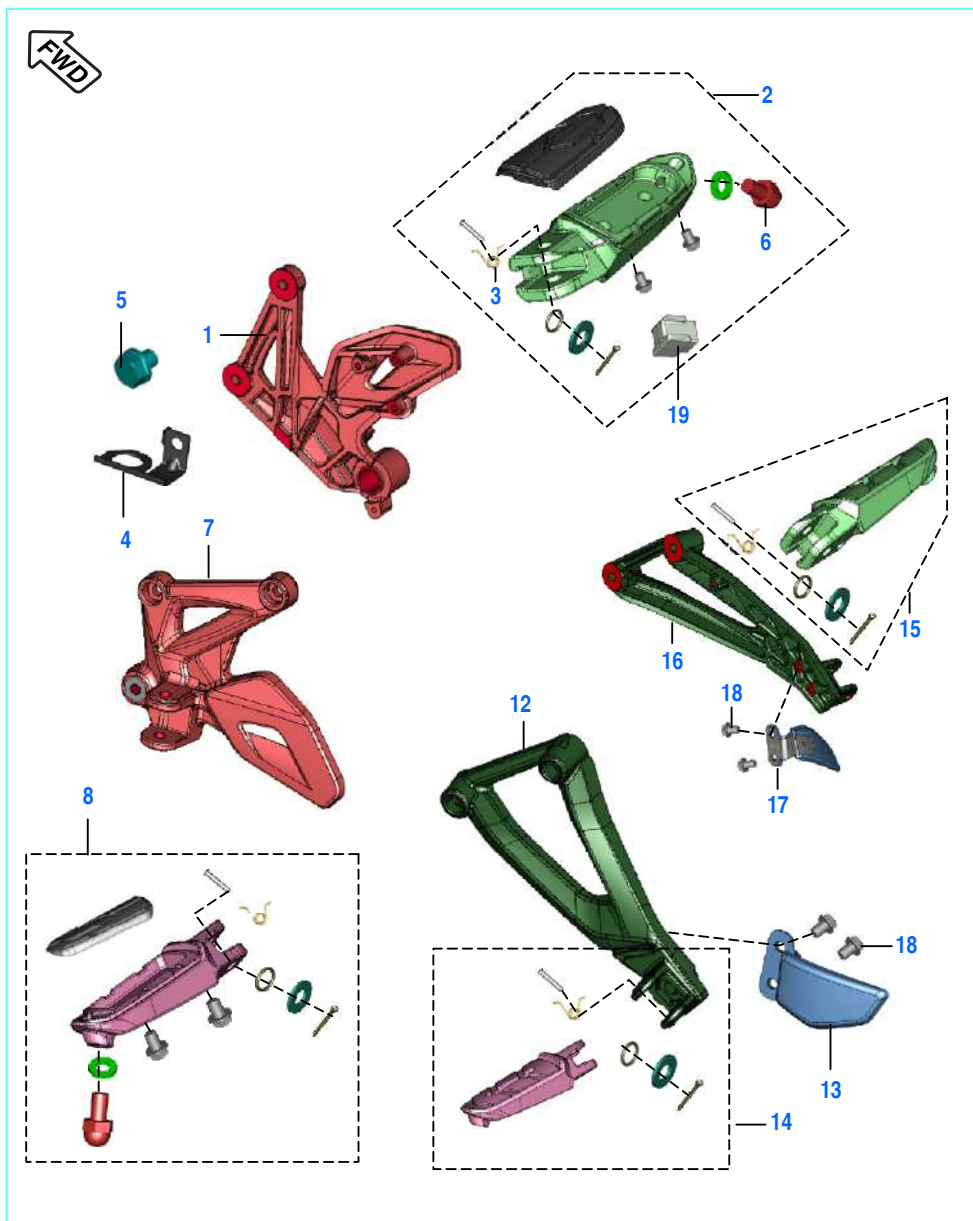


No.	Part No.	Description	Qty.	Remarks
1	JL 1130 02	Holder Step RH	1	
2	JL 1130 07	Step Assy Main RH	1	
3	JL 1130 12	Spring Torsion	1	
4	JL 1130 33	Bracket Rear Brake Switch	1	
5	39 2475 04	Bolt - Hexagon Head Flange M6	1	
6	KA CA08 20	Bolt-Socket Dia-08 L-20	2	
7	JL 1130 34	Holder Step LH	1	
8	JL 1130 00	Step Assy Main LH	1	
9	DG 1611 44	Bolt	1	
10	LD A000 13	Washer Plain Dia 6.4Xdia 12.5X 2	1	
11	LA C000 16	Bolt Socket M8X35	2	
12	JL 1130 13	Step Holder- Pillion LH	1	
13	JL 1130 26	Flap Pillion Holder LH	1	
14	JL 1130 14	Step Pillion Assy Complete LH	1	
15	JL 1130 16	Step Pillion Assy Complete RH	1	
16	JL 1130 15	Step Holder - Pillion RH	1	
17	JL 1130 27	Flap Pillion Holder RH	1	
18	39 1954 04	Bolt - Flanged :- Small	4	
19	JL 1130 28	Rubber Main Step	2	

Mudguard - Front & Rear

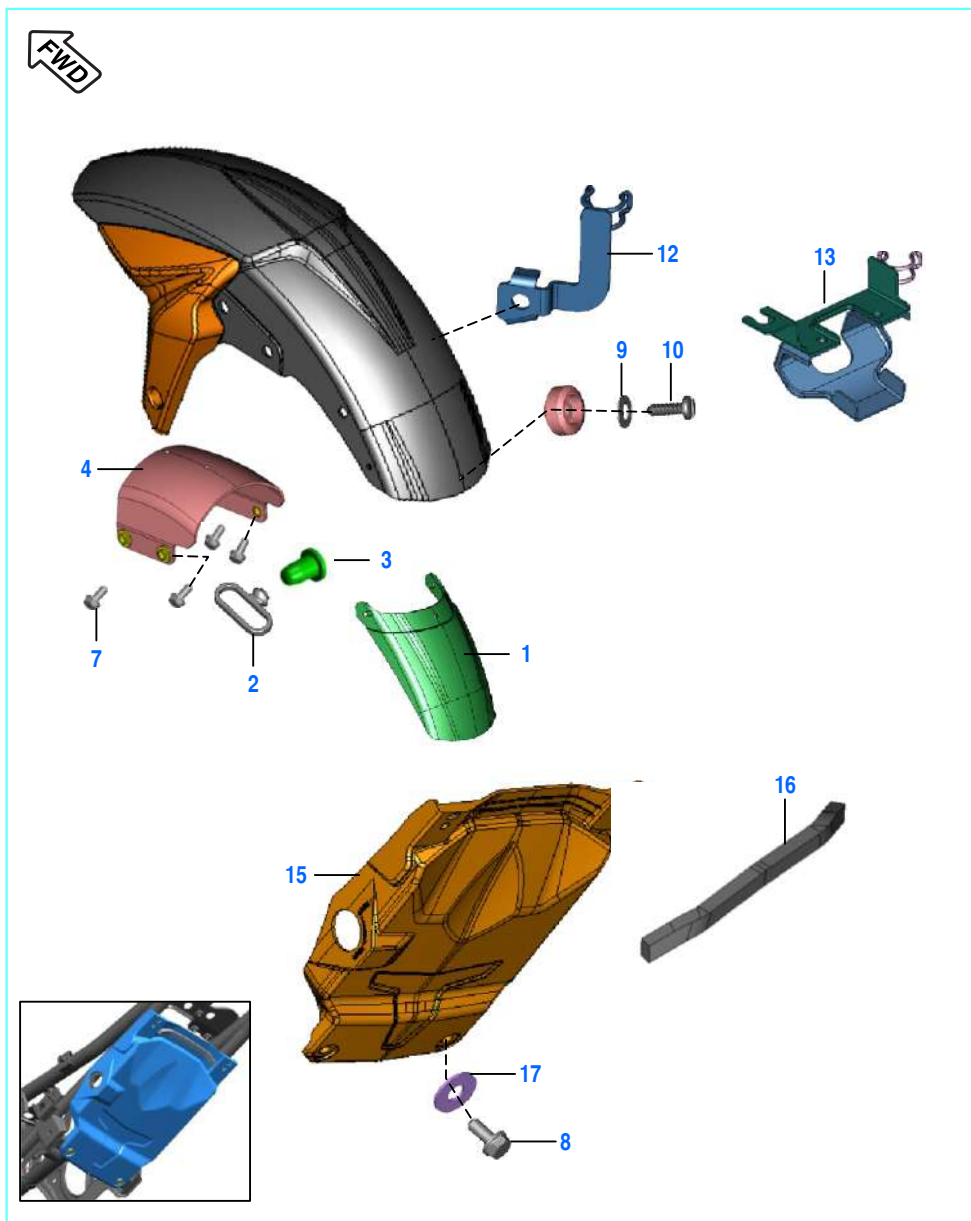


No.	Part No.	Description	Qty.	Remarks
1	JL 1814 05	Mudflap -Front	1	N.I.
2	DS 1611 25	Guide - Cable	1	
3	DJ 1610 69	Nail - Cable Guide	1	
4	JL 1814 02	Bracket Brace Fender	1	
5	JL 1814 11	Washer Front-Fender-Mtg	2	
6	39 2038 04	Bolt - Hexagon Socket Head :- M6	2	
7	39 1946 04	Bolt - Flanged M8	4	
8	39 1943 04	Bolt - Flanged	2	
9	39 0242 11	Washer - Plain	6	
10	39 2420 01	Screw - Pan Head M5	3	
11	39 0326 15	Nut - Nyloc M5 X 0.8	3	
12	JL 1318 11	Bracket -Hose Clamp	1	
13	JL 1318 12	Bracket Hose Clamp Top	1	
14	KA Ca08 30	Bolt - Flanged	2	
15	JL 1812 09	Fender Rear Front	1	
16	JL 1812 21	Foam-Rear Fender Front	1	
17	39 0239 11	Washer - Plain	2	

Stand Assembly

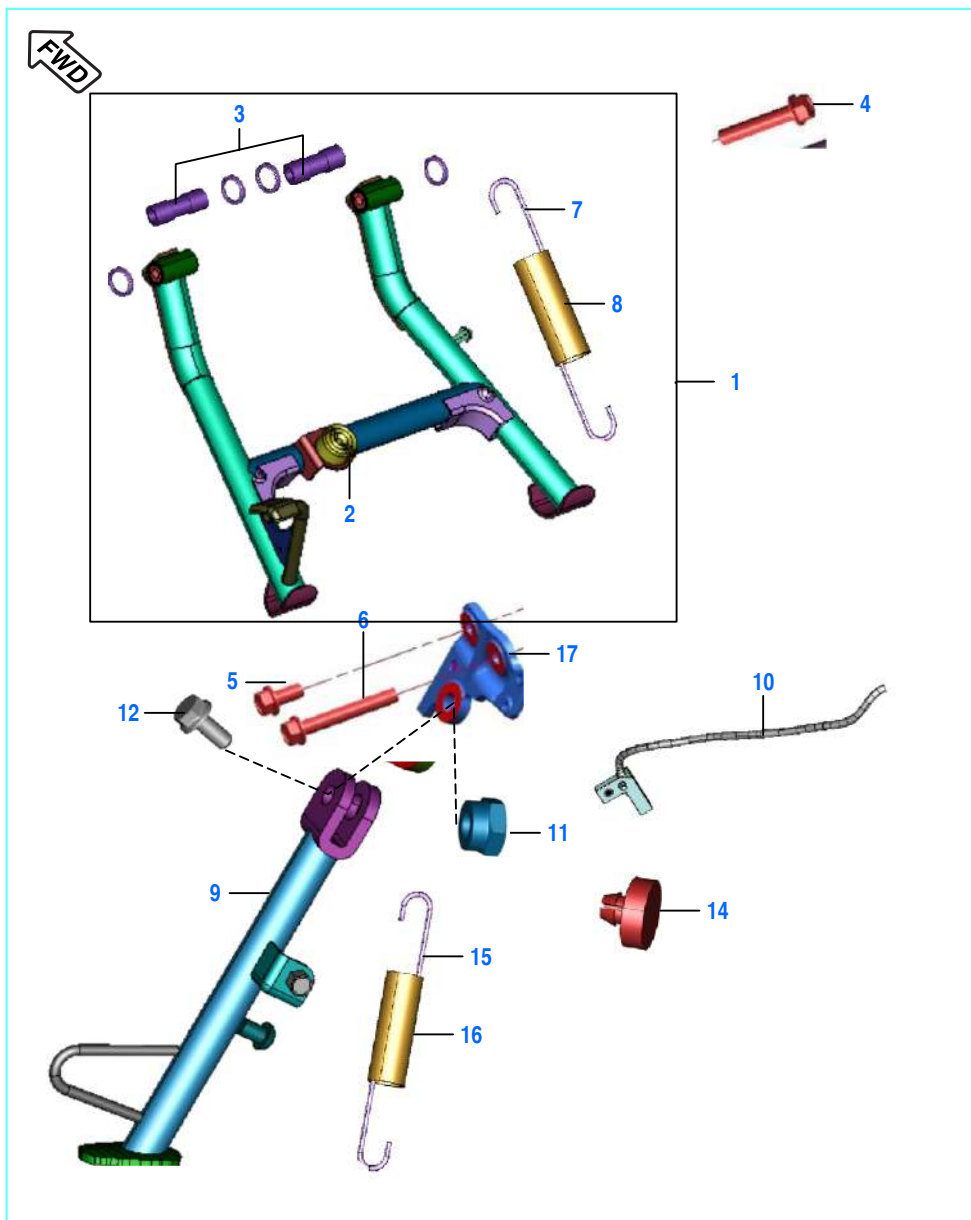


No.	Part No.	Description	Qty.	Remarks
1	36 JL00 25	Kit Center Stand	1	As an accessories
2	DG 1611 24	Damper	1	
3	JL 1132 10	Bush Main Stand LH	2	
4	39 1941 04	Bolt - Flanged M8	1	
5	39 1946 04	Bolt - Hexagon M8 X 1.25	1	
6	39 2469 04	Bolt Flanged	1	
7	JL 1132 07	Spring Main Stand	1	
8	JL 1132 12	Cover Spring Main Stand	1	
9	JL 1132 01	Assembly Side Stand	1	
10	JL 4014 02	Switch Side Stand	1	
11	39 0422 15	Nut - Nyloc M10	1	
12	DF 1611 02	Bolt For Side Stand Mounting	1	
13	39 2060 04	Bolt - Flanged	1	
14	JL 4036 00	Magnet Assembly	1	
15	JL 1132 09	Spring Side Stand	1	
16	DH 1611 46	Cover - Spring Side Stand	1	
17	JL 1132 02	Bracket Side Stand Mtg	1	

Tube / Tyre / Rim

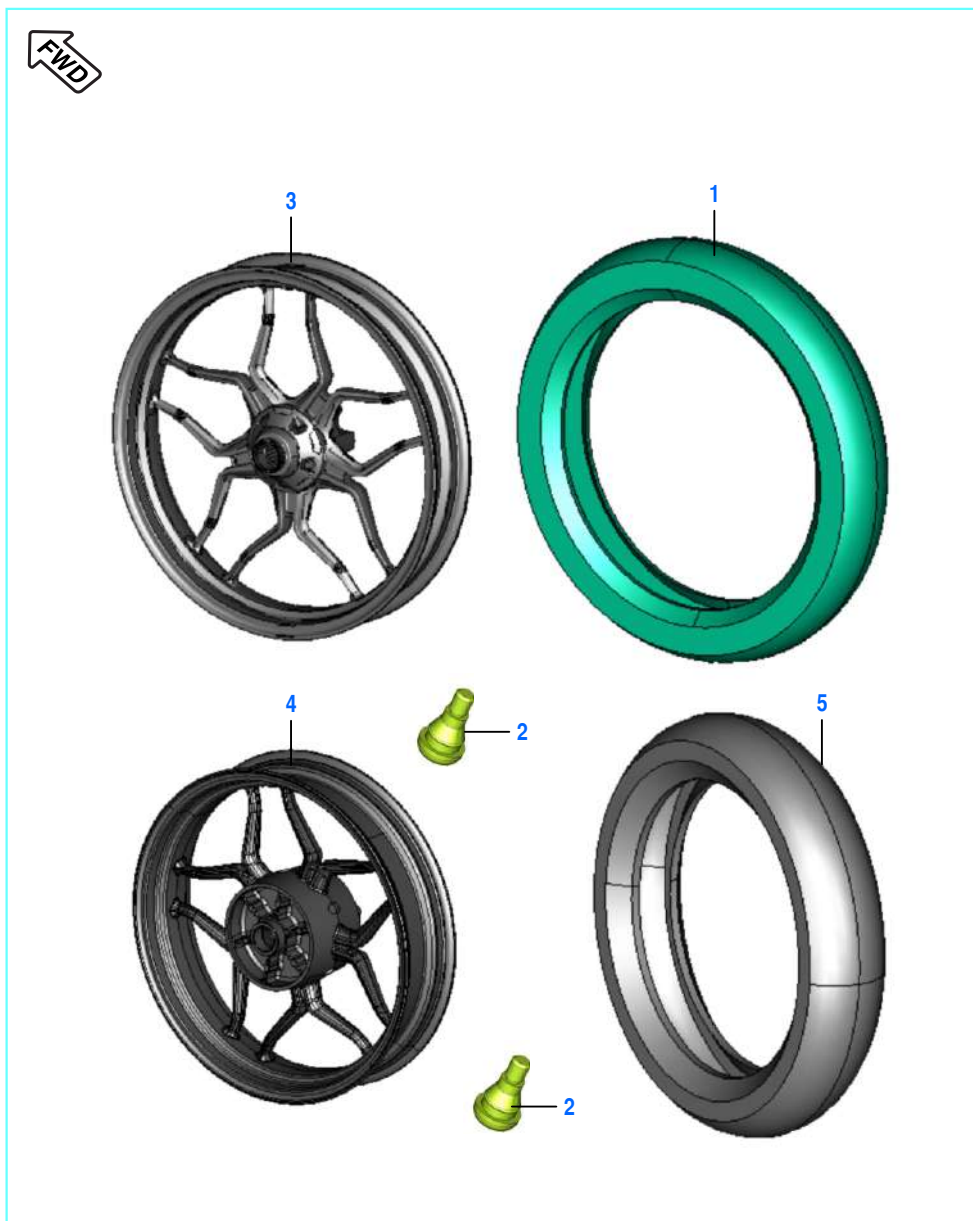


No.	Part No.	Description	Qty.	Remarks
1	JL 1310 06	Tyre Tubeless (Size 100/80-17)	1	Not Serviceable
2	DK 1510 26	Valve Tubeless Tyre	2	
3	JL 1310 04	Wheel Rim 2.5X17	1	
4	JL 1312 09	Wheel Rim 3.5X17	1	
5	JL 1312 19	Tyre 130/70-17	1	Not Serviceable

Front Hub

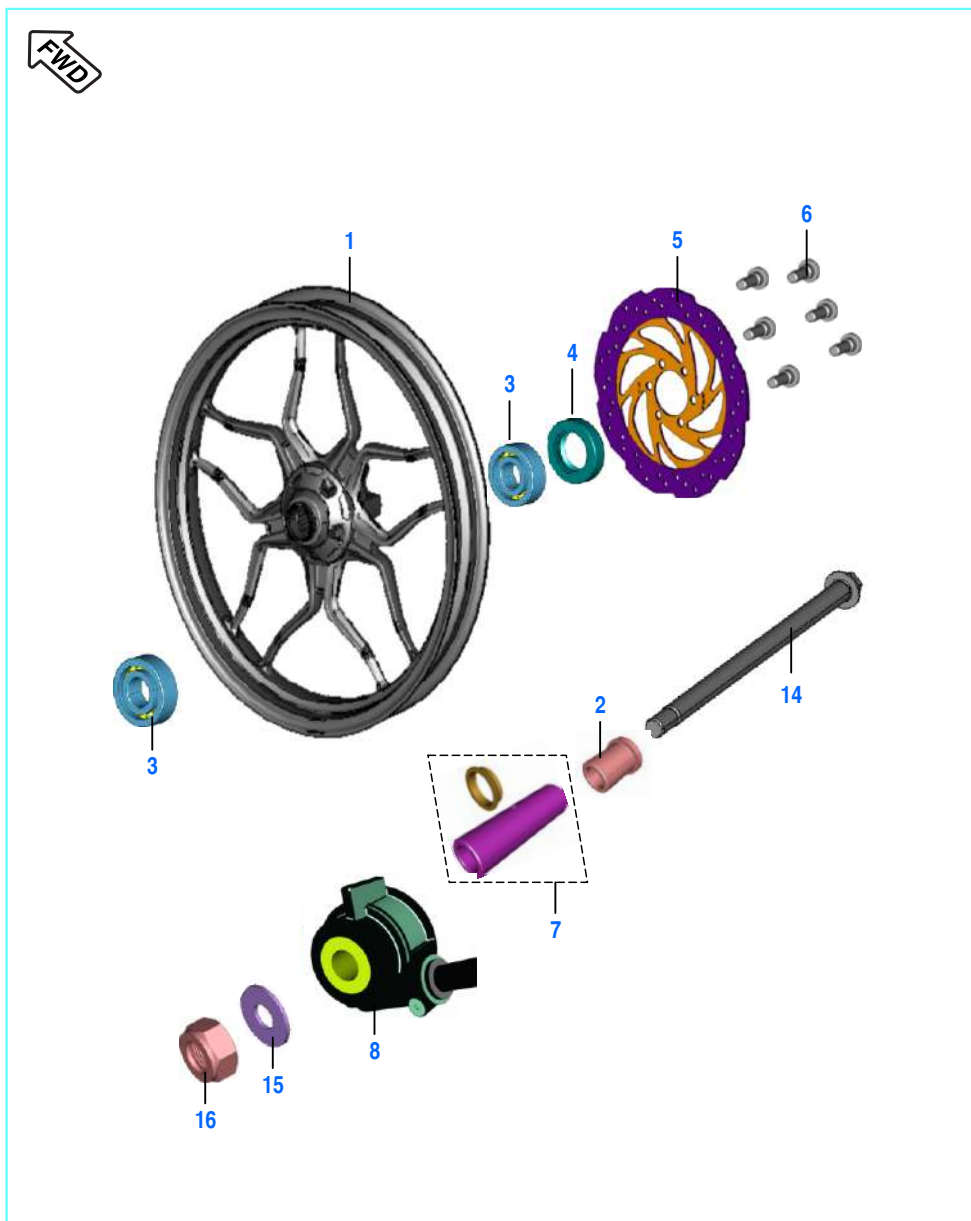


No.	Part No.	Description	Qty.	Remarks
1	JL 1310 04	Wheel Front	1	
2	JG 1310 01	Spacer	1	
3	39 2241 20	Bearing - Ball	2	
4	DG 1510 05	Seal - Oil	1	
5	JL 1310 05	Disc Front	1	
6	JD 1318 11	Special Bolt M8	6	
7	JL 1310 00	Collar	1	
8	JC 1510 20	Case Meter Housing(W/O Sensor)	1	
10	JC 2010 46	Stopper	1	N.I. Sensor Mtg
11	59 2100 19	'O' Ring	1	N.I. Sensor
12	39 0900 12	Washer - Spring	1	N.I. Sensor Mtg
13	39 0840 01	Screw Pan Cross - M4	1	N.I. Sensor Mtg
14	JL 1310 01	Axle	1	
15	LD B000 29	Washer	1	
16	LC J000 02	Nut - U M14	1	

Front Master Cylinder

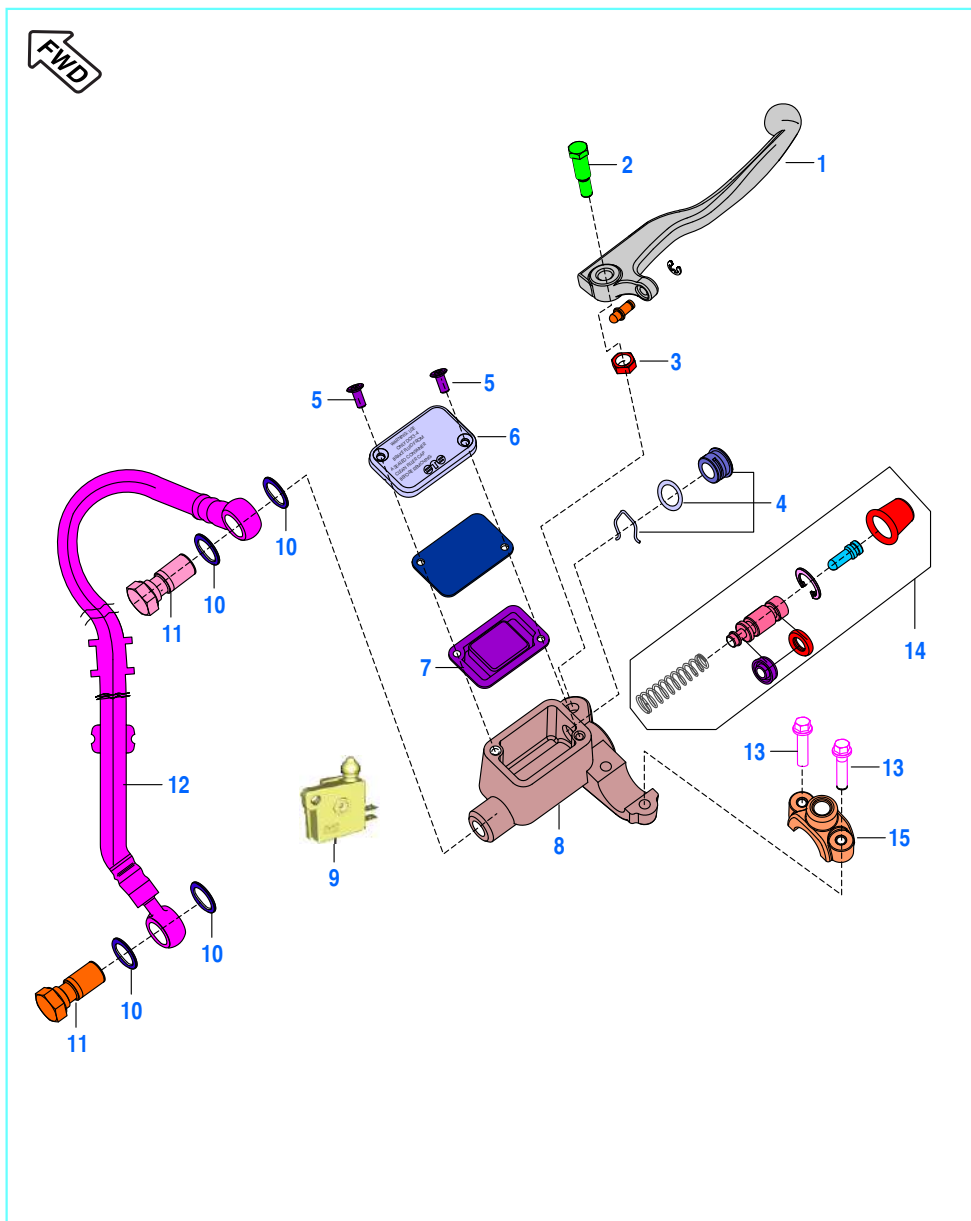


No.	Part No.	Description	Qty.	Remarks
1	DJ 1910 57	Lever Front Brake	1	
2	DJ 1910 29	Bolt Front Bracket I	1	
3	DJ 1910 30	Nut	1	
4	36 Dh19 02	Oil Window Kit	1	
5	DJ 1910 31	Screw	2	
6	DE 1910 29	Cover - Reservoir	1	
7	DE 1910 28	Diaphragm	1	
8	DJ 1910 56	Master Cylinder with lever	1	
9	DJ 2011 09	Front Brake Switch	1	
10	DE 1910 10	Washer - Copper	4	
11	DE 1910 11	Bolt - Banjo	2	
12	JL 1318 02	Hose Assembly	1	
13	LA D000 37	Bolt Flanged M8X1X50	2	
14	DJ 1910 23	Major Kit M-11		
15	DE 1910 33	Clamp - Holder : RH	1	

Front Disc Brake

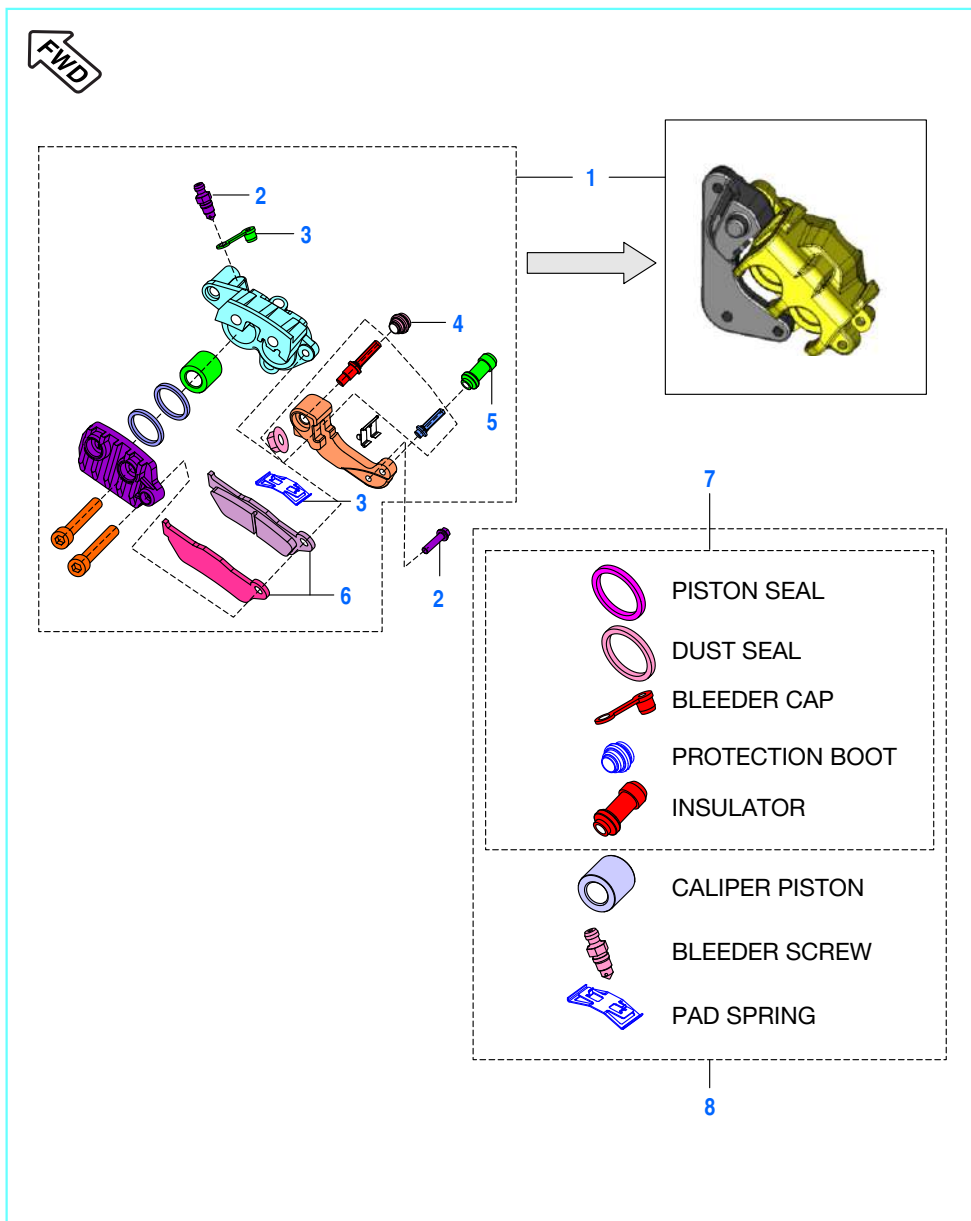


No.	Part No.	Description	Qty.	Remarks
1	JL 1318 04	Caliper Assy Brake Front	1	N.S.
2	JL 1318 06	Screw Bleeder	1	
3	DE 1510 47	Bleeder Cap	1	
4	JL 1318 07	Boot	1	
5	JL 1318 08	Spring	1	
6	JL 1318 05	Pad	1	
7	DJ 1510 74	Minor Kit	1	
8	DJ 1510 75	Major Kit	1	

Rear Hub

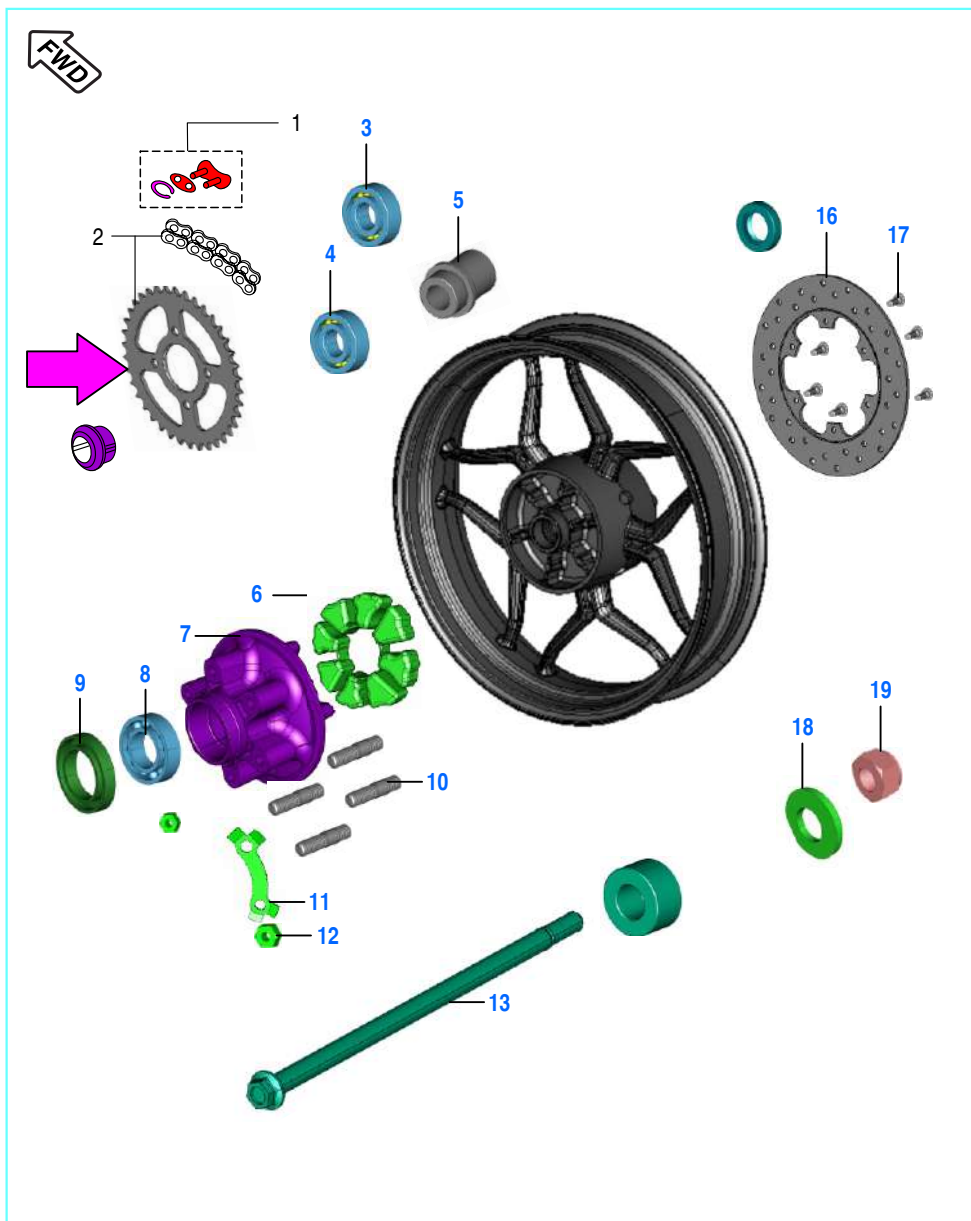


No.	Part No.	Description	Qty.	Remarks
1	DK 1510 36	Lock Set	1	
2	36 JL00 09	Kit Chain Sprocket	1	
3	39 2241 20	Bearing - Ball	1	
4	39 2242 20	Bearing - Ball	1	
5	JL 1312 16	Collar Bearing Assy	1	
6	JG 1312 19	Coupling Rubber	1	
7	JL 1312 25	Coupling	1	
8	DK 1510 13	Bearing Coupling	1	
9	DK 1510 12	Oil Seal	2	
10	LA A000 19	D Bolt	6	
11	JL 1312 26	Washer 6 Rubber	3	
12	LC A000 09	Nut	6	
13	JL 1312 03	Axle	1	
14	DK 1510 15	Sleeve	1	
15	JL 1312 11	Spacer for Coupling	1	
16	JL 1312 18	Disc Rear	1	
17	39 2038 04	Bolt Hex	6	
18	LD B000 29	Washer	2	
19	LC J000 02	Nut - U	1	
20	DK 1510 81	Spacer I	1	
21	DK 1510 82	Spacer II	1	

Rear Disc Brake System

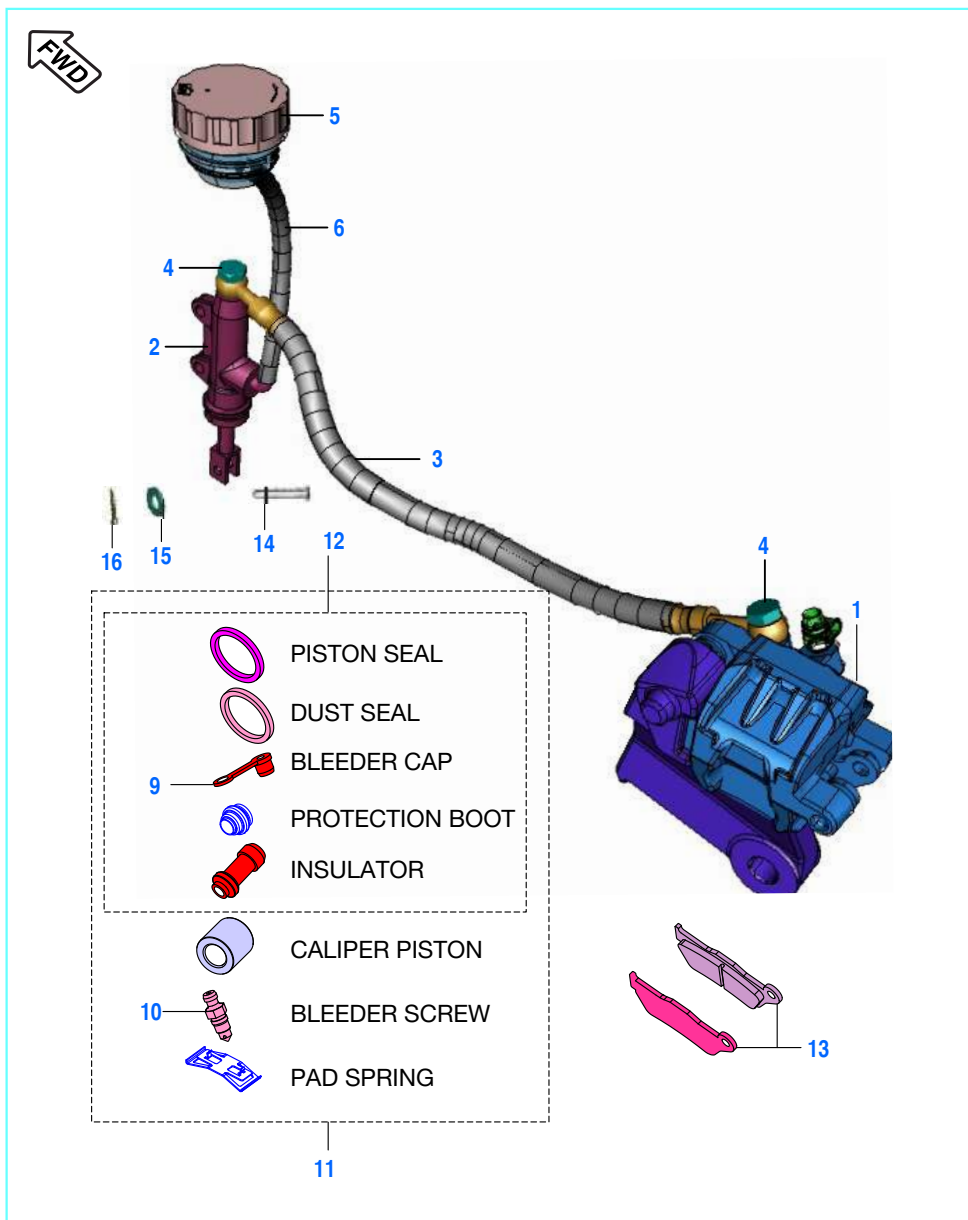


No.	Part No.	Description	Qty.	Remarks
1	DK 1510 83	Assembly Caliper	1	
2	DK 1510 31	Assembly Master Cyl. Rear	1	
3	JL 1318 03	Hose Disc Brake Rear	1	
4	DK 1510 69	Banjo Bolt	2	
5	JG 1318 21	Reservoir Rear Brake	1	
6	JL 1312 20	Hose - Reservoir	1	
7	DK 1510 63	Clip Reservoir	1	Cap Reservoir (N.I.)
8	DE 1910 10	Copper Washer	4	Banjo Bolt (N.I.)
9	DE 1510 47	Cap Bleeder Screw	1	
10	DE 1510 46	Bleeder Screw	1	
11	DK 1510 88	Caliper Piston Kit	1	N.I.
12	DK 1510 89	Caliper Piston Seal Kit	1	N.I.
13	DK 1510 85	Set Disc Pad	1	
14	30 1910 38	Pin	1	
15	39 0198 11	Washer Plain	1	
16	39 0808 08	Split Pin	1	
17	DK 1510 73	Master Cyl. Major kit	1	N.I.
18	DK 1510 74	Master Cyl. Minor kit	1	N.I.

Rear Brake Pedal

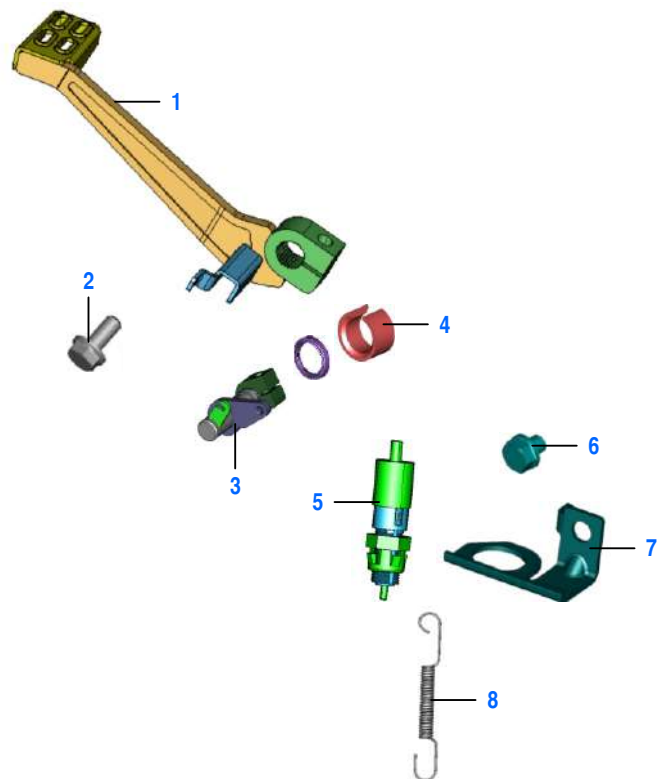


No.	Part No.	Description	Qty.	Remarks
1	JL 1610 01	Brake Pedal	1	
2	39 1769 04	Bolt - Flanged : M8	1	
3	JL 1610 10	Shaft Assy Brake Lever	1	
4	DH 1910 13	Spacer Brake Shaft assly.	1	
5	31 2010 79	Switch - Rear Brake	1	
6	39 2475 04	Hex. head bolt	1	
7	JL 1130 33	Bracket Rear brake switch	1	
8	JL 1610 06	Spring Rear Brake Switch	1	
9	DH 1910 06	Spring - Brake Pedal	1	N.I.

Handle Bar Assy

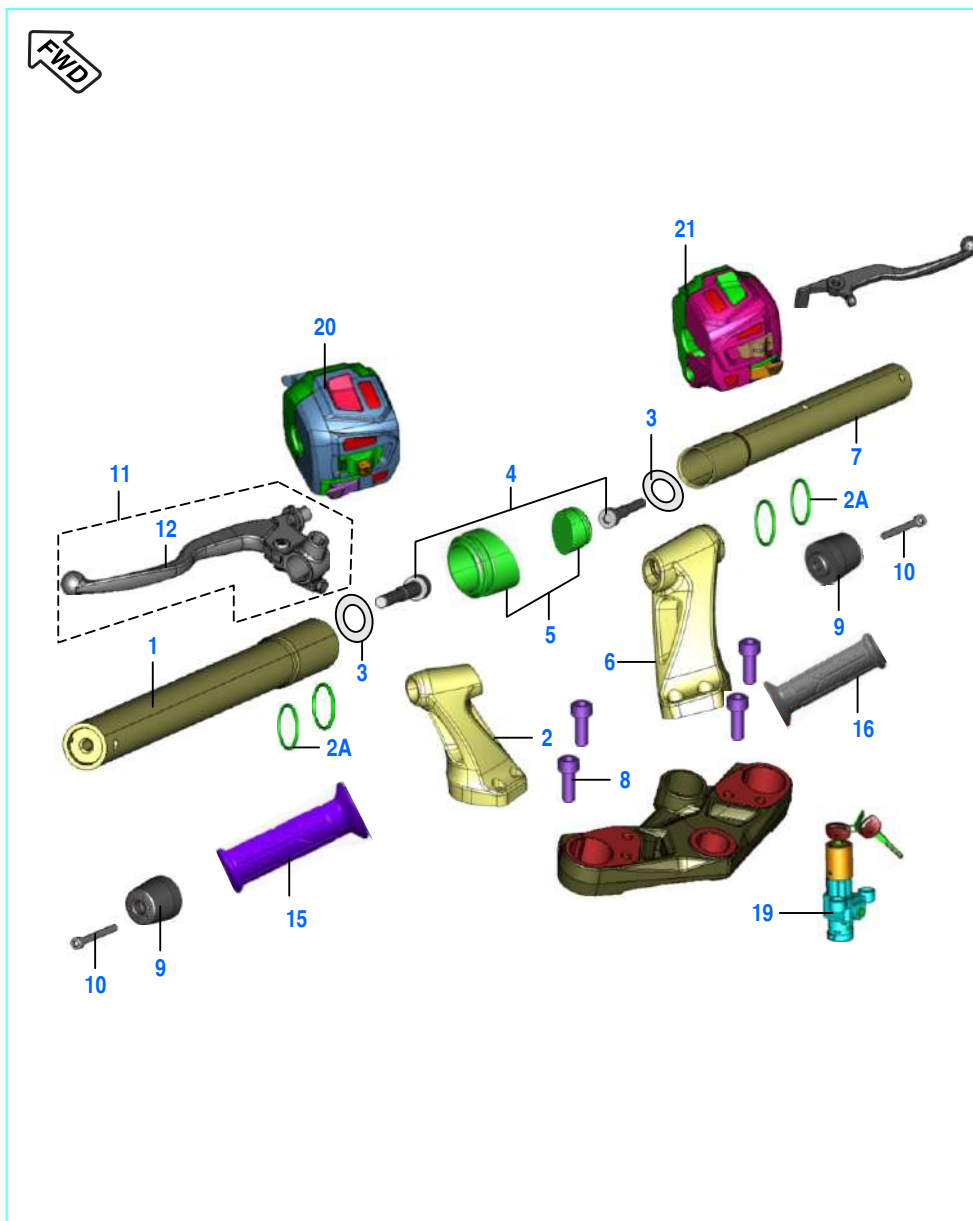


No.	Part No.	Description	Qty.	Remarks
1	JL 1510 21	Handle Bar Tube LH assly.	1	
2	JL 1510 26	Holder Handle LH	1	
2A	JL 1510 38	O ring	4	
3	39 1180 11	Washer - Plain	2	
4	LA C000 20	Bolt Socket M8X1.25Px55L	2	
5	JL 1510 28	Plug Handle Holder	2	
6	JL 1510 30	Holder Handle	1	
7	JL 1510 34	Handlebar Tube Assy RH	1	
8	DG 1810 08	Bolt - Socket	4	
9	JL 1510 35	Handlebar Weight	2	
10	39 2427 04	Bolt - Hexagon Socket Head Cap:M6	2	
11	DJ 1910 82	Lever & Support Holder Assly LH	1	
12	DJ 1910 83	Lever LH For New Clutch Switch	1	
13	DJ 2012 46	Clutch Switch (6Amp Diode)	1	N.I.
14	DD 1910 15	Clamp - Rubber	1	
15	JL 1610 03	Handle Grip LH	1	
16	JL 1610 08	Grip Hand Assy RH	1	
17	DH 1910 17	Pipe - Throttle	1	N.I.
18	JL 1510 23	Lock Set 3 In 1	1	N.I.
19	JL 4014 03	Switch Ignition	1	
20	JL 4014 00	Switch Control LH	1	
21	JL 4014 01	Switch Control RH	1	

Front Fork

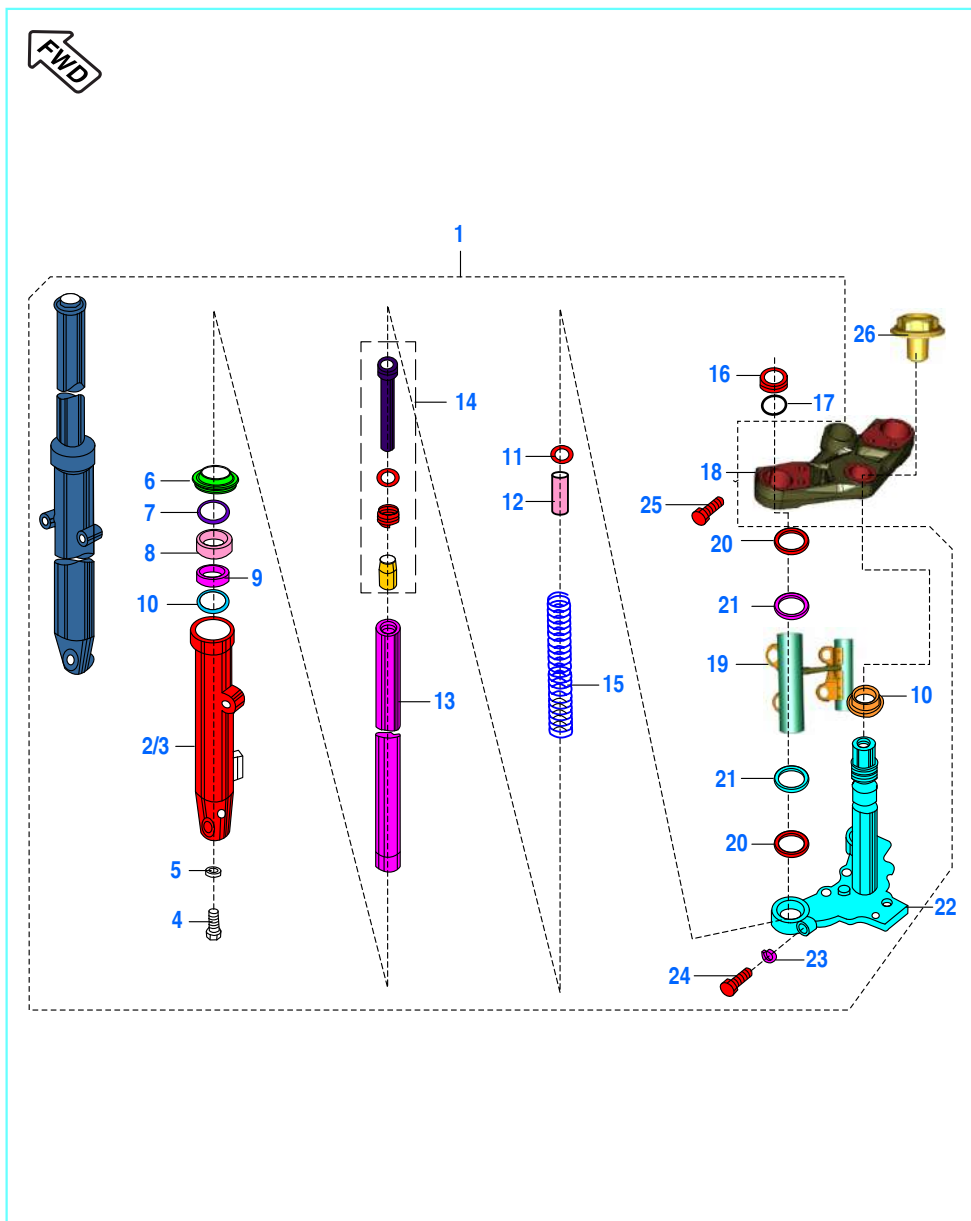


No.	Part No.	Description	Qty.	Remarks
1	JL 1510 24	Fork Assly- Front	1	
2	JL 1510 02	Tube Outer LH	1	
3	JL 1510 03	Tube Outer RH	1	
4	DK 1810 06	Socket Headed Bolt - M10 X1.5X35	2	
5	DK 1810 07	Copper Washer	2	
6	DK 1810 21	Inner Dust Seal	2	
7	DK 1810 18	Washer Seal	2	
8	DK 1810 19	Oil Seal	2	
9	DK 1810 17	Guide Bush	2	
10	DK 1810 20	Oil Seal Stopper	2	
11	DK 1810 15	Washer	2	
12	JL 1510 12	Spacer Tube	2	
13	JL 1510 04	Fork Pipe Spinning	2	
14	DK 1810 09	Cap Oil Lock	2	
	DK 1810 10	Seat Pipe	2	
	DK 1810 12	Piston Ring	2	
	DK 1810 13	Rebound Spring	2	
15	DK 1810 73	Spring Main Spring	2	
16	DK 1810 22	Fork Bolt	2	
17	DK 1810 23	O' Ring	2	
18	JL 1510 32	Upper Bracket	1	
19	JL 1812 35	Lamp Shade Assy	1	
20	JC 1810 23	Cover Cushion	4	
21	JC 1810 22	Cove Trail B	4	

Front Fork

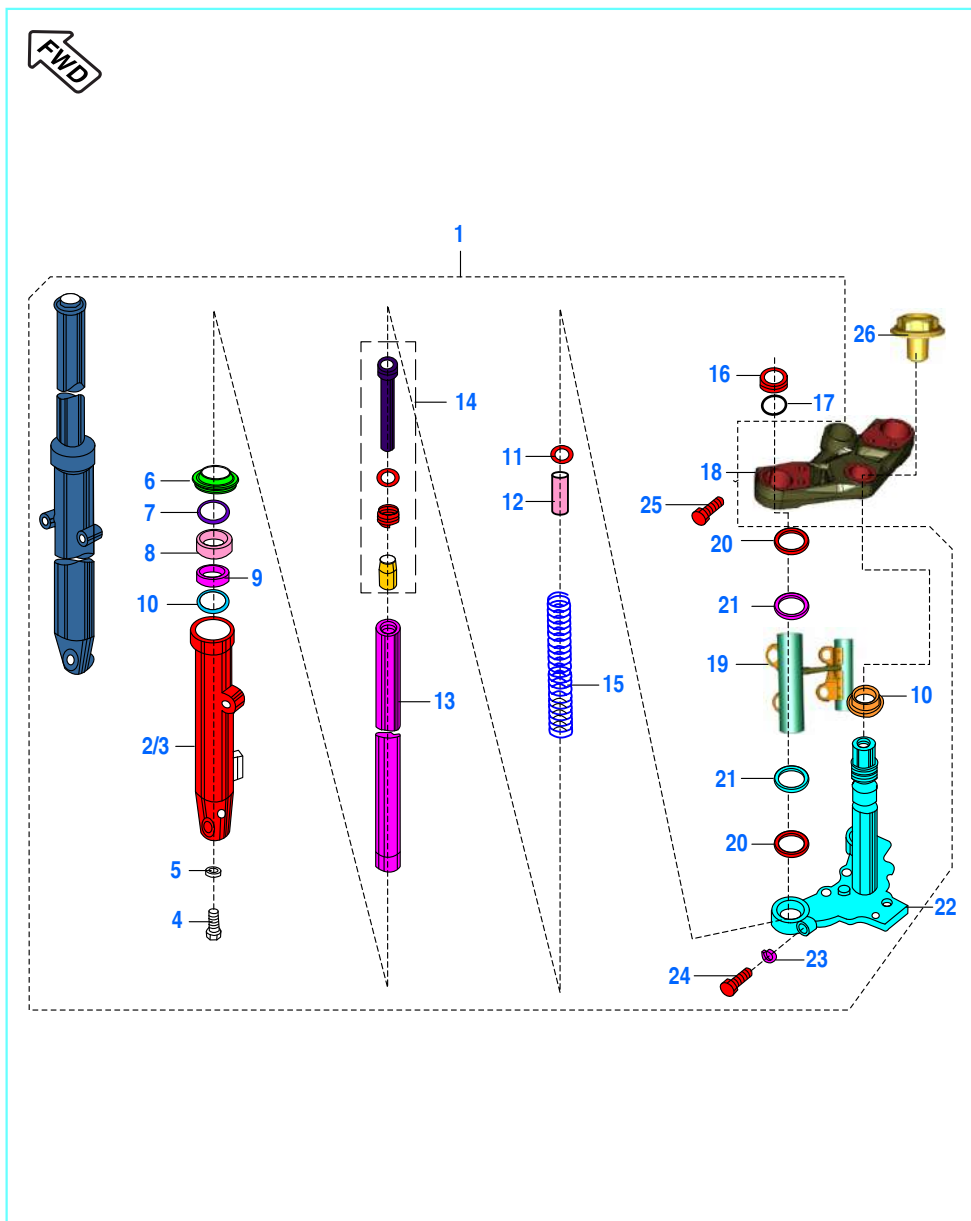


No.	Part No.	Description	Qty.	Remarks
22	JL 1510 37	Under Bkt Assy Complete	1	
23	DK 1810 25	Spring Washer	2	
24	DK 1810 28	Bolt	2	
25	DG 1810 08	Bolt - Socket	2	
26	JL 1510 36	Steering Top Bolt	1	

Painted Parts and Decals

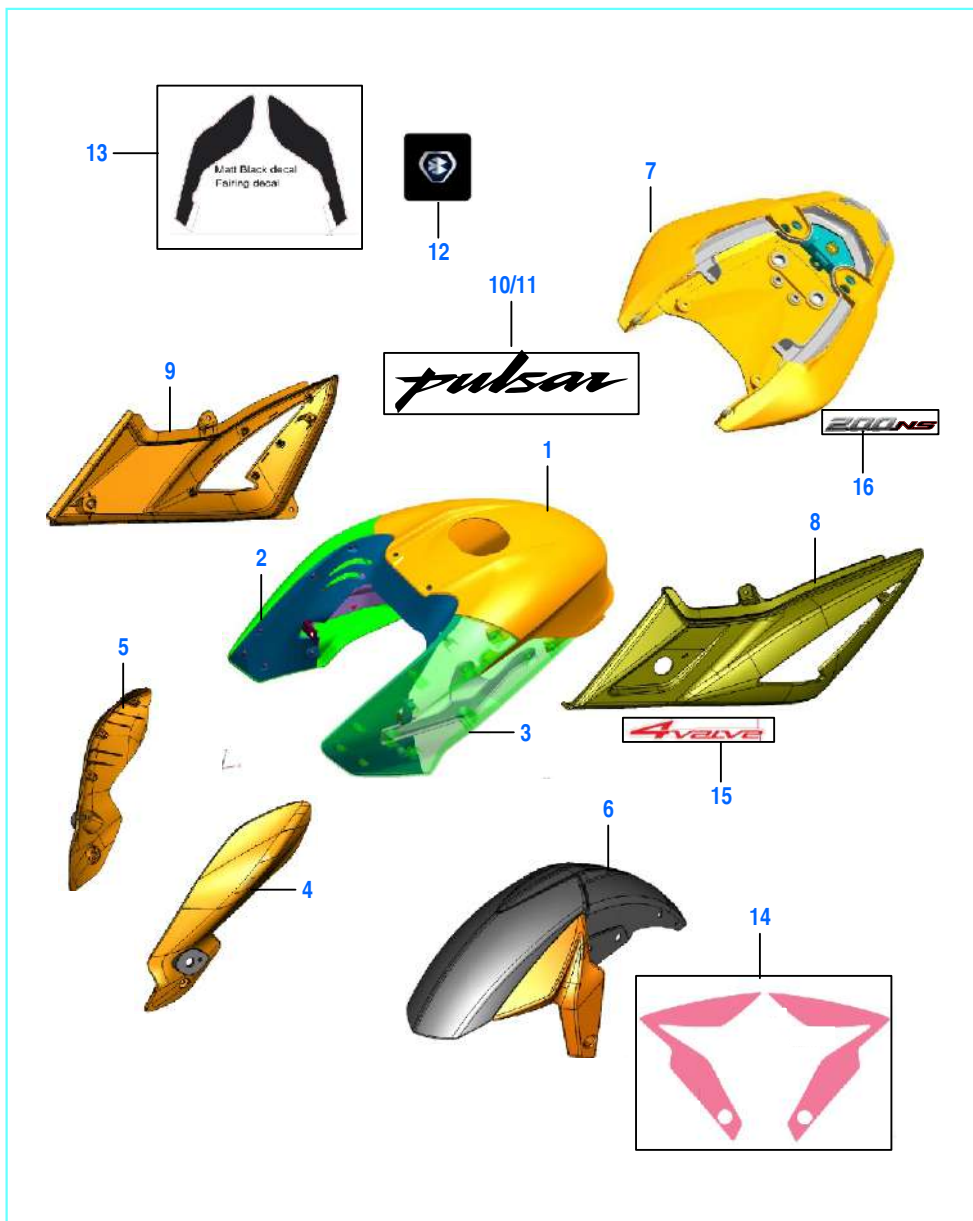


No.	Part No.	Description	Qty.	Remarks
1	JL 7401 5P	Tank Cover Top P200 Saffire Blue	1	
	JL 7401 5N	Tank Cover Top P200 Black	1	
	JL 7401 5Q	Tank Cover Top P200 Yellow	1	
	JL 7401 5M	Tank Cover Top P200 Red	1	
2	JL 7301 5P	Tank Cover Side LH - Saffire Blue	1	
	JL 7301 5N	Tank Cover Side LH - Black	1	
	JL 7301 5Q	Tank Cover Side LH - Yellow	1	
	JL 7301 5M	Tank Cover Side LH - Red	1	
3	JL 7302 5P	Tank Cover Side RH - Saffire Blue	1	
	JL 7302 5N	Tank Cover Side RH - Black	1	
	JL 7302 5Q	Tank Cover Side RH - Yellow	1	
	JL 7302 5M	Tank Cover Side RH - Red	1	
4	JL 7602 5P	Side Mask RH - Saffire Blue	1	
	JL 7602 5N	Side Mask RH - Black	1	
	JL 7602 5Q	Side Mask RH - Yellow	1	
	JL 7602 5M	Side Mask RH - Red	1	
5	JL 7601 5P	Side Mask LH - Blue	1	
	JL 7601 5N	Side Mask LH - Black	1	
	JL 7601 5Q	Side Mask LH - Yellow	1	
	JL 7601 5M	Side Mask LH - Red	1	
6	52 JL00 65	Front Fender Blue	1	
	52 JL00 66	Front Fender Black	1	
	52 JL00 67	Front Fender Yellow	1	
	52 JL00 59	Front Fender Red	1	

Painted Parts and Decals

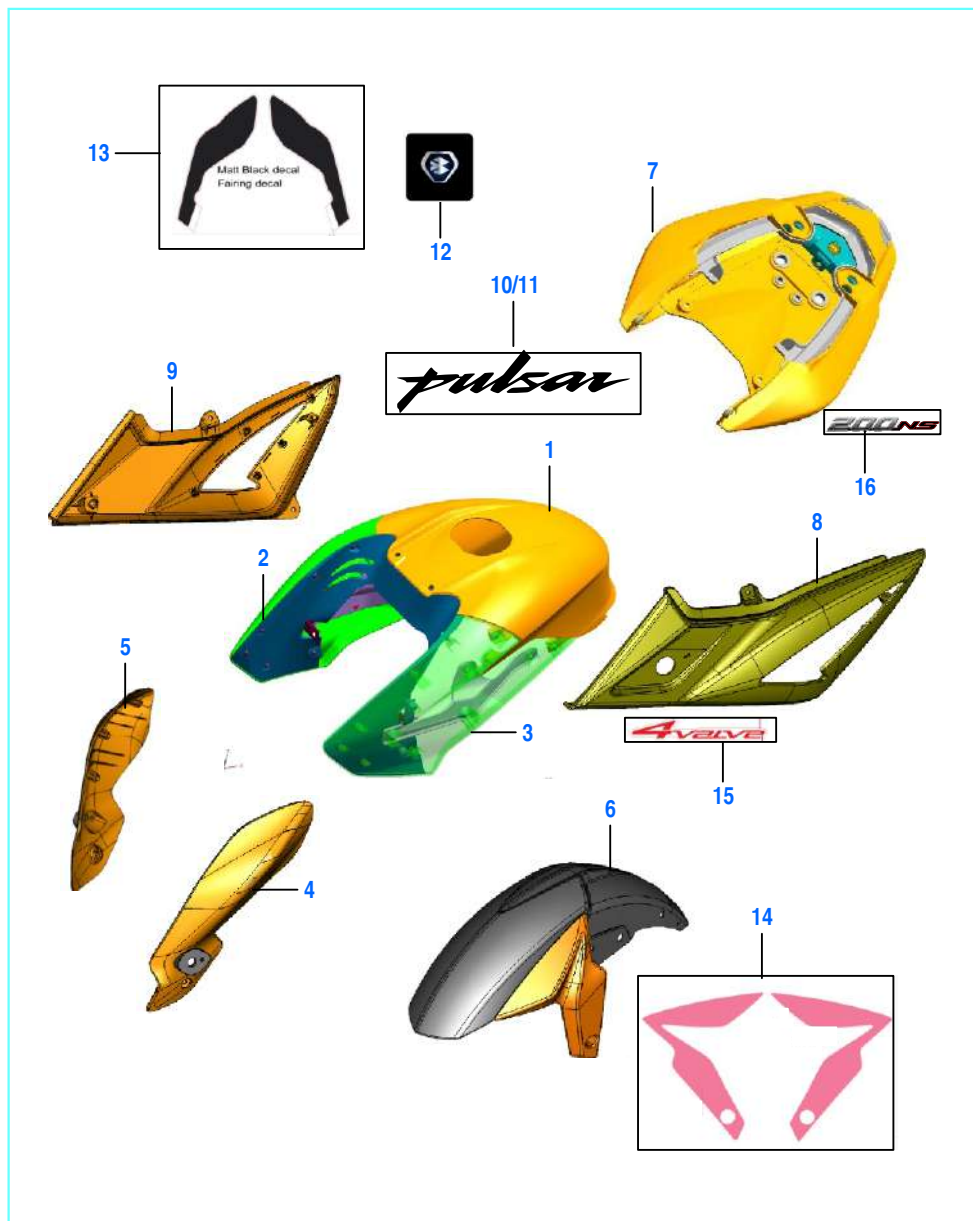


No.	Part No.	Description	Qty.	Remarks
7	JL 7801 5P	Seat Cowl Assy - Blue	1	Common
	JL 7801 5N	Seat Cowl Assy - Black	1	
	JL 7801 5Q	Seat Cowl Assy - Yellow	1	
	JL 7801 5M	Seat Cowl Assy - Red	1	
8	52 JL00 54	Cover Side LH Assly	1	
9	52 JL00 55	Cover Side H Assly	1	
10	JL 2330 04	3D Decal Tank RH	1	
11	JL 2330 03	3D Decal Tank LH	1	
12	JL 2330 02	'B' Logo	1	
13	36 JL00 26	Fairing DCL	1	
14	36 JL00 27	Fender DCL-Red	1	
	36 JL00 28	Fender DCL-Blue	1	
	36 JL00 29	Fender DCL-Black	1	
	36 JL00 30	Fender DCL-Yellow	1	
15	JL 2330 05	Decal Side Cover 4 Valve	2	
16	JL 2330 06	Decal Seat Cowl 200 NS	2	

Radiator Covers

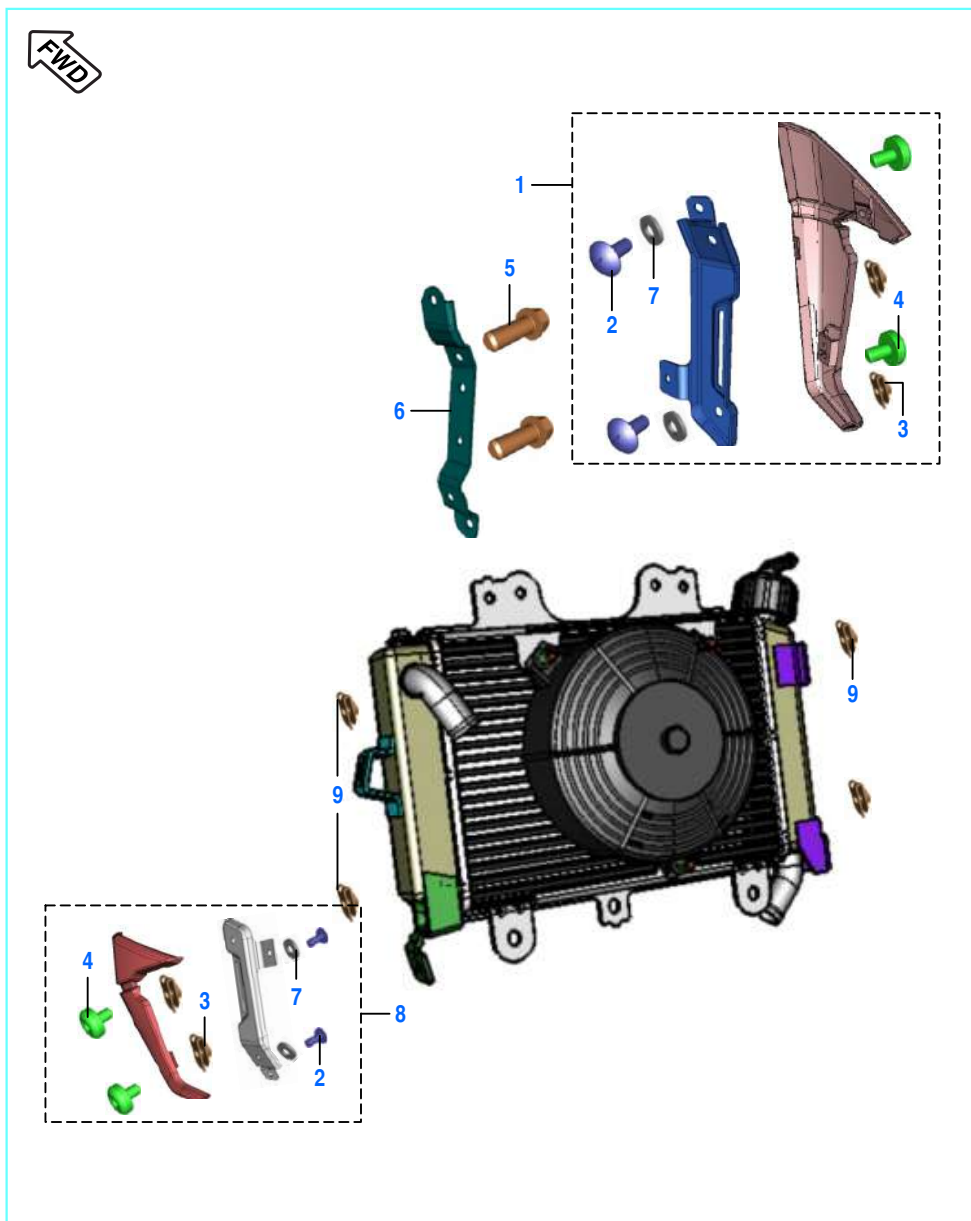


No.	Part No.	Description	Qty.	Remarks
1	JL 1812 29	Shroud Assy RH	1	
2	KB UB05 12	Screw Trus	4	
3	JW 1812 36	Clip Nut M5	4	
4	KB UA06 12	Screw - Truss	4	
5	39 1672 04	Bolt - Flange : M6 X 16	2	
6	JL 1812 32	Shroud Mtg Bkt RH	1	
7	39 2141 24	Washer (Non Metallic Round Washer)	4	
8	JL 1812 26	Shroud Assy LH	1	
9	DJ 1810 85	Clip Nut M5	4	

Petrol Tank, Cap Tank and Gauge Fuel

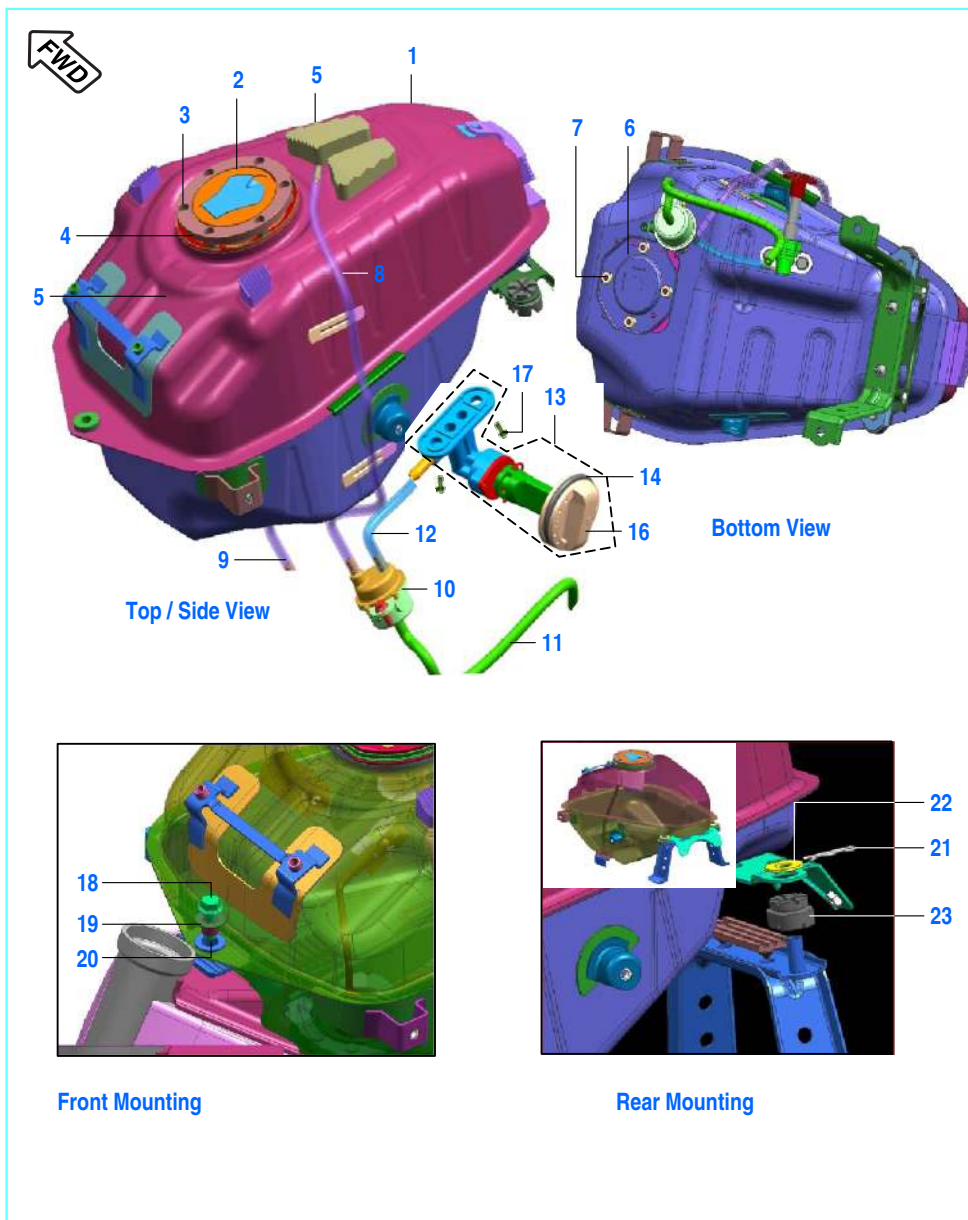


No.	Part No.	Description	Qty.	Remarks
1	JL 1710 44	Tank Assembly	1	
2	JL 1716 00	Cap Tank	1	
3	39 2381 04	Bolt - Hexagon Socket Head Cap:M5	6	
4	JL 1710 49	Damper Ring Tank Cap	1	
5	36 J100 12	Kit Tank Damper	1	
6	JL 4026 00	Sensor Fuel Level	1	
6A	39 2758 21	'O' ring for Fuel Sensor	1	N.I.
7	39 2484 15	Nut - Flange :- M5	4	
8	JL 1710 37	Breather Tube	1	
9	JL 1710 63	Pipe - Drain	1	
10	JL 1718 02	Filter Inline	1	
11	JL 1710 36	Tube Fuel (Carburettor)	1	
12	JL 1710 35	Tube Fuel (Tank)	1	
13	JL 1718 00	Tap Fuel Assembly	1	
14	JL 1710 60	O Ring-For Knob	1	
15	JL 1718 03	Pin Snap For Knob	1	
16	JL 1718 01	Knob Fuel Tap	1	
17	DD 1410 22	Bolt - Flanged	2	
18	39 1946 04	Bolt Tank mtg Front	1	
19	JL 1710 19	Sleeve Tank Mtg Front	3	
20	JL 1710 18	Grommet Tank Mtg Front	1	
21	BA 1220 03	Clip - Pipe	6	
21	39 0983 08	Pin Snap	1	
22	39 1054 11	Washer Plain	2	
23	JL 1710 20	Grommet Tank Mtg Rear	2	

Fittings - Petrol Tank Cover, Side Covers & Cover Seat

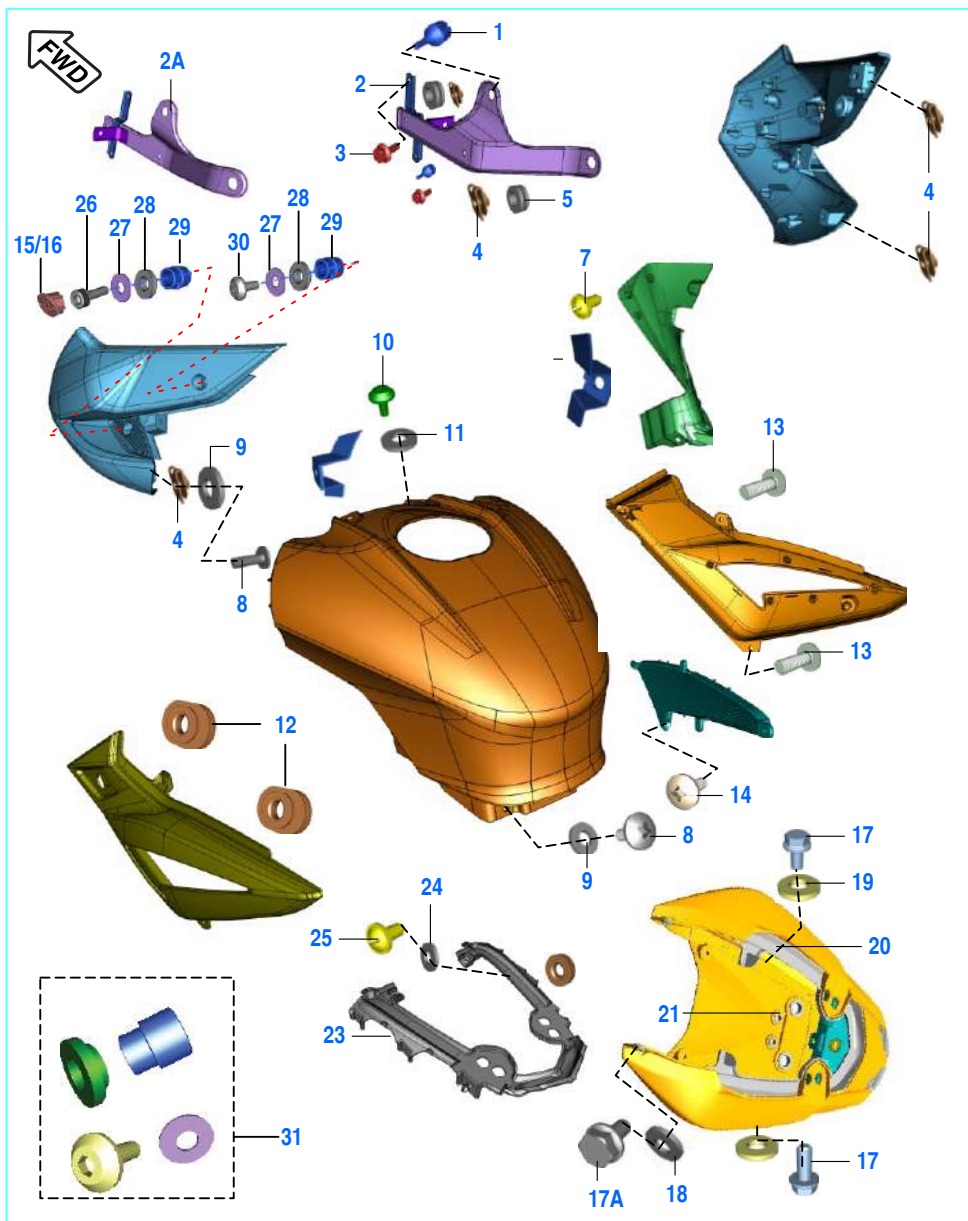


No.	Part No.	Description	Qty.	Remarks
1	JL 1710 57	Damper	4	
2	JL 1710 23	Bracket Side Cover Mtg Rh	1	
2A	JL 1710 22	Bracket Side Cover Mtg LH	1	
3	39 2060 04	Bolt - Flanged	2	
4	DJ 1612 29	Clip Nut	16	
5	JL 1710 24	Damper Structure Mtg	2	
6	JL 1710 48	Tank Cover Central	1	
7	39 1778 02	Screw - Tapping : 4 X 14	12	
8	39 1907 01	Screw - Truss Cross : M5	8	
9	39 2141 24	Washer (Non Metallic Round Washer)	8	
10	LA C000 22	Bolt Socket-Special Head	4	
11	31 1610 78	Washer	4	
12	DS 1410 12	Grommet Side Cover	4	
13	39 1781 01	Screw	4	
14	59 0200 01	Screw Self Tapping 3.5X9.5	5	
15	JL 1710 62	Cover Mesh Rh	1	
16	JL 1710 61	Cover Mesh LH	1	
17	59 0400 14	Bolt Flanged M6X1	4	
17A	39 1943 04	Bolt - Flanged	2	
18	xx xxxx xx	Washer	2	
19	39 0239 11	Washer	2	
20	39 1076 01	Screw - M6	2	
21	DL 1610 15	Grommet	2	
22	JL 1812 19	Grommet	2	
23	JL 1812 14	Seal cowl inner	1	
24	LD A000 07	Washer Plain Small	4	
25	39 1776 02	Screw	4	
26	39 1197 04	Bolt - Socket :- M6	2	
27	39 0239 11	Washer	8	
28	JL 1710 70	Rubber Grommet	8	
29	JL 1710 71	Tank Cover Mtg Sleeve	8	
30	LA C000 34	Bolt M6 X 20	2	
31	36 JL00 31	Kit Tank Mtg Hardware	1	

Meter Assembly

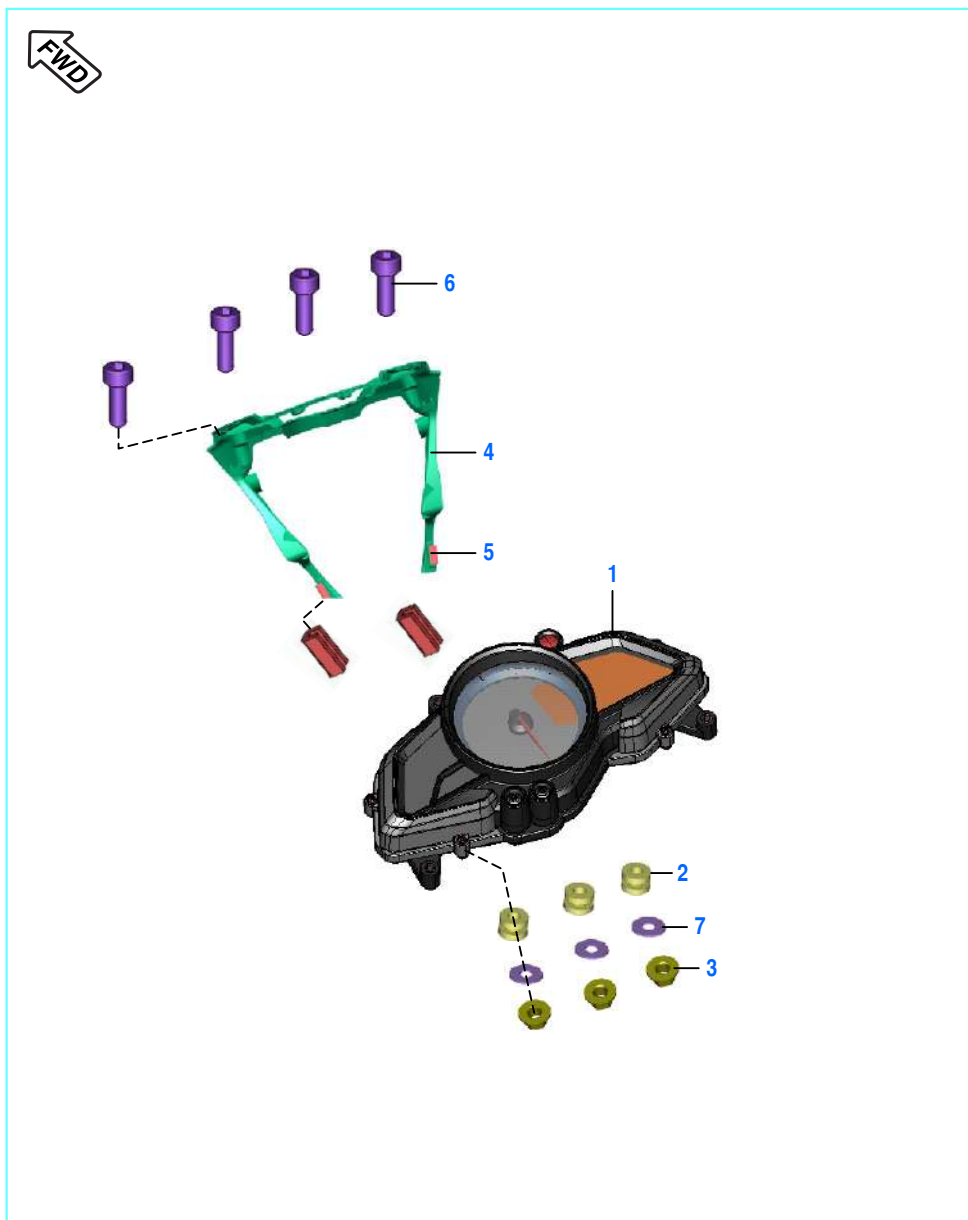


No.	Part No.	Description	Qty.	Remarks
1	JL 4024 00	Speedometer Assembly	1	
2	JG 1812 38	Grommet Dashboard	3	
3	39 0291 15	Nut - Hexagon :- M5 X 0.8	3	
4	JL 1812 41	Assembly Speedo Flap	1	
5	JB 1812 23	Beading Speedo Flap	2	
6	KA CB05 14	Bolt-Socket-Kac St-B Dia-05 L-14	4	
7	LD B000 07	Washer Plain	3	
8	JL 4024 03	Speedometer Harness	1	N.I.

Control Cables

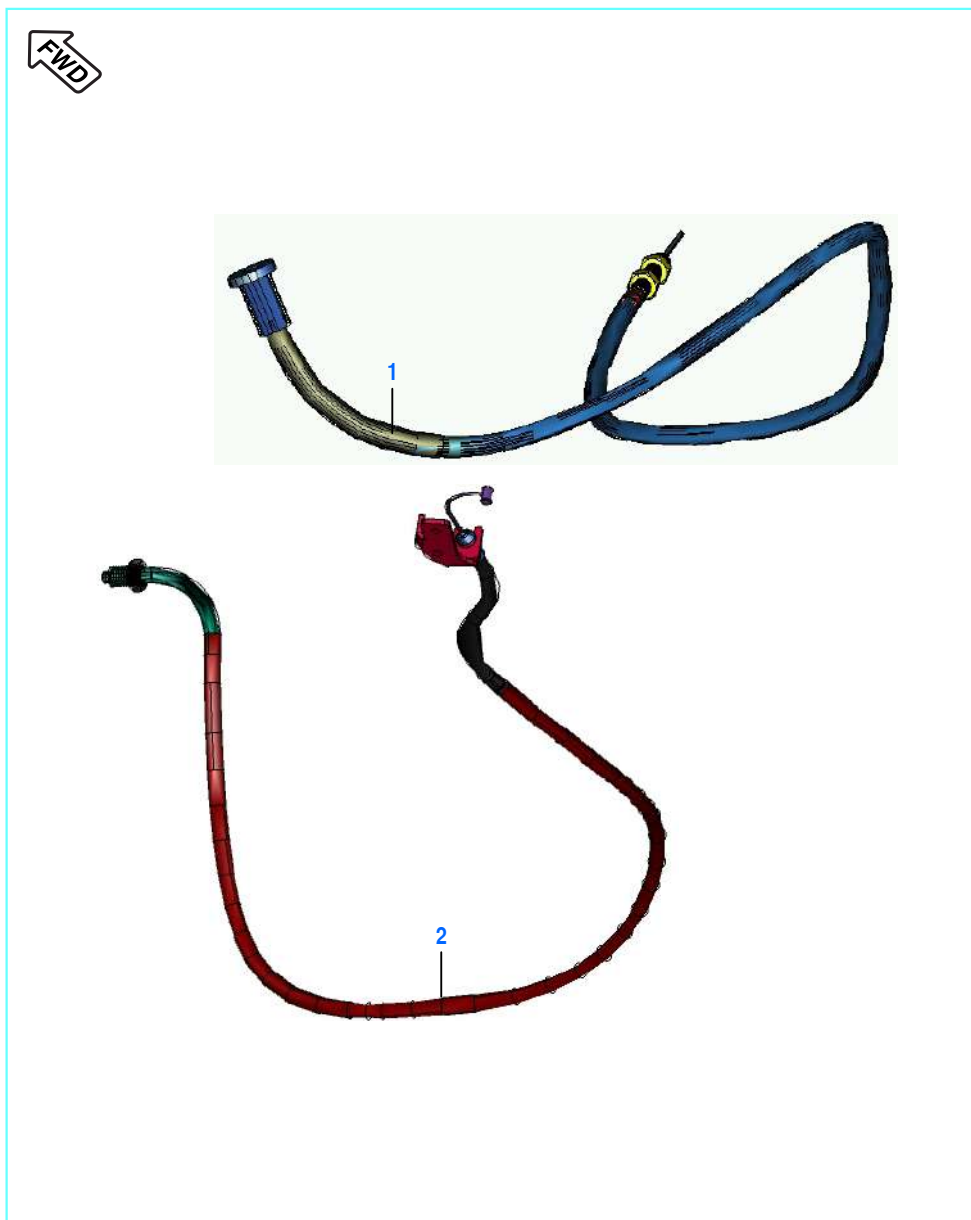


No.	Part No.	Description	Qty.	Remarks
1	JL 1612 01	Cable Throttle	1	
2	JL 1612 00	Cable Clutch	1	
3	JC 1510 19	Speed Sensor Assly.	1	N.I.

Chain Case

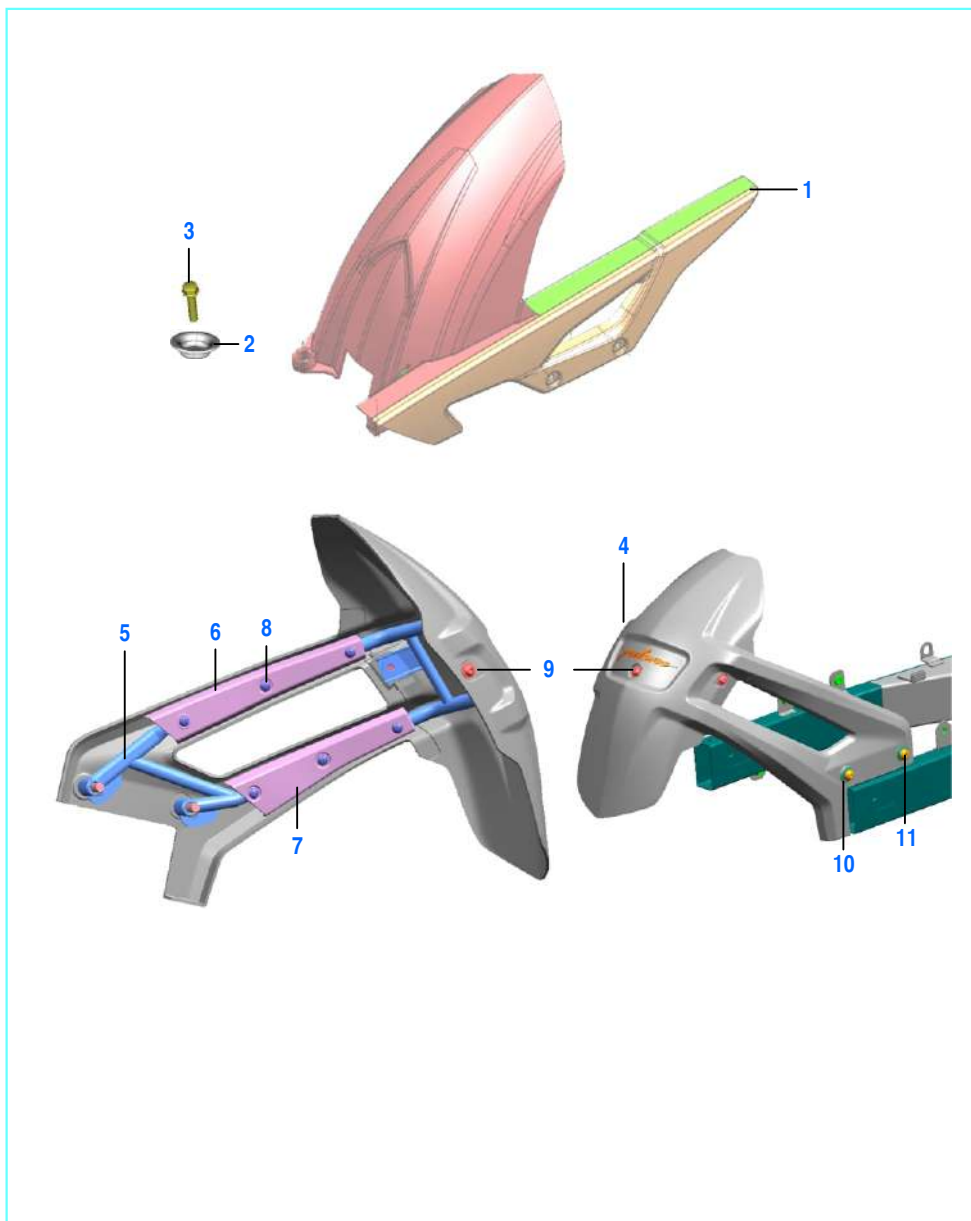


No.	Part No.	Description	Qty.	Remarks
1	JL 1812 05	Cover Assly Chain	1	
2	JG 1220 28	Extruded Washer	2	
3	39 1791 04	Bolt Flanged M6X8	2	
4	JL 1814 09	Asly Hugger Rear	1	
5	JL 1810 06	Tube Rear Hugger Mtg	1	
6	JL 1814 07	Cover 1- Hugger Rear	1	
7	JL 1814 08	Cover 2- Hugger Rear		
8	KB UB04 10	Screw	6	
9	LA C000 37	Bolt Soc-special Head	3	
10	39 0265 12	Spring Washer	2	
11	LA C000 36	Bolt Special Socket	2	
12	JL1814 10	Collar Hugger Rear	2	

Head Lamp & Fairing

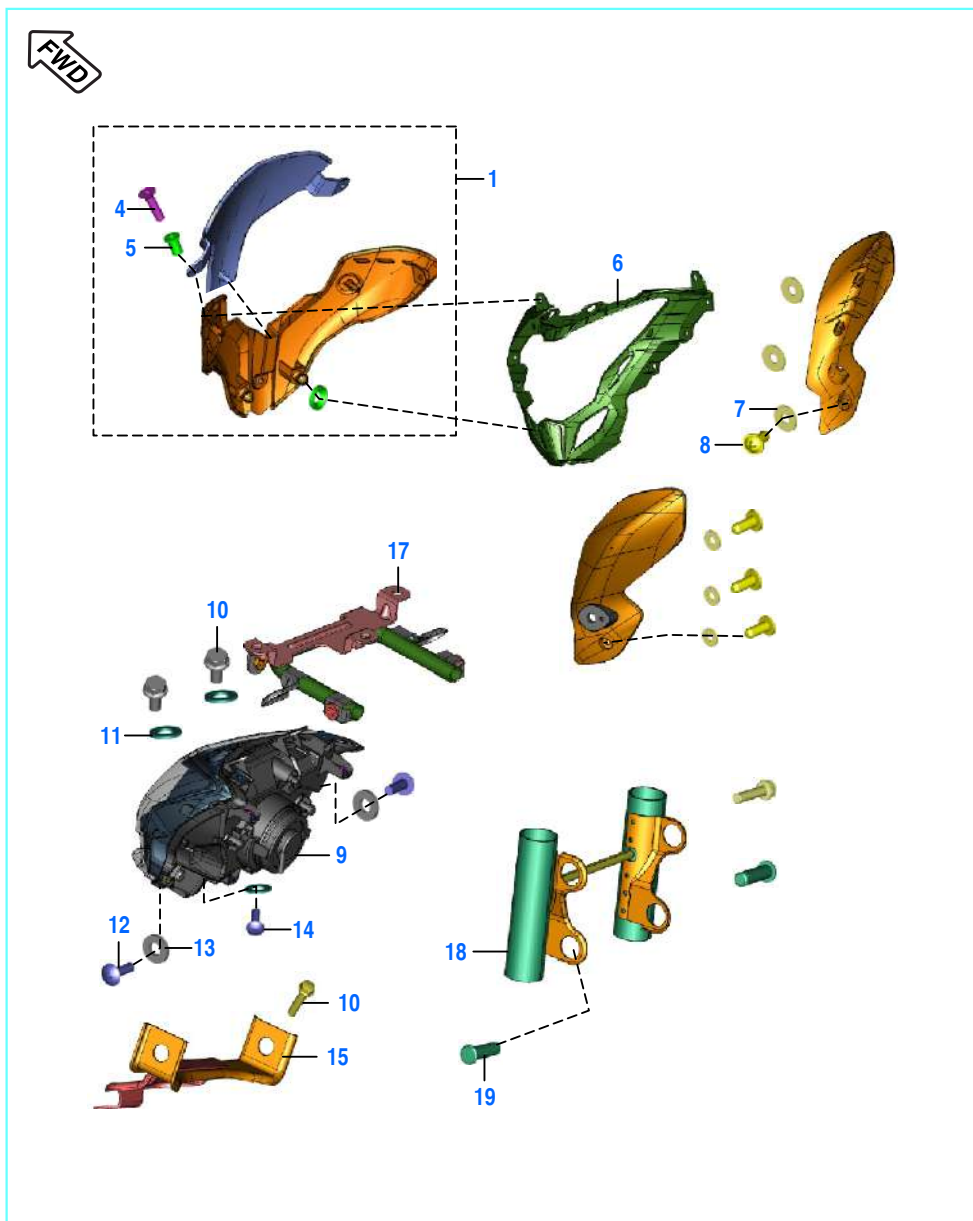


No.	Part No.	Description	Qty.	Remarks
1	JL 1810 08	Windshield Assembly	1	
2	JG 1812 36	Well Nut - M5 X 16 L	2	N.I.
3	JG 1812 35	Washer Special	2	N.I.
4	LB S000 01	Screw M5X20Lx4.8	2	
5	JL 1812 47	Grommet Wind Screen Mounting	2	
6	JL 1812 03	Fairing	1	
7	LD A000 07	Washer Plain Small	6	
8	LB R000 02	Self Tapping Screw - Dia 5	6	
9	JL 4010 12	Head Lamp Assy	1	
10	39 1943 04	Bolt - Flanged	2	
11	39 0198 11	Washer - Plain	3	
12	KB UC05 16	Screw - Truss - M5 X 16L, 4.8	2	
13	39 2141 24	Washer (Non Metallic Round Washer)	2	
14	39 1781 01	Round Head Screw	1	
15	JL 1812 36	Bracket Lower Mtg	1	
16	JL 1812 49	Damper Head Lamp	1	N.I.
17	JL 1812 37	Bracket Upper Mtg	1	
18	JL 1812 35	Lamp Shade assly.	1	
19	KA Cb08 35	Bolt Pivot Mass Carrier	4	
20	36 JL00 17	Kit Wind Shield Mtg	1	

Indicator Light Assembly

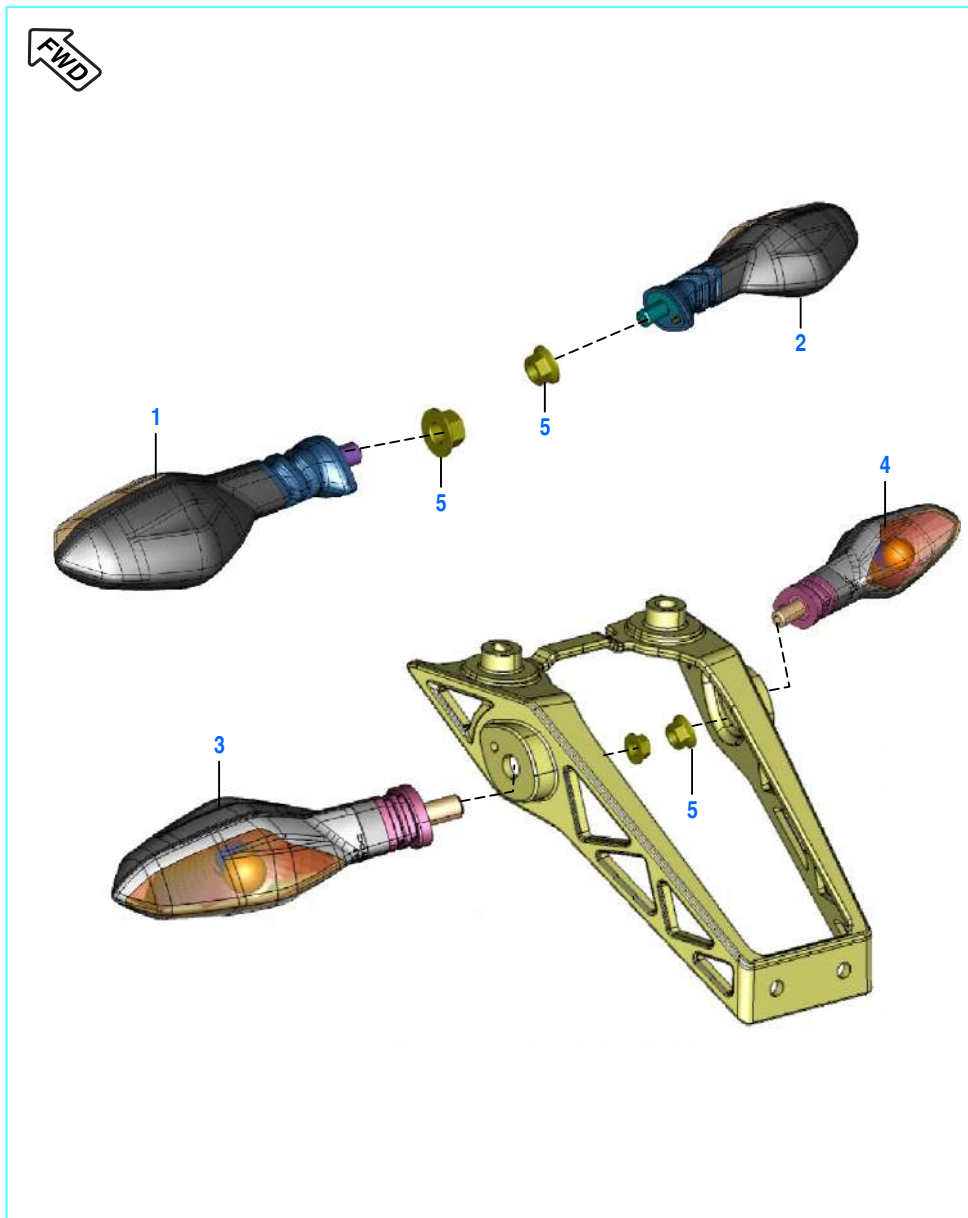


No.	Part No.	Description	Qty.	Remarks
1	JL 4010 05	Indicator Assy FR LH	1	
2	JL 4010 06	Indicator Assy FR RH	1	
3	JL 4010 03	Indicator Assy RR LH	1	
4	JL 4010 04	Indicator Assy RR RH	1	
5	39 1225 15	Nut - Hexagon With Flange : M10	4	

Tail Lamp Assly / Front Number Plate

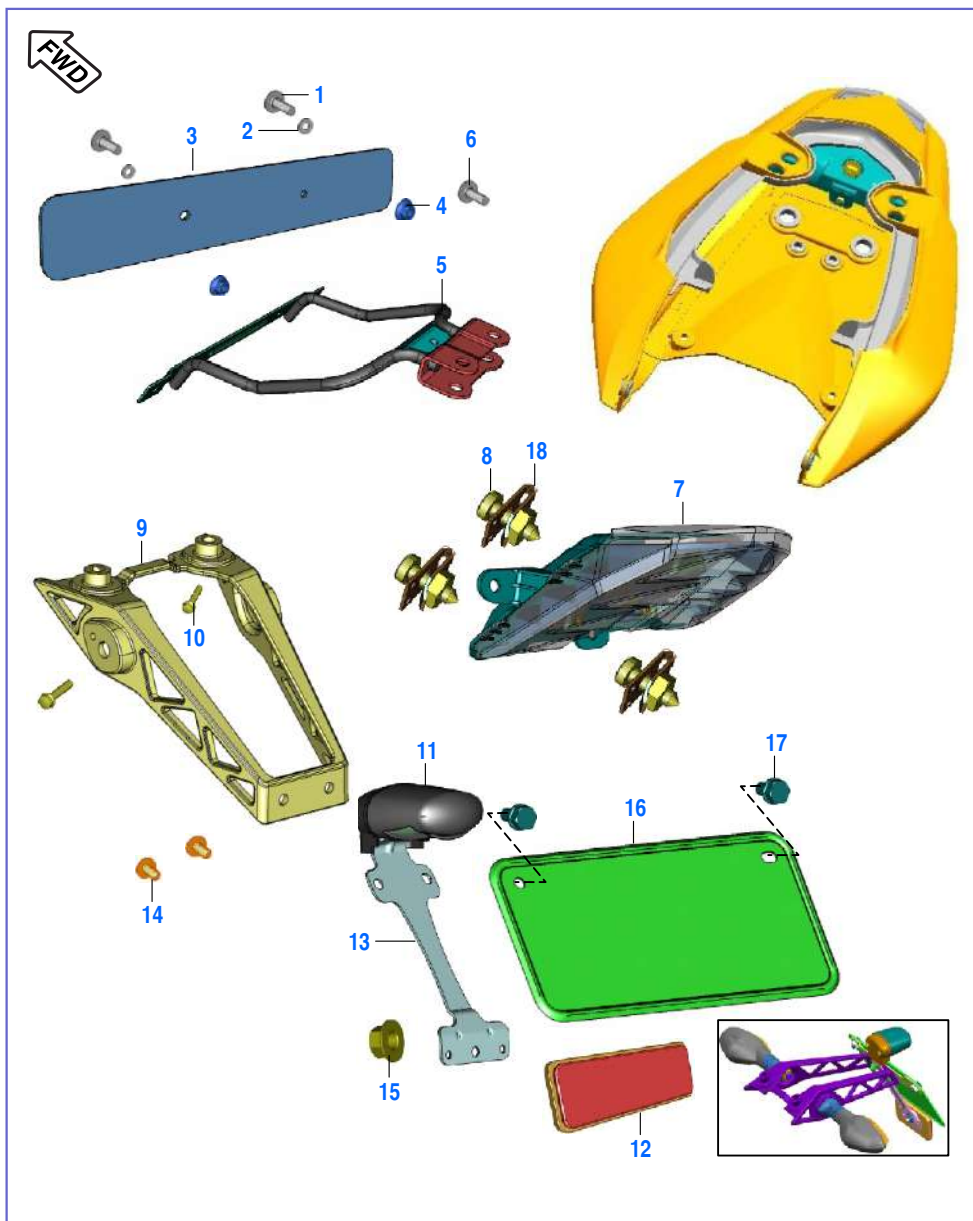


No.	Part No.	Description	Qty.	Remarks
1	LB U000 09	Screw Mashroom Head	2	
2	39 2141 24	Washer None Metallic	2	
3	JU 2328 00	Front Number Plate	1	
4	LC A000 08	Flange Nut	2	
5	KA CB08 25	Bolt Socket	2	
6	JZ 1812 99	Bracket Number Plate Mtg	1	
7	JL 4010 02	Lamp Tail Assly	1	
8	39 1907 01	Screw - Truss Cross : M5	3	
9	JL 1138 00	Bracket Rear Blinker Mtg	1	
10	39 1681 04	Bolt M-6	2	
11	JD 4010 07	Rear Number Plate Lamp	1	
12	DD 2010 02	Reflector - Reflex	1	
13	JL 1138 03	Bracket -Reflector Reflex Mtg	1	
14	39 0705 01	Screw - M5	2	
15	39 1972 15	Nut	1	
16	DP 1611 45	Rear Number Plate	1	
17	39 2476 04	Bolt - Hexagon Head With Flange:M6	2	
18	DJ 1612 29	Nut Clip	3	
19	PA 4022 04	Band (Length 110Mm)	2	N.I.

Electrical Equipments

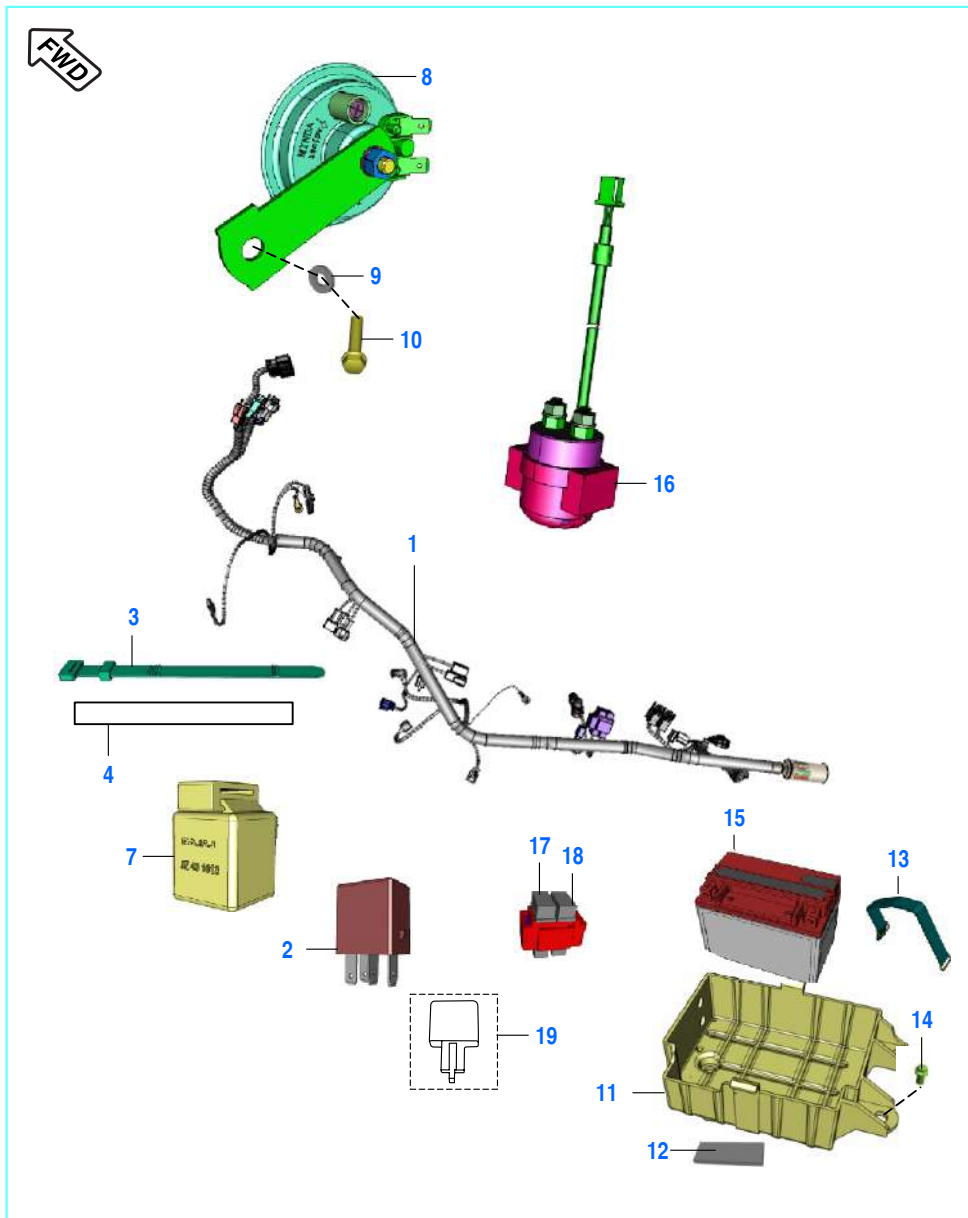

No.	Part No.	Description	Qty.	Remarks
1	JL 4022 03	Harness Wiring	1	
2	JL 4030 00	Relay Inter lock	1	
3	30 1910 48	Band	5	
4	30 2010 64	Band	3	
5	JL 4022 01	Cable Assy Relay To Motor	1	N.I.
6	JL 4022 02	Cable Earth	1	N.I.
7	JZ 4010 13	Headlamp Control Unit (Ve Model)	1	
8	JL 4016 00	Horn Lh	1	
9	39 1507 11	Washer - Plain	1	
10	39 2205 04	Hex Head Bolt - Flanged M8	1	
11	JL 1812 18	Battery Case	1	
12	JL 4018 03	Foam Bottom Battery 6 & 8Ah	11	
13	JL 4018 01	Battery Band	1	
14	39 1944 04	Bolt - Flanged	4	
15	JU 4018 03	12V 8Ah Vrla Battery W/o acid Bottle	1	
15a	JU 4018 02	Acid Bottle	1	
16	JN 3516 04	Starter Relay- With Grommet	1	
17	JL 4022 08	Fuse - 20A (Blade Type)	2	N.I.
18	AP 2010 25	Fuse 15A (Blade Type)	2	N.I.
19	DS 2010 25	Flasher - D. C. :- Solid State	1	


Tool Kit

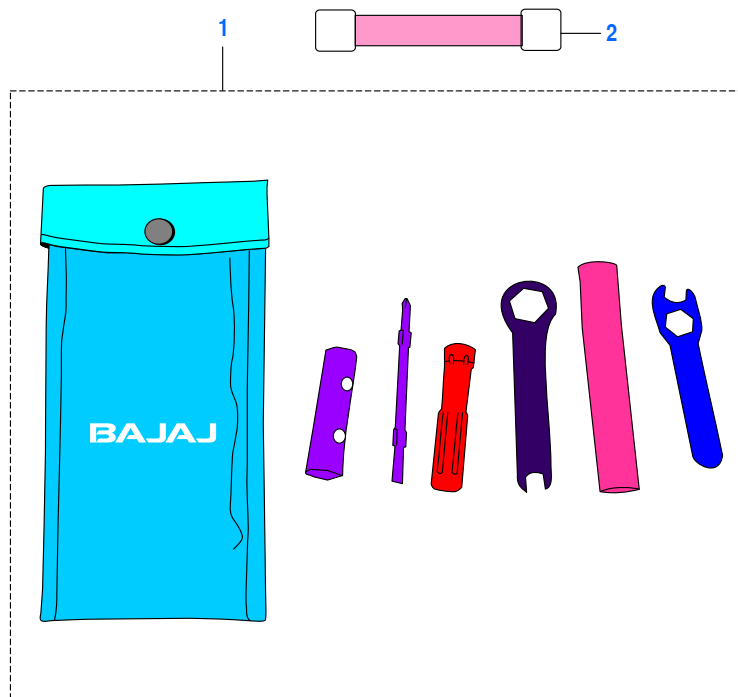

No.	Part No.	Description	Qty.	Remarks
1	DJ 2210 19	Tool Kit	1	
2	DK 2210 24	Band Tool Kit	2	



Accessories / Grab Handle

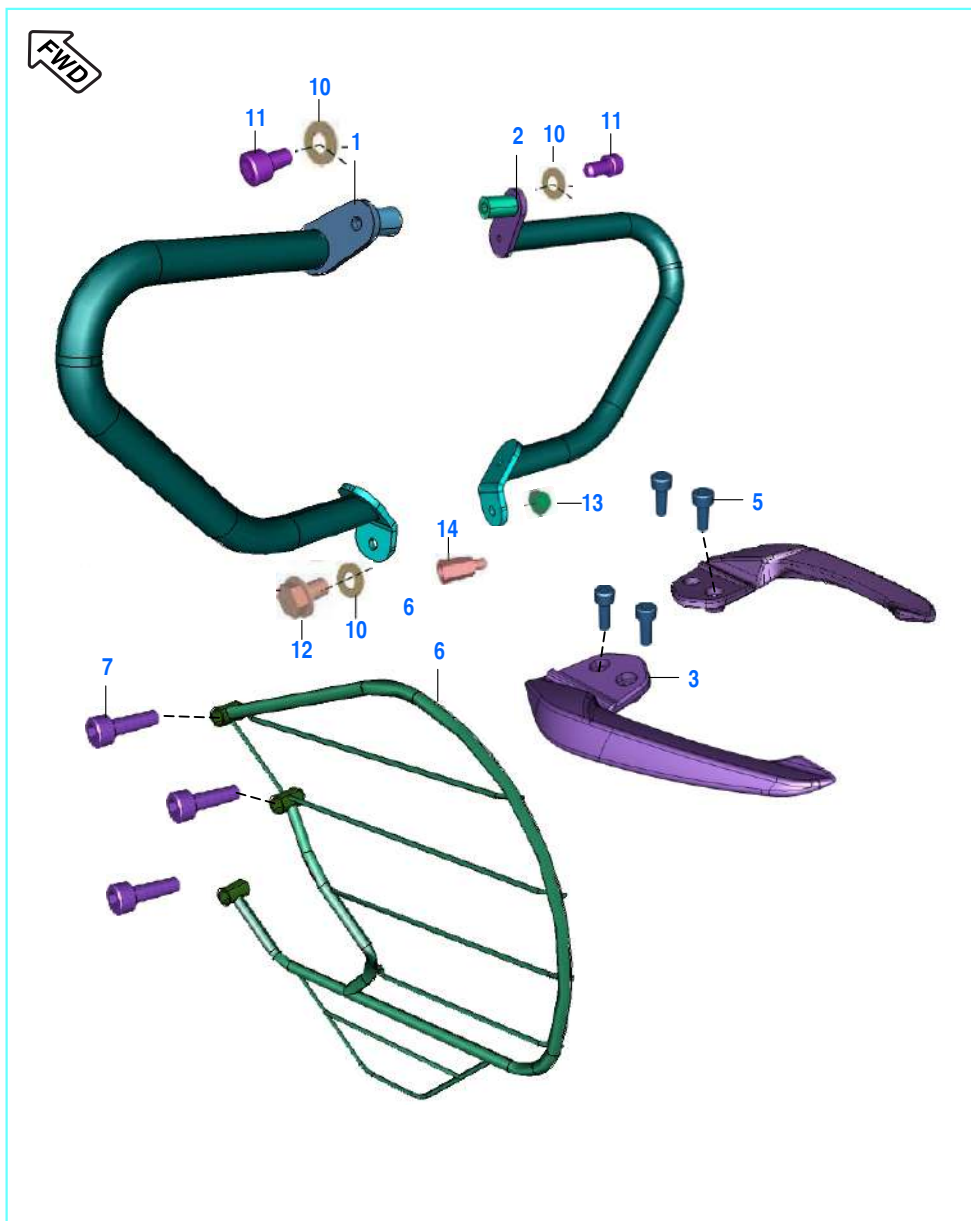

No.	Part No.	Description	Qty.	Remarks
1	JL 2312 01	Guard Leg LH	1	
2	JL 2312 03	Guard Leg Guard Rh	1	
2A	LA C000 29	Bolt Socket Head	1	
3	JL 2314 04	Grab Handle Assy Lh	1	
4	JL 2314 05	Grab Handle Assy Rh	1	
5	LA C000 17	Bolt Socket M8 X 1.25	4	
6	JL 2312 02	Guard Saree	1	
7	KA Cb06 22	Bolt Socket L-22	3	
8	JL 2316 00	Mirror Assy LH	1	
9	JL 2316 01	Mirror Assy RH	1	
10	KD BE06 13	Washer	4	
11	KA CA06 35	Bolt Socket	2	
12	LA D000 40	Bolt Flanged M6-6L	1	
13	JU 2312 07	Nut Nylock M8 x 1.25	1	
14	JU 2312 05	Nut Leg Guard Mounting	1	

Kit List



Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
1.	36JL0005	Kit Primary Drive+driven-P200	JG551216 JU551405	Gear Primary Drive 22T Housing Clutch Assy Comp	1 1
2.	36JL0009	Kit Chain Sprocket-P200	DV101048 JL141000 JL131228	Sprocket Output (14T) Chain O Ring Type Sprocket 39T O Ring Chain	1 1 1
3.	36JL0011	Kit Valve Repaire-P200	39201719 JF511215 JF511217 JF511214 DG101029	Seal - Oil Seat Valve Spring Valve Spring Retainer Valve Spring Collet	1 1 1 1 2
4.	36JL0012	Kit Tank Damper-P200	JL171028 JL171029 JL171030 JL171031 JL171032 JL171038	Damper Tank Cover Fr LH Damper Tank Cover Fr RH Damper Tank Cover Center LH Damper Tank Cover Center RH Damper Tank Cover Rear Beading Tank LH	1 1 1 1 1 1
5.	36JL0013	Kit Seat Damper-P200	JL191007 DK211007	Damper For Seat Damper Seat Front	6 1
6.	36JL0014	Kit Engine Gasket-P200	JL541207 JL541208 JL521002 JL511022 JG541041 CS101128 JL511001 JG591070	Gasket Clutch Cover Gasket Magneto Cover Gasket Cylinder Block Gasket Cylinder Head Gasket Crankcase Gasket Gasket Head Cover(rubber) Gasket Exhaust	1 1 1 1 1 1 1 1
7.	36JL0003	Kit Assly C'case LH-P200	JL541009 JC101077 JG541021 JG541015 39256220 JG541020	Crankcase LH Black Plug Taper Oil Nozzle Needle Bearing HK 1514 RS Bearing - Needle Roller Jet Oil Crankcase RH	1 2 1 1 1 1

Kit List



Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
8.	36JL0004	Assly C' Case RH-P200	JL541010 BA102003 39256220 JL541008	Crankcase RH Black Plug - Oil Hole Bearing - Needle Roller Pipe Breather Crankcase	1 3 1 1
9.	36JL0007	Block & Piston-P200	JL521200 JL521004	Piston Assly Compl Cylinder Block With Pipe Breather	1 1
10.	36JL0010	Assly Cyl Head-P200	JL511019 39128321 JG511046	Cylinder Head Ring - O Stud (M8*1.25)	1 1 2
11.	36JL0001	Chain Guide-P200	JL531004 JL531005	Guide Chain (Slack Side) Guide Chain (Tight Side)	1 1
12.	36JL0002	Asly Cl Cover-P200	JL541206 JC101077 JL541218 JG541021 39199020	Clutch Cover P2011 Plug Taper Jet Oil Cover Clutch Oil Nozzle Bearing - Needle	1 1 1 2 1
13.	36JU0001	Piston Ring-P200	JU521206 JU521207 JU521208	Ring Piston Top Ring Piston Second Ring Piston Oil	1 1 1
14.	36JU0002	Friction Plate-P200	JG551448 JG551455	Friction Disk A Disc C-Clutch Friction	5 1
15.	36JL0015	Pillion Hardware-P200	JD113019 30141031 39104011 39078408	Pin Foot Step Ring - O Washer - Plain Pin - Split	1 1 1 1
16.	36JL0016	S Cowl Grommet-P200	JL181219 JL181220 DL161015	Grommet -1 Seat Cowl Grommet -2 Seat Cowl Grommet	2 2 2

Kit List



Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
17.	36JL0017	Wind Shield MtG-P200	JG181236 JG181235 JL181247 JL171057	Well Nut - M5 X 16 L Washer Special Grommet Wind Screen Mounting Damper -Tank Sidecover	2 2 2 2
18.	36JL0019	Jet P200	-- ---- -- -- ---- -- -- ---- -- -- ---- -- DK121063	Jet Needle Needle Jet Je Holder Main Jet Pilot Jet	1 1 1 1 1
19.	36JL0020	VC Screw P200	-- ---- -- DH121130 DH121086 DH121087 DH121088	Screw Adjuster VC O- Ring Screw VC Spring Screw VC Plain Washer O- Ring Screw VC	1 1 1 1 1
20.	36JL0021	Idling Screw P200	-- ---- -- DH121163 DH121077	Screw Idling Adjustment Plain Washer Spring	1 1 1
21.	36JL0022	Piston Valve P200	-- ---- -- DK121055 DK121054	Vacuum Piston Compl. Diaphragm Spring	1 1 1
22.	36JL0023	Gasket / 'O' ring P200	DK121058 DH121118 DH121088 DH121130	O-Ring / Gasket Float Chamber O-Ring - Drain Screw O-Ring - VC Screw O-Ring - VC Screw	1 1 1 1
23.	36JL0024	Jet Needle Hardware P200	DD121056 DD121050 DD121052 Dd121054	Holder For Jet Needle Spring-Jet Needle Washer-Jet Needle E-Clip	1 1 1 1

Kit List



Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
24.	36JL0031	Kit Tank Mtg Hardware	JL171070 JL171071 39023911 LAC00034	Tank Cover Grommet Tank Coover Mtg Sleeve Washer - Plain Bolt M6 X 20	4 4 4 2
25	36JL0021	Kit Idling Screw	-- ---- -- DH121163 DH121077	Screw Idling Adjustment Plain Washer Spring	1 1 1



Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
28121008	5	26	36JU0001	2	10
30101195	3	32	39019811	15	70
30191038	14	70	39019811	11	96
30191048	3	102	39023911	17	56
30201064	4	102	39023911	19	88
31101173	7	12	39023911	27	88
31161078	11	88	39024211	9	56
31201079	5	72	39029115	3	90
36Dh1902	4	64	39032615	11	56
36JG0011	7	50	39042215	11	58
36JL0001	15	8	39045411	11	52
36JL0002	1	30	39055302	12	52
36JL0003	1	22	39070501	14	100
36JL0004	2	20	39074601	21	20
36JL0005	3	34	39080808	6	18
36JL0007	1	10	39080808	16	70
36JL0008	6	34	39084001	13	62
36JL0009	2	68	39084914	15	42
36JL0010	4	4	39090012	12	62
36JL0011	10	6	39098308	21	86
36JI0012	5	86	39099906	6	26
36JL0013	2	46	39099906	11	30
36JL0017	20	96	39099906	4	32
36JL0019	5	36	39104119	10	30
36JL0020	6	36	39104319	8	22
36JL0021	7	36	39104619	15	30
36JL0022	8	36	39105411	22	86
36JL0023	10	36	39106204	9	48
36JL0024	9	36	39107601	20	88
36JL0025	1	58	39118011	3	74
36JL0031	31	88	39119704	18	88

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
39119704	26	88	39194604	5	58
39122515	5	98	39194604	18	86
39128321	9	4	39195104	3	48
39150711	9	102	39195404	18	54
39166511	15	24	39197215	15	100
39167204	5	84	39199020	2	30
39167304	10	4	39200511	18	20
39168104	10	100	39201719	1	6
39176904	2	72	39203804	6	56
39177304	6	22	39203804	17	68
39177602	25	88	39206004	13	58
39177802	7	88	39206004	3	88
39178001	16	36	39213217	5	10
39178101	13	88	39214124	7	84
39178101	14	96	39214124	9	88
39179104	3	94	39214124	13	96
39190204	9	18	39214124	2	100
39190701	8	88	39215811	2	14
39190701	8	100	39216511	15	12
39191304	11	46	39216511	8	42
39193120	6	12	39216611	13	14
39193120	3	20	39218106	3	10
39194104	4	58	39220011	10	12
39194304	8	56	39220011	12	34
39194304	17A	88	39220307	5	12
39194304	10	96	39220404	14	28
39194404	23	28	39220504	10	102
39194404	22	44	39224120	3	62
39194404	5	50	39224120	3	68
39194404	14	102	39224220	4	68
39194604	7	56	39238104	3	86

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
39242001	10	56	AP201025	18	102
39242704	10	74	BA122003	21	86
39246904	6	58	BF551037	6	14
39247504	5	54	BF551037	15	14
39247504	6	72	BF601207	12	4
39247604	17	100	CB121042	12	36
39248415	7	86	CS101128	12	8
39249211	12	40	DD111011	18	44
39256220	20	20	DD111012	11	44
39256220	13	22	DD141022	17	86
39260120	11	20	DD191015	14	74
39260220	8	20	DD201002	12	100
39260607	3	16	DE151046	10	70
39260607	16	24	DE151047	3	66
39260801	15	4	DE151047	9	70
39262921	8	4	DE191010	10	64
39266921	10	8	DE191010	8	70
39272315	6	48	DE191011	11	64
39275404	11	40	DE191028	7	64
39275821	6A	86	DE191029	6	64
59020001	14	88	DE191033	15	64
59040014	17	88	DF161102	12	58
59100002	16	42	DG101029	9	6
59200006	11	22	DG101418	8	30
59200028	14	20	DG101456	10	22
59200036	2	24	DG121002	12	38
59210019	11	62	DG151005	4	62
AK201012	17	102	DG161124	2	58
AN111015	13	44	DG161144	9	54
AP101236	3	8	DG171015	17	52
AP121064	15	38	DG171016	4	52

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DG171017	19	52	DJ181065	22	28
DG171018	5	52	DJ181085	9	84
DG171019	6	52	DJ191023	14	64
DG181008	8	74	DJ191029	2	64
DG181008	25	78	DJ191030	3	64
DH101048	9	24	DJ191031	5	64
DH101163	11	42	DJ191056	8	64
DH101199	6	44	DJ191057	1	64
DH101235	12	14	DJ191082	11	74
DH101381	3	22	DJ191083	12	74
DH101382	14	42	DJ201109	9	64
DH101383	9	20	DJ201246	13	74
DH101383	17	30	DJ221019	1	104
DH101392	14	8	DK101225	14	4
DH101396	9	42	DK101284	5	44
DH101509	3	18	DK101352	25	14
DH101607	5	40	DK101386	10	24
DH101648	13	34	DK101595	10	42
DH111013	16	44	DK101596	12	42
DH111016	17	44	DK101605	13	42
DH121064	13	36	DK111011	20	44
DH161146	16	58	DK111028	8	44
DH191006	9	72	DK121045	22	36
DH191013	4	72	DK121047	15	36
DH191017	17	74	DK151012	9	68
DJ151074	7	66	DK151013	8	68
DJ151075	8	66	DK151015	14	68
DJ161069	3	56	DK151026	2	60
DJ161229	4	88	DK151031	2	70
DJ161229	18	100	DK151036	1	68
DJ181065	2	28	DK151063	7	70

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DK151069	4	70	DS101154	8	24
DK151073	17	70	DS101215	9	30
DK151074	18	70	DS121126	13	38
DK151081	20	68	DS141012	12	88
DK151082	21	68	DS161125	2	56
DK151083	1	70	DS161287	6	46
DK151085	13	70	DS201025	19	102
DK151088	11	70	DU101225	7	8
DK151089	12	70	DV101048	29	14
DK181006	4	76	EC561023	2	16
DK181007	5	76	FD211006	5	46
DK181009	14	76	JA113403	5	48
DK181010	14	76	JA541048	15	22
DK181012	14	76	JA541233	2	32
DK181013	14	76	JA581314	11	36
DK181015	11	76	JB181223	5	90
DK181017	9	76	JC101034	9	8
DK181018	7	76	JC151019	3	92
DK181019	8	76	JC151020	8	62
DK181020	10	76	JC181022	21	76
DK181021	6	76	JC181023	20	76
DK181022	16	76	JC201046	10	62
DK181023	17	76	JD131811	6	62
DK181025	23	78	JD191006	8	46
DK181028	24	78	JD351207	12	44
DK181073	15	76	JD351800	17	36
DK211007	3	46	JD401007	11	100
DK221024	2	104	JD561416	5	18
DL161015	21	88	JF511207	7	6
DP101191	23	20	JF511225	8	12
DP161145	16	100	JF511228	1	8

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JF531007	2	12	JG541041	16	22
JF531014	3	12	JG541044	5	22
JG122028	2	94	JG541045	22	20
JG131001	2	62	JG541046	4	20
JG131821	5	70	JG541059	10	20
JG171029	20	28	JG541063	4	22
JG181235	3	96	JG541068	1	4
JG181236	2	96	JG541230	7	30
JG181238	2	90	JG541231	16	30
JG191008	4	46	JG551000	22	14
JG232601	9	46	JG551010	26	14
JG232606	10	46	JG551013	3	14
JG351209	9	44	JG551015	5	30
JG351400	13	4	JG551017	4	30
JG511021	3	2	JG551019	27	14
JG511022	4	2	JG551021	19	14
JG511046	5	4	JG551021	24	14
JG511270	11	8	JG551022	10	14
JG531031	9	12	JG551022	18	14
JG531039	13	12	JG551025	11	14
JG531039	5	42	JG551027	1	14
JG531040	14	12	JG551210	5	14
JG531040	6	42	JG551213	4	14
JG531041	12	12	JG551214	7	14
JG531041	4	42	JG551215	20	14
JG531207	7	24	JG551220	8	14
JG531211	3	24	JG551222	16	14
JG531212	4	24	JG551223	17	14
JG531215	5	24	JG551224	21	14
JG531220	2	8	JG551225	23	14
JG541015	12	22	JG551227	9	14

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JG551228	14	14	JG591053	13	40
JG551423	14	34	JG591070	10	40
JG551427	2	34	JG591088	15	40
JG551428	4	34	JG591096	7	40
JG551443	8	34	JG591097	8	40
JG551447	7	34	JG601005	6	24
JG551449	5	34	JG601007	6	20
JG551451	11	34	JG601011	12	24
JG561009	17	20	JG601012	13	24
JG561010	4	16	JG601013	11	24
JG561011	1	16	JG601209	8	28
JG561012	7	16	JG601210	7	28
JG561013	8	16	JG601211	18	28
JG561016	9	16	JG601221	13	28
JG561200	10	18	JG601229	17	28
JG561204	15	20	JG601400	16	28
JG561205	16	20	JG621412	3	42
JG561215	11	16	JG621413	2	42
JG561215	11	18	JG621417	7	42
JG561217	13	18	JL111054	4	48
JG561218	12	18	JL111078	6	50
JG561222	5	16	JL111081	3	50
JG561225	10	16	JL111082	4	50
JG561226	19	20	JL111092	7	48
JG571014	24	20	JL111093	8	48
JG571016	25	20	JL111103	2	50
JG571018	3	26	JL111106	1	50
JG571022	2	26	JL111109	18	52
JG571024	14	22	JL113000	8	54
JG591038	3	40	JL113002	1	54
JG591039	6	40	JL113007	2	54

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JL113012	3	54	JL131004	1	62
JL113013	12	54	JL131005	5	62
JL113014	14	54	JL131006	1	60
JL113015	16	54	JL131203	13	68
JL113016	15	54	JL131209	4	60
JL113026	13	54	JL131211	15	68
JL113027	17	54	JL131216	5	68
JL113033	4	54	JL131218	16	68
JL113033	7	72	JL131219	5	60
JL113034	7	54	JL131220	6	70
JL113201	9	58	JL131225	7	68
JL113202	17	58	JL131228	11	68
JL113207	7	58	JL131232	6	68
JL113209	15	58	JL131802	12	64
JL113210	3	58	JL131803	3	70
JL113212	8	58	JL131804	1	66
JL113400	1	48	JL131805	6	66
JL113401	2	48	JL131806	2	66
JL113800	9	100	JL131807	4	66
JL113803	13	100	JL131808	5	66
JL122001	8	52	JL131811	12	56
JL122002	7	52	JL131812	13	56
JL122003	10	52	JL151002	2	76
JL122004	13	52	JL151003	3	76
JL122006	1	52	JL151004	13	76
JL122008	14	52	JL151012	12	76
JL122009	9	52	JL151021	1	74
JL122014	3	52	JL151023	18	74
JL131000	7	62	JL151024	1	76
JL131001	14	62	JL151026	2	74
JL131004	3	60	JL151028	5	74

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JL151030	6	74	JL171600	2	86
JL151032	18	76	JL171800	13	86
JL151034	7	74	JL171801	16	86
JL151035	9	74	JL171802	10	86
JL151036	26	78	JL171803	15	86
JL151037	22	78	JL181006	5	94
JL151038	2A	74	JL181008	1	96
JL161001	1	72	JL181203	6	96
JL161003	15	74	JL181205	1	94
JL161006	8	72	JL181209	15	56
JL161008	16	74	JL181214	23	88
JL161010	3	72	JL181215	16	88
JL161200	2	92	JL181216	15	88
JL161201	1	92	JL181218	11	102
JL171018	20	86	JL181219	22	88
JL171019	19	86	JL181221	16	56
JL171020	23	86	JL181224	15	52
JL171022	2A	88	JL181225	16	52
JL171023	2	88	JL181226	8	84
JL171024	5	88	JL181229	1	84
JL171035	12	86	JL181232	6	84
JL171036	11	86	JL181235	19	76
JL171037	8	86	JL181235	18	96
JL171044	1	86	JL181236	15	96
JL171048	6	88	JL181237	17	96
JL171049	4	86	JL181241	4	90
JL171057	1	88	JL181247	5	96
JL171060	14	86	JL181249	16	96
JL171063	9	86	JL181256	3	28
JL171070	28	88	JL181402	4	56
JL171071	29	88	JL181405	1	56

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JL181409	4	94	JL401801	13	102
JL181411	5	56	JL401803	12	102
JL191001	1	46	JL402001	21	44
JL191004	7	46	JL402201	5	102
JL231201	1	106	JL402202	6	102
JL231202	6	106	JL402203	1	102
JL231203	2	106	JL402207	16	102
JL231404	3	106	JL402400	1	90
JL231405	4	106	JL402403	8	90
JL231600	8	106	JL402600	6	86
JL231601	9	106	JL403000	2	102
JL351000	1	44	JL403600	14	58
JL351002	2	44	JL501003	1	20
JL351003	3	44	JL511001	2	2
JL351005	4	44	JL511002	1	2
JL351200	10	44	JL511006	4	6
JL351201	14	44	JL511007	5	6
JL351202	15	44	JL511009	3	4
JL351600	1	42	JL511010	2	6
JL351800	7	22	JL511011	3	6
JL401002	7	100	JL511016	3	36
JL401003	3	98	JL511022	6	4
JL401004	4	98	JL511029	11	4
JL401005	1	98	JL511205	6	6
JL401006	2	98	JL511219	7	4
JL401012	9	96	JL511220	6	8
JL401400	20	74	JL511221	5	8
JL401401	21	74	JL511222	8	8
JL401402	10	58	JL521002	4	10
JL401403	19	74	JL541201	1	32
JL401600	8	102	JL541203	7	32

Parts Index



Part Number	Figure No.	Page No.
JL541207	12	30
JL541208	5	32
JL541210	13	30
JL541221	26	20
JL561400	1	18
JL561401	1A	18
JL561404	2	18
JL561405	4	18
JL561407	7	18
JL561408	8	18
JL561409	14	18
JL561410	15	18
JL581000	1	38
JL581004	16	38
JL581007	5	38
JL581009	8	38
JL581010	14	38
JL581015	11	38
JL581016	10	38
JL581018	7	38
JL581022	18	38
JL581023	2	38
JL581024	6	38
JL581025	4	38
JL581027	4	36
JL581201	1	36
JL581204	18	36
JL581205	20	36
JL581206	21	36
JL581300	2	36
JL591048	2	40

Part Number	Figure No.	Page No.
JL591052	1	40
JL591075	9	40
JL591086	16	40
JL591144	4	40
JL601000	6	28
JL601200	15	28
JL601204	9	28
JL601208	12	28
JL601209	21	28
JL601210	1	28
JL601212	11	28
JL601213	24	28
JL601214	25	28
JL601215	19	28
JL601219	10	28
JL71012V	6	80
JL71014K	6	80
JL71014L	6	80
JL71014M	6	80
JL73012V	2	80
JL73014K	2	80
JL73014L	2	80
JL73014M	2	80
JL73022V	3	80
JL73024K	3	80
JL73024L	3	80
JL73024M	3	80
JL74012V	1	80
JL74014K	1	80
JL74014L	1	80
JL74014M	1	80

Parts Index



Part Number	Figure No.	Page No.
JL76012V	5	80
JL76014K	5	80
JL76014L	5	80
JL76014M	5	80
JL76022V	4	80
JL76024K	4	80
JL76024L	4	80
JL76024M	4	80
JL77012V	9	82
JL77014K	9	82
JL77014L	9	82
JL77014M	9	82
JL77022V	8	82
JL77024K	8	82
JL77024L	8	82
JL77024M	8	82
JL78012V	7	82
JL78014K	7	82
JL78014L	7	82
JL78014M	7	82
JN351604	20	102
JU231205	14	106
JU231207	13	106
JU232800	3	100
JU401802	15a	102
JU401803	15	102
JU531021	4	12
JU531027	1	12
JU531213	7	20
JU531213	1	24
JU541005	13	20

Part Number	Figure No.	Page No.
JU551401	6	30
JU551402	10	34
JU551404	1	34
JU551406	9	34
JU571000	1	26
JW171015	4	28
JW181236	3	84
JZ181299	6	100
JZ401013	7	102
KACA0635	11	106
KACA0820	6	54
KACa0830	14	56
KACB0514	6	90
KACb0622	7	106
KACB0825	5	100
KACb0835	19	96
KADA0616	5	28
KADP0516	27	20
KADQ0620	13	8
KADQ0620	14	24
KADQ0625	14	40
KADQ0625	1A	42
KADQ0630	14	30
KADQ0630	6	32
KADQ0645	8	32
KAEM0622	9	38
KBQA3506	17	38
KBUA0612	4	84
KBUB0410	6	94
KBUB0512	2	84
KBUC0516	12	96

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
KDBE0613	10	106	LDA00007	7	96
KEAA1110	4	26	LDA00008	2	4
KEBA3715	9	22	LDA00013	10	54
LAA00019	10	68	LDB00007	7	90
LAC00016	11	54	LDB00020	3	30
LAC00017	5	106	LDB00029	15	62
LAC00019	2	52	LDB00029	18	68
LAC00020	4	74	LEB00001	4	8
LAC00022	10	88	LEB00001	28	20
LAC00024	6	16			
LAC00029	2A	106			
LAC00034	30	88			
LAD00037	13	64			
LAD00040	12	106			
LAD00077	5	20			
LAE00010	7	44			
LAE00014	2	22			
LAE00016	8	6			
LAE00017	28	14			
LAE00018	7	26			
LBB00004	3	38			
LBB00006	12	20			
LBR00002	8	96			
LBS00001	4	96			
LBU00009	1	100			
LCA00008	4	100			
LCA00009	12	68			
LCD00001	11	12			
LCJ00002	16	62			
LCJ00002	19	68			
LDA00007	24	88			